



Manuals.plus /

› Panasonic /

› Panasonic Cordless Phone KX-TG3711BX User Manual

## Panasonic KX-TG3711BX

# Panasonic Cordless Phone KX-TG3711BX User Manual

Your guide to setting up, operating, and maintaining your Panasonic Cordless Phone.

---

## 1. PRODUCT OVERVIEW

The Panasonic Cordless Phone KX-TG3711BX is designed for clear communication and ease of use. This single-handset system features a 1.8-inch amber backlit LCD, caller ID, and call blocking capabilities, ensuring a reliable and convenient telephone experience.




**Figure 1.1: Panasonic KX-TG3711BX Cordless Phone System.** This image displays the Panasonic KX-TG3711BX cordless phone, featuring a black handset with an amber backlit LCD screen, placed securely on its matching black base unit. The base unit includes a 'LOCATOR' button.

### 1.1. Key Features

- Single Handset System
- 1.8-inch Amber Backlit LCD
- Caller ID and Call Block Functionality

- Clear Sound Technology
- Long Battery Life
- Power Back-Up Operation during power failures
- Night Mode for undisturbed sleep
- Multi-language display support (English, Arabic, Farsi)

## 1.8-inch Amber Backlit LCD on Handset

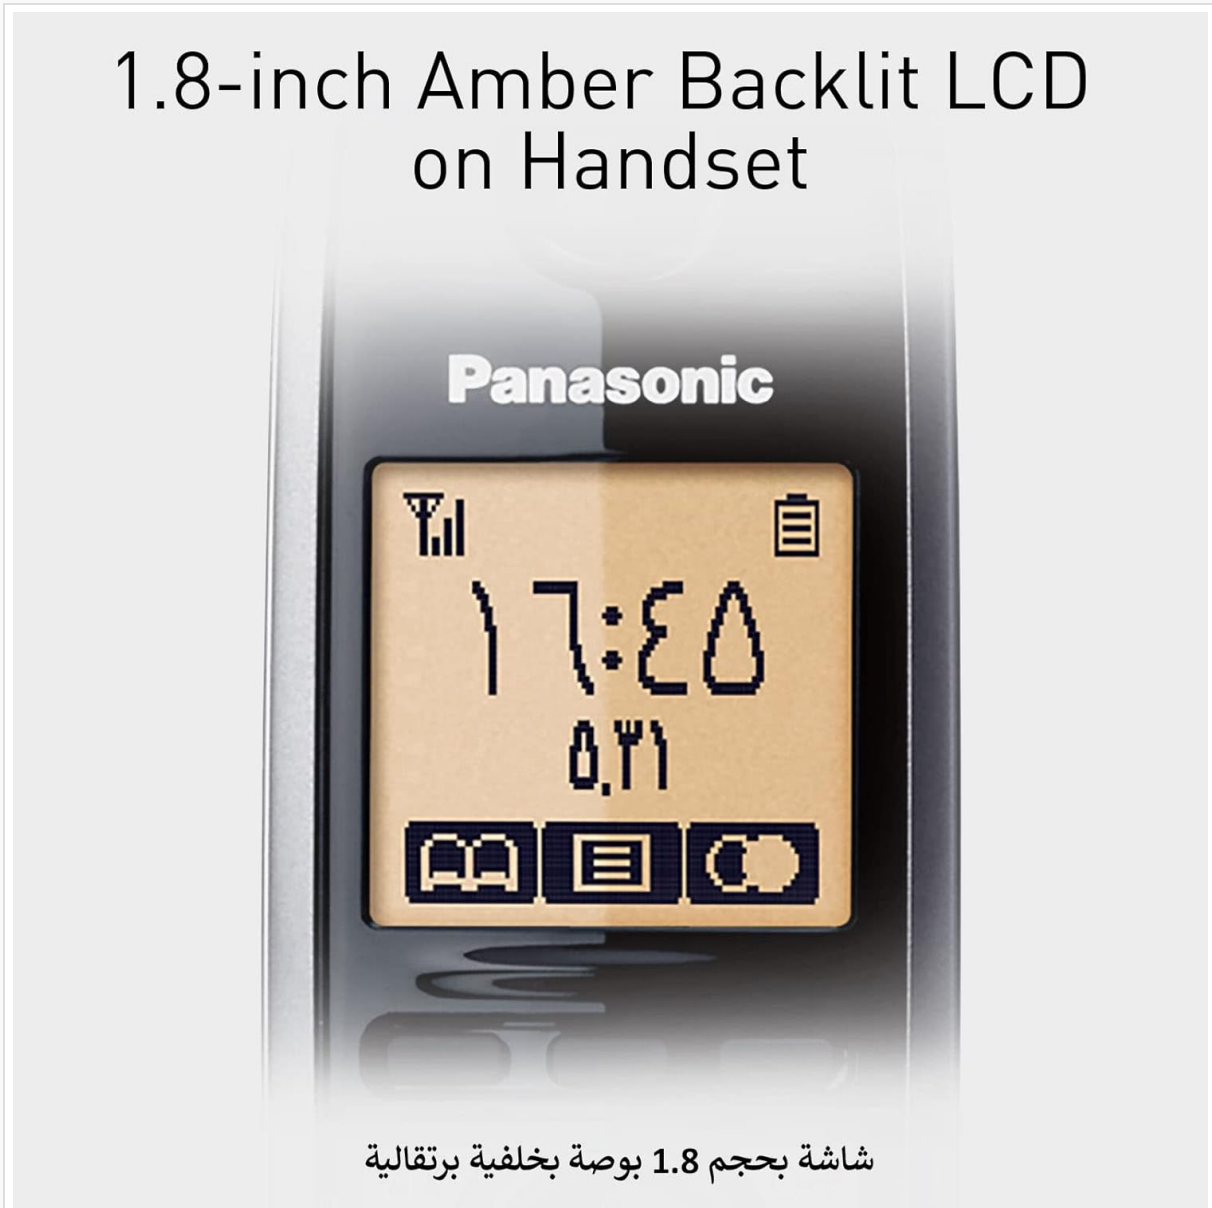

**Figure 1.2: Handset LCD Display.** A detailed view of the phone's 1.8-inch amber backlit LCD, showing the time, battery indicator, and signal strength. This screen provides clear visibility for calls and menu navigation.

## 2. SETUP GUIDE

### 2.1. Package Contents

Before you begin, ensure all components are present:

- Handset
- Base Unit
- AC Adapter for Base Unit
- Telephone Line Cord
- Rechargeable Battery (for handset)

## 2.2. Initial Setup

### 1. Connect the Base Unit:

- Connect the AC adapter to the base unit and plug it into a power outlet.
- Connect the telephone line cord to the base unit and then to your telephone wall jack.

### 2. Install Handset Battery:

- Open the battery compartment cover on the back of the handset.
- Insert the rechargeable battery, ensuring correct polarity.
- Close the battery compartment cover.

### 3. Charge the Handset:

- Place the handset on the base unit. The charging indicator on the handset should illuminate.
- Allow the handset to charge for at least 7 hours before initial use to ensure full battery capacity.

### 4. Set Language:

- Once powered on, the handset may prompt you to select a display language. Follow the on-screen instructions.
- You can choose between English, Arabic, and Farsi.

## Arabic/Farsi Available      دعم اللغة العربية والفارسية

The display language can be easily switched from English to Farsi or Arabic, so the user can operate the unit in the language that is easiest to read. No more stress from language problems.



English

Arabic

Farsi

\*All images on the LCD display are vary from the actual products.

**Figure 2.1: Language Selection Screen.** Three screen captures illustrate the language selection feature, allowing users to switch the display language between English, Arabic, and Farsi for easier operation. All images on the LCD display are illustrative and may vary from actual products.

## 3. OPERATING INSTRUCTIONS

### 3.1. Making and Receiving Calls

- **To Make a Call:** Dial the number and press the **TALK** button.
- **To Receive a Call:** Press the **TALK** button when the phone rings.
- **To End a Call:** Press the **OFF** button or place the handset back on the base unit.

### 3.2. Call Block Feature

The Incoming Call Barring feature allows you to block unwanted calls from specific numbers. Numbers on your call block list will be blocked, meaning the unit will not ring and will disconnect the call if they call you. This feature requires a subscription to Caller ID service from your telephone provider.

## Incoming Call Barring\* حظر المكالمات المزعجة

### Stop unwanted junk calls

You can block annoying calls from unwanted numbers. Numbers on your call block list will be blocked (the unit emits no sound to the caller, and disconnects the call) if they call you.

\* Requires subscription to Caller ID service offered by your provider/telephone company



**Figure 3.1: Incoming Call Barring.** This diagram shows how the Incoming Call Barring feature works, preventing unwanted calls. A headset icon represents a caller, an 'X' symbol indicates a blocked call, and a person relaxing signifies undisturbed peace. This feature requires a Caller ID service subscription.

### 3.3. Night Mode

Night Mode allows you to program the handset to prevent ringing during specific periods, ensuring you are not disturbed by incoming calls while sleeping.

## Night Mode الوضع الليلي

Never disturb your sound sleep

The handset can be programmed to prevent ringing during specific periods, so the phone won't ring while you're sleeping.



**Figure 3.2: Night Mode in Operation.** This image illustrates the Night Mode feature, which allows the handset to be programmed to prevent ringing during specific periods, ensuring undisturbed sleep.

## 4. POWER MANAGEMENT

### 4.1. Battery Life

The handset is equipped with a long-life rechargeable battery. For optimal performance, ensure the handset is placed on the base unit when not in use to keep it charged.

### 4.2. Power Back-Up Operation

In the event of a power failure, the KX-TG3711BX features a Power Back-Up Operation. By placing the handset on the base unit, you can temporarily use the speakerphone function to make or receive calls, even when the main power is out.

## Power Back-Up Operation تشغيل بالطاقة الاحتياطية

There for you in a power failure

By placing the handset on the base unit, you can use the speaker phone temporarily even during a power failure.



**Figure 4.1: Power Back-Up Operation.** An illustration depicting the Power Back-Up Operation. In the event of a power failure, placing the handset on the base unit allows the user to temporarily use the speakerphone function, indicated by a flashlight illuminating the phone.

## 5. MAINTENANCE

To ensure the longevity and optimal performance of your Panasonic Cordless Phone, follow these maintenance guidelines:

- **Cleaning:** Wipe the handset and base unit with a soft, dry cloth. Avoid using abrasive cleaners, waxes, or cleaning sprays.
- **Battery Care:** Do not expose the battery to excessive heat or direct sunlight. If the phone will not be used for an extended period, remove the battery.
- **Placement:** Place the base unit in a central location away from other electronic devices that may cause interference.

## 6. TROUBLESHOOTING

If you experience issues with your phone, try the following solutions:

<b>Problem</b>	<b>Solution</b>
No dial tone.	Ensure the telephone line cord is securely connected to both the base unit and the wall jack. Check if the AC adapter is properly plugged in.
Handset not charging.	Verify the handset is correctly seated on the base unit. Check for any debris on the charging contacts. Ensure the AC adapter is connected to the base unit and power outlet.
Poor call quality or static.	Move the handset closer to the base unit. Avoid placing the base unit near other electronic devices (e.g., microwaves, Wi-Fi routers) that may cause interference.
Cannot make or receive calls.	Check if the phone line is active. Ensure the handset battery is charged. If Call Block is enabled, verify the number is not on your blocked list.

## 7. SPECIFICATIONS

<b>Feature</b>	<b>Detail</b>
Model	KX-TG3711BX
Brand	Panasonic
Colour	Black
Material	Plastic
Power Source	Battery Powered (Handset), AC Adapter (Base Unit)
Handset Display	1.8-inch Amber Backlit LCD
Visible Screen Diagonal	2 inches / 5 cm
Product Dimensions (L x W x H)	10 x 18 x 13 cm (approximate)
Handset Weight (inc. battery)	130 g (approximate)
Base Unit Weight	140 g (approximate)

