Manuals+

Q & A | Deep Search | Upload

TecTake 405851

tectake® Velvet Rocking Chair User Manual

Model: 405851

Introduction

Thank you for choosing the tectake® Velvet Rocking Chair. This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your new rocking chair. Please read these instructions carefully before use and retain them for future reference.



Image 1: The tectake® Velvet Rocking Chair, featuring a comfortable beige velvet upholstery and a sturdy black metal rocking frame.

SAFETY INSTRUCTIONS

- Ensure all parts are present and undamaged before assembly. Do not use if any parts are missing or broken.
- Assemble the chair on a soft, clean surface to prevent scratches.
- Tighten all screws and bolts securely, but do not overtighten. Periodically check and re-tighten fasteners.
- Do not stand on the chair or use it as a step stool.
- · Keep children and pets away from the assembly area.
- Maximum weight capacity: 120 kg (264 lbs). Do not exceed this limit.
- Place the chair on a level, stable surface.
- Use the provided floor protection discs to prevent damage to your flooring.

PARTS LIST

Before beginning assembly, verify that all components listed below are included in your package:

- Rocking Chair Frame (Steel)
- Seat Cushion (Velvet upholstery, removable and washable cover)
- Assembly Hardware (Screws, bolts, washers, Allen key)
- Floor Protection Discs
- Instruction Manual (This document)

SETUP AND ASSEMBLY

The tectake® Rocking Chair is designed for quick and easy assembly. Follow these steps carefully:

- 1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a soft, clean surface to avoid scratching.
- 2. **Attach Rocking Base:** Connect the steel rocking base to the main chair frame using the provided screws and bolts. Ensure the rocking rails are oriented correctly for smooth motion.
- 3. **Secure Connections:** Hand-tighten all fasteners initially. Once all connections are made, use the included Allen key to fully tighten all screws and bolts. Do not overtighten.
- 4. **Install Floor Protection:** Attach the floor protection discs to the bottom of the rocking rails. These will prevent scratches on your floor.
- 5. **Place Seat Cushion:** Position the velvet seat cushion onto the chair frame. The cushion is designed to fit snugly for optimal comfort.
- 6. **Final Check:** Before using the chair, gently rock it to ensure stability and smooth movement. Verify that all connections are secure.

For visual guidance, refer to the product images provided on the product page or the main image in this manual, which illustrates the assembled chair.

OPERATING INSTRUCTIONS

The tectake® Velvet Rocking Chair is designed for relaxation and comfort. To use your chair:

- Seating: Sit gently into the chair, ensuring your weight is evenly distributed.
- **Rocking Motion:** Lean back slightly and use your feet to initiate a gentle rocking motion. The chair's design provides a smooth and comfortable sway.
- Comfort: The generously designed backrest and super comfortable padding offer optimal support for your back, making it ideal for reading, relaxing, or simply unwinding.
- Placement: This chair is suitable for indoor use in living rooms, bedrooms, or other relaxation areas.

MAINTENANCE

Proper maintenance will extend the life and appearance of your rocking chair:

- Cushion Care: The seat cushion cover is removable and washable. Unzip the cover, remove it, and follow the care instructions on the fabric label (typically gentle machine wash or hand wash). Allow to air dry completely before reattaching.
- Frame Cleaning: Wipe the steel frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.

- **General Cleaning:** For the velvet upholstery, gently vacuum with an upholstery attachment to remove dust and debris. For spills, blot immediately with a clean, dry cloth. Do not rub.
- Fastener Check: Periodically check all screws and bolts to ensure they remain tight. Re-tighten if necessary to maintain stability.
- Avoid Direct Sunlight: Prolonged exposure to direct sunlight can cause fading of the fabric.

TROUBLESHOOTING

If you encounter any issues with your tectake® Rocking Chair, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Chair feels wobbly or unstable.	Loose fasteners. Uneven floor surface.	Check and tighten all screws and bolts. Move the chair to a level surface.
Squeaking sound during rocking.	Friction between metal parts.	Apply a small amount of silicone lubricant to the joints of the rocking mechanism.
Cushion does not sit properly.	Incorrect placement.	Ensure the cushion is aligned correctly with the chair frame.
Scratches on floor.	Floor protection discs not installed or worn.	Ensure floor protection discs are properly attached. Replace if worn.

SPECIFICATIONS

Detailed specifications for your tectake® Velvet Rocking Chair:

Overall Dimensions (W x D x H): Approximately 70 x 93 x 100 cm (27.6 x 36.6 x 39.4 inches)

Seat Cushion Dimensions (W x D x H): Approximately 40/49 x 50 x 10 cm (15.7/19.3 x 19.7 x 3.9 inches)

Seat Height: Approximately 42 cm (16.5 inches)

Backrest Height: Approximately 69 cm (27.2 inches)

Armrest Dimensions (W x D): Approximately 5 x 36 cm (2.0 x 14.2 inches)

Internal Armrest Distance: Approximately 61 cm (24 inches)

Armrest Height from Floor: Approximately 61 cm (24 inches)

Rocking Runners (Ø x L): Approximately 2.5 x 93 cm (1.0 x 36.6 inches)

Weight Capacity: 120 kg (264 lbs)

Net Weight: Approximately 11.5 kg (25.4 lbs)

Materials: Steel, Poplar wood, Polyurethane, 100% Polyester (Velvet upholstery)

Model Number: 405851

Color: Black/Beige (as per variant)

WARRANTY AND SUPPORT

For information regarding warranty coverage, returns, or technical support, please refer to the purchase documentation or contact tectake® customer service directly. Contact details can typically be found on the seller's website or your order confirmation.

Note: Specific warranty terms may vary by region and retailer.

Related Documents



TecTake 402756 Home Gym Assembly and Exercise Guide

Instruction manual for the TecTake 402756 home gym, covering assembly, safety precautions, and exercise guidance. Includes preparation tips and warm-up/cool-down routines.



 
TecTake Cabinet Assembly Instructions - Models 402483, 402938

Comprehensive assembly guide for TecTake cabinets (models 402483, 402938), featuring a detailed parts list and step-by-step instructions with textual descriptions of diagrams.



Assembly Instructions for TecTake Wardrobe (Models 402485, 402940)

Comprehensive assembly instructions for TecTake wardrobe models 402485 and 402940, detailing parts list and step-by-step assembly guidance in multiple languages.



Assembly Instructions for TecTake Tent (Models 404816-404820)

Step-by-step assembly guide for TecTake tents, including parts list and assembly diagrams. Covers models 404816, 404817, 404818, 404819, and 404820.