

[Manuals.plus](#) /

› [ROVSUN](#) /

› ROVSUN 25LBS Portable Washing Machine User Manual

ROVSUN portable-clothes-washing-machines

ROVSUN 25LBS Portable Washing Machine User Manual

Model: portable-clothes-washing-machines

Brand: ROVSUN

1. INTRODUCTION

Thank you for choosing the ROVSUN 25LBS Portable Washing Machine. This full-automatic electric laundry machine is designed to provide efficient and convenient laundry solutions for compact living spaces such as apartments, dorms, and homes. With its 2-in-1 wash and spin dry functions, multiple washing modes, and user-friendly features, it simplifies your laundry routine. Please read this manual thoroughly before operation to ensure proper use, maintenance, and safety.





Image: Front view of the ROVSUN 25LBS Portable Washing Machine.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury when using your appliance, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they give off vapors that could ignite or explode.
- Do not add gasoline, dry-cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapors that could ignite or explode.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Before the appliance is removed from service or discarded, remove the door to the washing compartment.
- Do not reach into the appliance if the tub or agitator is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the

user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.

- Always disconnect the appliance from the power supply before cleaning, servicing, or performing any maintenance.
- Ensure the power cord is not damaged and is properly grounded.

3. PACKAGE CONTENTS

Please check the package contents upon arrival to ensure all components are present and undamaged:

- ROVSUN 25LBS Portable Washing Machine Unit
- Water Inlet Hose
- Drain Hose
- User Manual

4. SETUP

4.1 Unpacking

Carefully remove the washing machine from its packaging. Inspect the unit for any signs of damage during transit. If any damage is found, do not operate the machine and contact customer support immediately.

4.2 Placement

Place the washing machine on a firm, level surface to prevent vibration and noise during operation. Ensure there is adequate space around the unit for ventilation and access to water and drain connections. The machine's dimensions are approximately 22.5"D x 22.3"W x 36"H.

25 LBS

Length: 22.3 inch

Depth: 22.5 inch

Height: 36 inch



Image: Diagram showing the dimensions of the washing machine.

4.3 Water Connection

Connect the water inlet hose to a cold water tap. Ensure the connection is secure to prevent leaks. The machine requires a standard 110V power supply.

4.4 Drain Hose Setup

Position the drain hose into a sink, bathtub, or a dedicated drain pipe. Ensure the hose is securely placed to prevent it from dislodging during the draining cycle, which could cause water spillage.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Overview

The washing machine features a clear control panel with touch controls for easy operation. It includes indicators for water level, time left, and various wash cycles.



Image: Detailed view of the washing machine's control panel.

5.2 Loading Clothes

Open the top lid and load your clothes into the stainless steel drum. Do not overload the machine; ensure there is enough space for clothes to move freely during the wash cycle. The machine has a 25 lbs capacity.



Image: The washing machine positioned next to a laundry basket, illustrating its capacity.

5.3 Adding Detergent

Add the appropriate amount of detergent to the detergent dispenser. Refer to your detergent's instructions for recommended quantities based on load size and water hardness.

5.4 Selecting Wash Mode and Water Level

The machine offers 10 different washing modes and 5 water levels. Use the 'PROGRAM' button to cycle through the wash modes (e.g., Normal, Jeans, Quick, Wool, Delicate) and the 'WATER LEVEL' button to select the desired water level. The display will show your selections.

5.5 Starting the Wash Cycle

Once clothes, detergent, wash mode, and water level are set, press the 'START/PAUSE' button to begin the wash cycle. The machine will automatically fill with water, wash, rinse, and spin dry according to the selected program.

5.6 Air Dry Function

The Air Dry function promotes airflow during washes, helping to keep clothes fresh and reduce odors. This is particularly useful for clothes that need to be worn urgently or in humid conditions.

AIR DRY KEEP YOUR CLOTHES FRESH

Blowing air into the laundry during the washing and rinsing stages keeps clothes fresh and reduces odour production



Rainy or cloudy days



Limited living space



Clothes that need to be worn urgently



Baby clothes



Image: Visual representation of how the Air Dry function circulates air within the drum.

5.7 Child Lock

For safety, the machine includes a child lock feature. Activate it to prevent accidental operation by children. Refer to the control panel instructions for activating and deactivating the child lock.



Image: A visual cue for the child lock feature, showing a child interacting with the machine.

6. MAINTENANCE

6.1 Tub Self-Clean

The machine features a self-cleaning function for the stainless steel inner tub. Regularly use this function to eliminate stubborn dirt and maintain hygiene, ensuring your clothes are always washed in a clean environment.



Image: A visual representation of the tub self-clean function, highlighting its effectiveness.

6.2 Cleaning Filters

Periodically check and clean the lint filter and any other accessible filters to ensure optimal performance and prevent blockages. Refer to the specific instructions in the manual for filter locations and cleaning procedures.

6.3 Exterior Cleaning

Wipe the exterior of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents that could damage the surface.

7. TROUBLESHOOTING

If you encounter any issues with your washing machine, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Lid not closed properly; Child lock activated.	Ensure power cord is securely plugged in; Close lid completely; Deactivate child lock.
Water not filling	Water tap off; Water inlet hose kinked or blocked.	Turn on water tap; Straighten hose; Check for blockages.

Problem	Possible Cause	Solution
Water not draining	Drain hose kinked or blocked; Drain pump filter clogged.	Straighten hose; Clean drain pump filter.
Excessive vibration/noise	Machine not level; Load unbalanced; Shipping bolts not removed.	Adjust leveling feet; Redistribute clothes evenly; Ensure all shipping bolts are removed.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	ROVSUN
Model Number	portable-clothes-washing-machines
Capacity	25 Pounds
Product Dimensions	22.5"D x 22.3"W x 36"H
Voltage	110 Volts
Wattage	400.00
Drum Material	Stainless Steel
Number of Washing Cycles	10
Number of Drying Cycles	1 (Spin Dry)
Controls Type	Touch
Access Location	Top Load
Color	Grey

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official ROVSUN website. Keep your purchase receipt as proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question