

## Generic V3 Plus

# vSeeBox V3 Plus Bluetooth Voice Remote Control User Manual

Model: V3 Plus

## INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Genuine vSeeBox V3 Plus Bluetooth Voice Remote Control. Designed for seamless compatibility with vSeeBox V3 Pro and V3 Plus models, this remote offers both Bluetooth and infrared control capabilities, along with convenient voice command features.



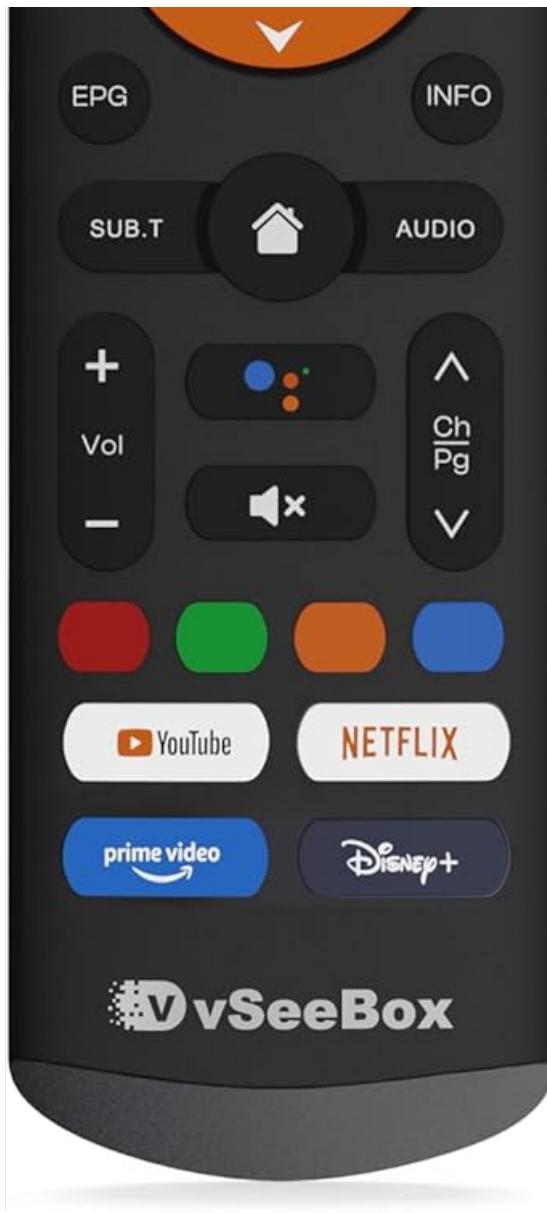


Figure 1: vSeeBox V3 Plus Bluetooth Voice Remote Control

The image displays the front of the vSeeBox V3 Plus remote, highlighting its black finish, clearly labeled buttons, and the central orange navigation pad. The remote features dedicated buttons for TV control, STB power, numerical input, navigation, volume, channel, and quick access to streaming services like YouTube, Netflix, Prime Video, and Disney+.

## SETUP AND PAIRING

### 1. Battery Installation

The vSeeBox V3 Plus remote requires two (2) AAA batteries (not included) for operation. To install:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

### 2. Bluetooth Pairing with vSeeBox

For optimal performance and voice command functionality, pair your remote via Bluetooth. This process connects the remote wirelessly to your vSeeBox device.

1. Ensure your vSeeBox device is powered on and you are on the home screen.
2. Navigate to **System Settings**. This is typically found in the third row of icons on the vSeeBox home screen.
3. Select **Remotes & Accessories**.
4. If a remote is currently paired, select it and choose the option to **Unpair** it.
5. Follow the on-screen prompt to initiate pairing. You will be instructed to press and hold specific buttons on your new remote.
6. On your new vSeeBox V3 Plus remote, simultaneously press and hold the **OK** button and the **Volume (-)** button until the pairing indicator on the remote (if present) flashes or the vSeeBox screen confirms pairing.
7. Once paired, a confirmation message will appear on your vSeeBox screen.

**Important:** If you exit the pairing prompt on your vSeeBox without successfully pairing the remote, you may need to restart your vSeeBox device to bring up the pairing prompt again.



Figure 2: Bluetooth Pairing Illustration

This image depicts the vSeeBox V3 Plus remote control positioned near a television displaying the vSeeBox user interface. The visual emphasizes the remote's Bluetooth capability and its integration with the vSeeBox system for seamless navigation and control.

### 3. Multi-Device Control (Infrared Mode)

The remote can be programmed to control your TV's power and volume using infrared (IR) signals. Refer to your vSeeBox device's settings or user guide for specific instructions on programming the remote for IR control of external devices.

## OPERATING THE REMOTE CONTROL

### Button Functions Overview

The vSeeBox V3 Plus remote is designed with an intuitive layout for easy navigation and control of your vSeeBox device and connected TV.







Figure 3: Key Button Areas

This image provides a detailed view of the vSeeBox V3 Plus remote, focusing on the central circular navigation pad with an "OK" button, the voice command button (represented by a microphone icon), and the volume and channel controls. It also shows the dedicated app buttons at the bottom.

- **TV Control / STB Power:** Dedicated buttons for managing your television and vSeeBox power.
- **Numerical Pad (0-9):** For direct input of channel numbers or other numerical data.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus, select items, and confirm actions.
- **Volume (+/-):** Adjusts the audio output level.
- **Channel (Ch Pg Up/Down):** Changes channels or scrolls through pages.
- **Voice Command Button:** Activates the voice search and command feature (requires Bluetooth pairing).
- **Home Button:** Returns to the vSeeBox home screen.
- **Menu / Back / Last / Fav:** Standard control buttons for various functions.
- **Quick Access Buttons:** Direct launch buttons for popular streaming applications like YouTube, Netflix, Prime Video, and Disney+.

## Using Voice Commands

The voice command feature allows for hands-free browsing and searching. Ensure your remote is paired via Bluetooth before using this feature.

1. Press the **Voice Command button** (microphone icon) on the remote.
2. Speak clearly into the microphone located on the remote.
3. Examples of commands include: "Open Netflix," "Search for action movies," "Play [movie title]," or "What's the weather?"
4. The vSeeBox will process your command and display relevant results or perform the requested action.

## MAINTENANCE

### Battery Replacement

When the remote's performance degrades or it stops responding, it's likely time to replace the batteries. Follow the battery installation steps outlined in the "Setup and Pairing" section.

- Always use new AAA alkaline batteries.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries responsibly according to local regulations.

### Cleaning the Remote

To maintain the remote's appearance and functionality:

- Wipe the surface with a soft, dry, lint-free cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- Do not use harsh chemicals, abrasive cleaners, or solvents.

- Ensure no liquid enters the remote's openings.

## Storage

If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage and potential damage to the remote.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Low or dead batteries. Remote is out of range. Bluetooth connection lost. Obstruction between remote and vSeeBox (for IR).	Replace batteries. Move closer to the vSeeBox. Re-pair the remote via Bluetooth (see Setup section). Ensure clear line of sight for IR.
Voice commands not working.	Remote not paired via Bluetooth. Microphone obstructed. Speaking too softly or unclear.	Ensure Bluetooth pairing is successful. Check for debris blocking the microphone. Speak clearly and directly into the remote.
Cannot pair the remote.	Incorrect pairing procedure. vSeeBox not in pairing mode. Interference.	Review and repeat the Bluetooth pairing steps carefully. Restart vSeeBox to re-initiate pairing prompt. Move away from other wireless devices.
TV power/volume not controlled.	Remote not programmed for IR control. Incorrect IR code.	Refer to your vSeeBox device's settings to program the remote for IR control of your TV.

## SPECIFICATIONS

- **Model:** V3 Plus
- **Connectivity Technology:** Bluetooth
- **Compatible Devices:** vSeeBox V3 Pro, vSeeBox V3 Plus (Streaming Devices)
- **Special Feature:** Voice Search
- **Power Source:** 2 x AAA Batteries (not included)
- **Item Weight:** 3.84 ounces (approx. 108.87 grams)
- **Package Dimensions:** 8.15 x 1.93 x 0.87 inches (approx. 20.7 x 4.9 x 2.2 cm)
- **Manufacturer:** vSeeBox

## WARRANTY AND SUPPORT

This Genuine vSeeBox V3 Plus remote control is manufactured by vSeeBox. For any warranty inquiries, technical support, or assistance with your product, please contact the authorized vSeeBox seller from whom you purchased the remote.

They can provide specific details regarding warranty coverage and troubleshooting beyond this manual.

For additional support, you may also refer to the official vSeeBox website or support channels for the latest information and resources.

© 2025 vSeeBox. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.