

P2961 Wireless Bluetooth Headphones

P2961 Wireless Bluetooth Headphones User Manual

Model: P2961 Wireless Bluetooth Headphones | Brand: Generic



Image: The P2961 Wireless Bluetooth Headphones, showcasing their over-ear design and blue color.

INTRODUCTION

Welcome to the user manual for your P2961 Wireless Bluetooth Headphones. These over-ear headphones are designed to provide a high-fidelity audio experience with the convenience of wireless connectivity. Featuring a built-in microphone for hands-free communication and versatile music playback options including TF card and AUX input, these headphones

are suitable for various activities from daily commuting to sports. Please read this manual carefully to ensure proper use and maintenance of your device.

FEATURES

- **Wireless Bluetooth Technology:** Seamlessly connect to your smartphone, tablet, or other Bluetooth-enabled devices.
- **HIFI Stereo Sound:** Experience crisp, clear audio and powerful bass for immersive listening.
- **Built-In Mic:** Take calls or communicate hands-free with ease.
- **Comfortable Over-Ear Design:** Soft ear cushions and adjustable headband for long-lasting comfort during use.
- **Versatile Playback:** Supports TF card and AUX input for multiple music source options.
- **Portable Design:** Lightweight and suitable for various activities including sports and travel.



Image: Features such as 45dB Noise Reduction, HIFI Sound Quality, and Long Standby Life are key attributes of the P2961 headphones.



Shocking Bass

40mm driver unit, full bass, beautiful treble, excellent sound quality causes heart palpitations.

Image: The headphones feature a 40mm driver unit designed to deliver powerful bass and clear treble for an excellent sound experience.

PACKAGE CONTENTS

Please check the package for the following items:

- P2961 Wireless Bluetooth Headphones
- USB Charging Cable
- AUX Audio Cable
- User Manual

PRODUCT OVERVIEW AND CONTROLS

Familiarize yourself with the various parts and controls of your P2961 headphones.



Image: Detailed diagram showing the location and function of the headphone controls. These include the Power/Open key, Mode Switch (M) key, Volume Up/Next Track (Add) key, Volume Down/Previous Track (Minus) key, External Microphone Interface, AUX Audio Cable Interface, and the Type-C Charging Port.

- **Open/Key:** Power On/Off, Play/Pause, Answer/End Call.
- **Switch M key:** Mode switch (Bluetooth, TF Card, AUX).
- **Add key (+):** Volume Up, Next Track (long press).
- **Minus key (-):** Volume Down, Previous Track (long press).
- **External microphone interface:** For connecting an external microphone (if applicable).
- **Aux audio cable interface:** For wired connection using the AUX cable.
- **Type-C charging port:** For charging the headphones.

SETUP

Charging the Headphones

1. Connect the Type-C end of the charging cable to the charging port on the headphones.
2. Connect the USB-A end of the charging cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will illuminate during charging and turn off when fully charged.
4. A full charge typically takes approximately 2-3 hours.

Bluetooth Pairing

1. Ensure the headphones are fully charged.
2. Press and hold the "Open/Key" button for approximately 3-5 seconds until the LED indicator flashes blue and red alternately, indicating pairing mode.
3. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select "P2961" from the list of found devices.
5. Once successfully paired, the LED indicator will flash blue slowly.
6. If prompted for a password, enter "0000".

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Press and hold the "Open/Key" button for 3 seconds.
- **Power Off:** Press and hold the "Open/Key" button for 3 seconds.

Music Playback

- **Play/Pause:** Short press the "Open/Key" button.
- **Volume Up:** Short press the "Add key (+)".
- **Volume Down:** Short press the "Minus key (-)".
- **Next Track:** Long press the "Add key (+)".
- **Previous Track:** Long press the "Minus key (-)".

Call Functions

- **Answer/End Call:** Short press the "Open/Key" button.
- **Reject Call:** Long press the "Open/Key" button.
- **Redial Last Number:** Double press the "Open/Key" button.

Mode Switching

- **Switch Mode:** Short press the "Switch M key" to cycle between Bluetooth, TF Card, and AUX modes.
- **TF Card Mode:** Insert a TF card with music files into the TF card slot. The headphones will automatically switch to TF card mode and begin playback.
- **AUX Mode:** Connect one end of the 3.5mm AUX audio cable to the headphone's AUX port and the other end to your audio source. The headphones will automatically switch to AUX mode.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use abrasive cleaners or solvents.
- **Storage:** Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.

- **Battery Care:** To prolong battery life, charge the headphones regularly, even if not in use for extended periods. Avoid fully discharging the battery frequently.
- **Water Resistance:** These headphones are not waterproof. Avoid exposure to water or excessive moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Headphones do not power on.	Low battery.	Charge the headphones fully.
Cannot pair with device.	Headphones not in pairing mode; Device Bluetooth off; Too far from device.	Ensure headphones are in pairing mode (flashing blue/red). Turn on Bluetooth on your device. Move headphones closer to the device (within 10 meters).
No sound.	Volume too low; Incorrect mode selected; Device not playing audio.	Increase headphone and device volume. Press 'M' key to switch modes. Ensure audio is playing on your connected device.
Poor sound quality.	Interference; Low battery; Device too far.	Move away from sources of interference. Charge headphones. Move closer to the device.
Microphone not working.	External mic not connected properly (if applicable); Device settings.	Ensure external mic is securely connected. Check microphone settings on your connected device.

SPECIFICATIONS

Feature	Detail
Model Name	P2961 Wireless Bluetooth Headphones
Connectivity Technology	Wireless (Bluetooth)
Ear Placement	Over Ear
Form Factor	Over Ear
Color	Blue
Manufacturer	Mix Buds
Built-in Microphone	Yes
Music Playback Options	Bluetooth, TF Card, AUX

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the retailer where the product was acquired. Keep your proof of purchase for any warranty claims.



© 2025 Generic. All rights reserved. P2961 Wireless Bluetooth Headphones.