

Amazon Basics EC3016C-PE

Amazon Basics Corded Steam Iron EC3016C-PE User Manual

Model: EC3016C-PE

INTRODUCTION

Thank you for purchasing the Amazon Basics Corded Steam Iron. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read these instructions carefully before first use and retain them for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the iron.
- Use the iron only for its intended use.
- To avoid the risk of electric shock, do not immerse the iron in water or other liquids.
- Always turn the iron OFF before plugging or unplugging from the electrical outlet. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
- Do not allow cord to touch hot surfaces. Let the iron cool completely before putting away. Loop cord loosely around iron when storing.
- Always disconnect iron from electrical outlet when filling with water or emptying, and when not in use.
- Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron; take it to a qualified service person for examination and repair. Incorrect reassembly can cause a risk of electric shock when the iron is used.
- Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
- Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down – there may be hot water in the reservoir.
- The iron must be used and rested on a stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.

PRODUCT OVERVIEW

Familiarize yourself with the components of your steam iron.

主な特徴

1400Wのアイロン
でしわをすばやく
取り除きます

アンチドリップ機能
と多彩なスチーム
オプション

自動的に電源が
OFFになる安全機能
付き



Image: Side view of the Amazon Basics Corded Steam Iron, showing its overall design and handle.

1. **Soleplate:** Non-stick surface for smooth gliding.
2. **Water Tank:** Transparent reservoir with 200ml capacity for steam and spray functions.
3. **Water Inlet:** Opening for filling the water tank.
4. **Spray Nozzle:** Emits a fine mist of water.
5. **Spray Button:** Activates the spray function.
6. **Steam Control Dial:** Adjusts steam output or selects dry ironing.
7. **Temperature Control Dial:** Selects the appropriate temperature for different fabric types.
8. **Power Indicator Light:** Illuminates when the iron is heating and turns off when the set temperature is reached.
9. **Handle:** Ergonomically designed for comfortable grip.
10. **Power Cord:** Connects the iron to the electrical outlet.



Image: Close-up view of the iron's control panel, showing the temperature dial and steam/spray buttons.

SETUP

Unpacking

- Remove the iron from its packaging.
- Remove any labels or protective film from the soleplate.
- Inspect the iron for any damage. Do not use if damaged.

Before First Use

It is recommended to clean the soleplate and test the iron on an old piece of fabric before ironing your garments.

1. Fill the water tank (see "Filling the Water Tank" section).
2. Set the temperature to MAX and allow the iron to heat up.
3. Iron an old cloth for a few minutes to remove any manufacturing residues.
4. Empty the water tank after this initial cleaning.

OPERATING INSTRUCTIONS

Filling the Water Tank

- Ensure the iron is unplugged from the power outlet.
- Set the steam control dial to the "Dry Ironing" position.
- Open the water inlet cover.
- Using a measuring cup, carefully pour clean tap water into the water tank up to the MAX fill line (200ml capacity). Do not overfill.
- Close the water inlet cover securely.



Image: The iron positioned to show the transparent water tank, indicating where water is filled.

Temperature Settings

- Check the fabric care label on your garment.
- Plug the iron into a suitable electrical outlet.
- Turn the temperature control dial to the desired setting. The power indicator light will illuminate.
- Wait for the indicator light to turn off, indicating the iron has reached the selected temperature (approx. 1 minute heat-up time).
- Always start with lower temperatures for delicate fabrics and increase as needed.

Dry Ironing

- Ensure the water tank is empty or the steam control dial is set to the "Dry Ironing" position.
- Select the appropriate temperature for your fabric.
- Once the indicator light turns off, begin ironing.

Steam Ironing

- Fill the water tank.
- Set the temperature control dial to the steam range (usually indicated by steam symbols on the dial).
- Once the indicator light turns off, turn the steam control dial to the desired steam output.
- For a burst of steam, press the steam burst button. This is useful for stubborn wrinkles.
- The iron provides a stable steam output of 20g per minute.

Spray Function

- The spray function can be used with or without steam.
- Press the spray button to emit a fine mist of water onto the fabric, helping to dampen and relax wrinkles.

Anti-Drip Feature

This iron is equipped with an anti-drip system that prevents water from dripping from the soleplate when the iron is not hot enough for steam production. This helps protect delicate fabrics from water spots.

Automatic Shut-off

For safety, the iron features an automatic shut-off function. If left unattended in a horizontal position for a certain period (e.g., 30 seconds) or in a vertical position (e.g., 8 minutes), the heating element will automatically turn off. The indicator light will flash to signal this. To reactivate, simply move the iron.

MAINTENANCE AND CLEANING

After Each Use

- Unplug the iron from the electrical outlet.
- Allow the iron to cool completely.
- Empty any remaining water from the tank by opening the water inlet and tilting the iron over a sink.

Cleaning the Soleplate



Image: Underside view of the iron, highlighting the soleplate with its steam vents.

- To clean the soleplate, wipe it with a damp cloth and a non-abrasive cleaner.
- Do not use abrasive scouring pads or harsh cleaners as they can damage the non-stick coating.
- If starch or other residue builds up on the soleplate, wipe it with a cloth dipped in a mild vinegar solution while the iron is cool.

Storage

- Ensure the iron is completely cool and empty of water.
- Store the iron upright on its heel rest to protect the soleplate.
- Store in a dry, safe place, out of reach of children.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in; power outlet faulty; temperature dial set to OFF.	Check power connection; try another outlet; turn temperature dial to desired setting.
No steam or insufficient steam.	Water tank empty; steam control dial set to dry; temperature too low; steam vents clogged.	Fill water tank; set steam control to steam position; increase temperature; clean soleplate vents.

Problem	Possible Cause	Solution
Water drips from soleplate.	Temperature too low for steam; water tank overfilled.	Increase temperature to steam range; do not overfill water tank.
Iron shuts off automatically.	Automatic shut-off safety feature activated.	Move the iron to reactivate. This is a normal safety function.

SPECIFICATIONS

Feature	Specification
Model Number	EC3016C-PE
Power	1400W
Water Tank Capacity	200ml
Dimensions (L x W x H)	26.7 x 11.4 x 18.3 cm
Heat-up Time	Approx. 1 minute
Steam Output	20g/minute (stable)
Features	Anti-drip, Spray function, Automatic shut-off, Temperature indicator lamp
Color	Blue
GTIN/UPC	840324430776
Country of Origin	China

WARRANTY AND SUPPORT

This product is covered by the Amazon Basics warranty. For detailed warranty information, please refer to the warranty card included with your purchase or visit the Amazon Basics website. For customer support, troubleshooting assistance, or to inquire about replacement parts, please contact Amazon customer service through your Amazon account or the official Amazon Basics support channels.