

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Braun](#) /
- › [Braun MultiFry 3 Air Fryer HF 3000 BK User Manual](#)

## Braun HF 3000 BK

# Braun MultiFry 3 Air Fryer HF 3000 BK User Manual

Model: HF 3000 BK

## 1. INTRODUCTION

---

Welcome to the Braun MultiFry 3 Air Fryer HF 3000 BK user manual. This appliance is designed to provide a convenient and efficient way to prepare a variety of delicious meals with less oil. Featuring RealAir Technology, it circulates hot air to deliver crispy and tender results. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Image 1.1: Braun MultiFry 3 Air Fryer HF 3000 BK highlighting its compact design, energy efficiency, adjustable temperature, and easy cleaning.

## 2. IMPORTANT SAFETY INFORMATION

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Please read all instructions carefully before operating the appliance.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse the cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use the appliance for other than intended use.
- Ensure the air vents are not blocked during operation.

### 3. PRODUCT COMPONENTS

---

Familiarize yourself with the main parts of your Braun MultiFry 3 Air Fryer:

- **Main Unit:** The primary housing of the air fryer, containing the heating element and fan.
- **Control Panel:** Features temperature and timer knobs.
- **Removable Basket:** Where food is placed for cooking. It has a non-stick coating.
- **Removable Grid:** Sits inside the basket to allow air circulation around the food and drain excess fat.
- **Handle:** For safely pulling out and inserting the basket.
- **Air Inlet/Outlet:** For proper air circulation during operation.

Fast and easy.

**Enjoy fantastic versatility to  
prepare all-time favorites.**



Image 3.1: The Braun MultiFry 3 Air Fryer with its removable basket and grid.

### 4. SETUP

---

Before using your air fryer for the first time, follow these steps:

1. **Unpack:** Carefully remove all packaging materials and promotional labels from the air fryer.
2. **Clean:** Wash the removable basket and grid with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely. Wipe the inside and outside of the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow for adequate air circulation. Ensure there is at least 10 cm of free space on the back, sides, and above the appliance.
4. **First Use (Pre-heating):** It is recommended to run the air fryer empty for about 10 minutes at 200°C before cooking food. This helps to burn off any manufacturing residues and eliminate initial odors. A slight smell or smoke may occur, which is normal.

## 5. OPERATING INSTRUCTIONS

---

The Braun MultiFry 3 Air Fryer uses RealAir Technology to cook food by circulating extremely hot air, resulting in crispy textures with significantly less fat.

### 5.1 General Operation

1. **Prepare Food:** Place your ingredients into the removable basket. Do not overfill the basket to ensure even cooking. For best results, do not exceed the MAX fill line.
2. **Insert Basket:** Slide the basket back into the main unit until it clicks securely into place.
3. **Set Temperature:** Use the temperature control knob to select the desired cooking temperature, ranging from 80°C to 200°C.
4. **Set Timer:** Use the timer knob to set the cooking time, up to 60 minutes. The appliance will automatically turn off when the timer reaches zero.
5. **Start Cooking:** The power indicator light will illuminate, and the air fryer will begin heating.
6. **Shake/Flip (Optional):** For some foods, especially smaller items like fries, shaking or flipping them halfway through cooking can ensure more even crisping. Carefully pull out the basket, shake, and reinsert. The air fryer will resume cooking.
7. **Finish Cooking:** When the timer rings, the cooking process is complete. Carefully pull out the basket and transfer the cooked food to a plate.



Image 5.1: Adjusting the timer and temperature on the control panel.

## 5.2 RealAir Technology

The RealAir Technology ensures that hot air is circulated rapidly and evenly around your food. This creates a crispy exterior while keeping the interior tender, achieving results similar to deep-frying with up to 90% less fat.

RealAir Technology  
Hot air circulates  
around your food  
for healthy, crispy  
results in no-time.



Image 5.2: The air fryer in use, showcasing the results of RealAir Technology.

### 5.3 Automatic Programs

The air fryer features 8 automatic programs designed to simplify cooking for common dishes. These programs automatically adjust the time and temperature for optimal results. Refer to the recipe book or quick start guide for specific program details and usage.



Image 5.3: The air fryer preparing a variety of meals.

## 6. MAINTENANCE AND CLEANING

---

Regular cleaning ensures the longevity and optimal performance of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool down completely before cleaning.
2. **Clean Basket and Grid:** The removable basket and grid are dishwasher safe. Alternatively, they can be washed by hand with hot water, dish soap, and a non-abrasive sponge. Ensure all food residues are removed.
3. **Clean Interior:** Wipe the interior of the appliance with a damp cloth. For stubborn residue, use a mild detergent. Avoid abrasive cleaners or scouring pads.
4. **Clean Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use harsh chemicals or abrasive materials.
5. **Storage:** Ensure all parts are clean and dry before storing the appliance. Store it in a cool, dry place.



Image 6.1: The air fryer basket and grid are dishwasher safe for easy cleaning.

## 7. TROUBLESHOOTING

If you encounter any issues with your Braun MultiFry 3 Air Fryer, refer to the following common problems and solutions:

| Problem                     | Possible Cause   | Solution  |
|-----------------------------|--|---|
| Air fryer does not turn on. | Appliance not plugged in; power outlet not working; timer not set.                   | Ensure the power cord is securely plugged into a working outlet. Set the timer to the desired cooking duration. |
| Food is not cooked evenly.  | Basket is overcrowded; food not shaken/flipped; incorrect temperature/time.          | Do not overcrowd the basket. Shake or flip food halfway through cooking. Adjust temperature and time as needed. |
| Food is not crispy.         | Too much moisture in food; insufficient oil (for some recipes); temperature too low. | Pat food dry before cooking. Lightly brush or spray with oil if desired. Increase temperature slightly.         |

| Problem                                | Possible Cause                                     | Solution   |
|--|--|--|
| White smoke coming from the appliance. | Fat residue from previous use; cooking fatty food. | Clean the basket and grid thoroughly after each use. This is normal when cooking very fatty foods. |
| Appliance smells during first use.     | Manufacturing residues burning off.                | This is normal for the first few uses. Ensure good ventilation. The smell will dissipate.          |

## 8. SPECIFICATIONS

---

Detailed technical specifications for the Braun MultiFry 3 Air Fryer HF 3000 BK:

| Feature                        | Specification   |
|--------------------------------|---|
| Brand                          | Braun   |
| Model Number                   | HF 3000 BK  |
| Color                          | Black   |
| Product Dimensions (L x W x H) | 32.5 x 33 x 34.4 cm   |
| Capacity                       | 4.3 Liters  |
| Power                          | 1500 Watts  |
| Material                       | Plastic   |
| Special Features               | Temperature Control (80-200°C), 60-minute Timer, RealAir Technology, Automatic Shut-off |
| Item Weight                    | 6 Kilograms   |

## 9. WARRANTY AND SUPPORT

---

Your Braun MultiFry 3 Air Fryer HF 3000 BK comes with a **one-year manufacturer's warranty** from the date of purchase.

This warranty covers defects in materials and workmanship under normal household use.

For warranty claims, technical support, or any questions regarding your appliance, please contact Braun customer service or the retailer where you purchased the product. Keep your proof of purchase for warranty validation.