

[Manuals.plus](#) /

› [MIGUAN](#) /

› MIGUAN Electric Shaver Model 1288 User Manual

MIGUAN 1288

MIGUAN Electric Shaver Model 1288 User Manual

Your guide to safe and effective use

1. INTRODUCTION

Thank you for choosing the MIGUAN Electric Shaver Model 1288. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your new electric shaver. Please read it thoroughly before first use and keep it for future reference.

2. SAFETY INFORMATION

WARNING: To reduce the risk of burns, electrocution, fire, or injury to persons:

- Do not use this unit near water when it is connected to power.
- Wash the shaver heads and charging base after use, then allow them to dry completely before next use.
- Do not use this unit while charging.
- If the unit is damaged, do not attempt to repair it yourself. Contact qualified service personnel.
- Always use this unit according to the instructions provided in this manual.
- Keep the appliance dry.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. PACKAGE CONTENTS

Carefully unpack your MIGUAN Electric Shaver and check that all items are present and in good condition. If any items are missing or damaged, please contact your retailer.

- MIGUAN Electric Shaver (Model 1288)
- Charging Base
- Nose Trimmer Attachment
- USB Charging Cable

- Cleaning Brush
- User Manual



Image 3.1: Electric shaver with its various attachments and accessories.

4. PRODUCT FEATURES

The MIGUAN Electric Shaver Model 1288 is designed for a comfortable and efficient shaving experience.

- **3 Independent Floating Rotary Heads:** Adapts to facial contours for a close and comfortable shave.
- **LED Display:** Digital screen shows battery level and lock status for convenient monitoring.
- **Rechargeable Battery:** Provides cordless operation for flexibility and travel.
- **Nose Trimmer Attachment:** Included for versatile grooming needs.
- **Ergonomic Design:** Sleek black and silver casing with a comfortable grip for precise control.
- **Washable Heads:** Allows for easy maintenance and cleaning.



Image 4.1: The electric shaver displaying its LED screen and interchangeable heads.

5. SETUP

5.1 Initial Charge

Before first use, fully charge the shaver. This typically takes several hours. Refer to the 'Charging' section for detailed instructions.

5.2 Attaching/Detaching Heads

1. To attach a head (e.g., nose trimmer), align the head with the shaver body and gently push until it clicks into place.
2. To detach a head, firmly grasp the shaver body and pull the head upwards.

6. CHARGING

The shaver is powered by a rechargeable battery. Ensure the shaver is turned off before charging.

1. Connect the USB charging cable to the charging base.
2. Plug the other end of the USB cable into a suitable USB power adapter (not included) or a USB port.
3. Place the shaver onto the charging base.
4. The LED display will indicate the charging status, typically showing a rising battery percentage.
5. Once fully charged, the display will show '100' or a full battery icon. Disconnect the shaver from the charger.

Note: Do not use the shaver while it is charging. Avoid charging in wet environments.

7. OPERATING THE SHAVER

7.1 Shaving

1. Ensure the rotary shaver head is securely attached.
2. Press the power button to turn on the shaver.
3. Hold the shaver at a right angle to your skin and move it in small, circular motions.
4. Stretch your skin with your free hand to ensure a smooth surface for shaving.
5. After shaving, press the power button to turn off the shaver.

7.2 Using the Nose Trimmer Attachment

1. Ensure the nose trimmer attachment is securely attached to the shaver body.
2. Press the power button to turn on the trimmer.
3. Gently insert the trimmer tip into your nostril or ear canal.
4. Move the trimmer slowly to cut unwanted hair. Do not insert too deeply.
5. After use, press the power button to turn off the trimmer.

8. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your shaver.

8.1 Cleaning the Shaver Heads

1. Turn off the shaver and disconnect it from any power source.
2. Detach the shaver head from the body.
3. Rinse the shaver head under running water to remove hair clippings. You may use the included cleaning brush for stubborn debris.
4. Shake off excess water and allow the head to air dry completely before reattaching or storing.

8.2 Cleaning the Nose Trimmer

1. Turn off the shaver and disconnect it from any power source.
2. Detach the nose trimmer head.
3. Rinse the trimmer head under running water.
4. Allow the head to air dry completely before reattaching or storing.

8.3 General Cleaning

- Wipe the shaver body with a dry or slightly damp cloth. Do not use abrasive cleaners or solvents.

- Ensure the charging base is clean and dry before placing the shaver on it.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver fully.
Shaver does not turn on.	Shaver is locked.	Check the LED display for a lock icon. Refer to the manual for unlocking instructions (if applicable, usually press and hold power button).
Poor shaving performance.	Shaver heads are dirty or clogged.	Clean the shaver heads thoroughly as described in the 'Maintenance and Cleaning' section.
Poor shaving performance.	Battery is low.	Charge the shaver.
Shaver makes unusual noise.	Hair or debris caught in blades.	Clean the shaver heads. If the noise persists, discontinue use and contact support.

10. SPECIFICATIONS

Feature	Specification
Model	1288
Brand	MIGUAN (Generic)
Head Type	Rotary (3 independent floating heads)
Blade Material	Stainless Steel
Power Source	Rechargeable Battery
Special Features	LED Display, Nose Trimmer Attachment
Color	Black and Silver
Dimensions (Approx.)	16.5 cm (Height) x 6 cm (Head Width)



Image 10.1: Shaver dimensions and packaging.

11. WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, replacement parts, or warranty claims, please contact your retailer or the manufacturer directly using the contact information provided with your purchase.

© 2024 MIGUAN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

What does the E2 error code mean on the MIGUAN 1288 Electric Shaver?

While the MIGUAN 1288 manual does not explicitly list an "E2" code in its troubleshooting table, on most modern electric rotary shavers, an E2 error code typically indicates a motor stall or a blockage...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B0DVTCPQB8>

More documents and user manuals: <https://manuals.plus/>