

[manuals.plus](#) /

› [RadioShack](#) /

› [RadioShack Portable Suitcase Turntable with Bluetooth - Instruction Manual](#)

RadioShack 4001790

RadioShack Portable Suitcase Turntable with Bluetooth

Model: 4001790

INTRODUCTION

Welcome to the instruction manual for your new RadioShack Portable Suitcase Turntable with Bluetooth. This guide provides essential information for the safe and efficient setup, operation, and maintenance of your device. Please read this manual thoroughly before using the turntable and retain it for future reference.



Image: The RadioShack Portable Suitcase Turntable, open and ready to play a record.

PRODUCT FEATURES

- **Portable Suitcase Design:** Compact and easy to transport.
- **Versatile Playback:** Supports 3 speeds (33-1/3, 45, 78 RPM) for various record types.
- **Automatic and Manual Stop:** Offers flexibility in playback control.
- **Customizable Sound:** Features pitch and volume control for personalized listening.
- **Built-in Speakers:** Equipped with 3W x 2 speakers for direct audio playback.
- **Bluetooth Connectivity:** Wirelessly stream music from compatible devices.
- **RCA Audio Outputs:** Connect to external home stereo systems.
- **3.5mm AUX Input:** Connect external audio sources.
- **3.5mm Headphone Input:** For private listening.



**Stereo speakers
with 3W each**



**3.5mm
AUX input**



**Compatible with
Bluetooth**

Image: Key features including stereo speakers, 3.5mm AUX input, and Bluetooth compatibility.

PACKAGE CONTENTS

Please check the box for the following items:

- 1 x RadioShack Portable Suitcase Turntable
- 1 x Power Adapter
- 1 x 45 RPM Adapter
- 1 x Instruction Manual

What's in the box:



1 Suitcase turntable.

Image: A visual representation of the turntable being the primary item included in the package.

SETUP


1. **Unpack:** Carefully remove the turntable and all accessories from the packaging.
2. **Placement:** Place the turntable on a flat, stable, and level surface to ensure optimal performance and prevent skipping.
3. **Power Connection:** Connect the provided power adapter to the DC 5V input port located on the back of the turntable. Plug the other end into a standard wall outlet.
4. **Stylus Protection:** Gently remove the clear plastic protective cover from the stylus (needle).
5. **Tone Arm Release:** Unlock the tone arm from its rest by moving the tone arm lock to the side.

OPERATING INSTRUCTIONS

Playing Records

1. **Place Record:** Carefully place your vinyl record onto the turntable platter.
2. **Select Speed:** Use the speed selector switch (33-1/3, 45, or 78 RPM) to match the speed of your record. For 7-inch 45 RPM records, place the included 45 RPM adapter on the center spindle.

3. **Lift Tone Arm:** Use the cueing lever to gently lift the tone arm from its rest.
4. **Position Tone Arm:** Manually move the tone arm over the desired starting track of the record.
5. **Lower Tone Arm:** Slowly lower the tone arm onto the record using the cueing lever. The record will begin to play.
6. **Adjust Volume:** Rotate the volume control knob to achieve your desired listening level.
7. **Stop Playback:** To stop playing, lift the tone arm using the cueing lever and return it to the tone arm rest.
8. **Auto-Stop Feature:** The turntable features an auto-stop switch. When ON, the platter will automatically stop spinning when the record reaches its end. When OFF, the platter will continue to spin.

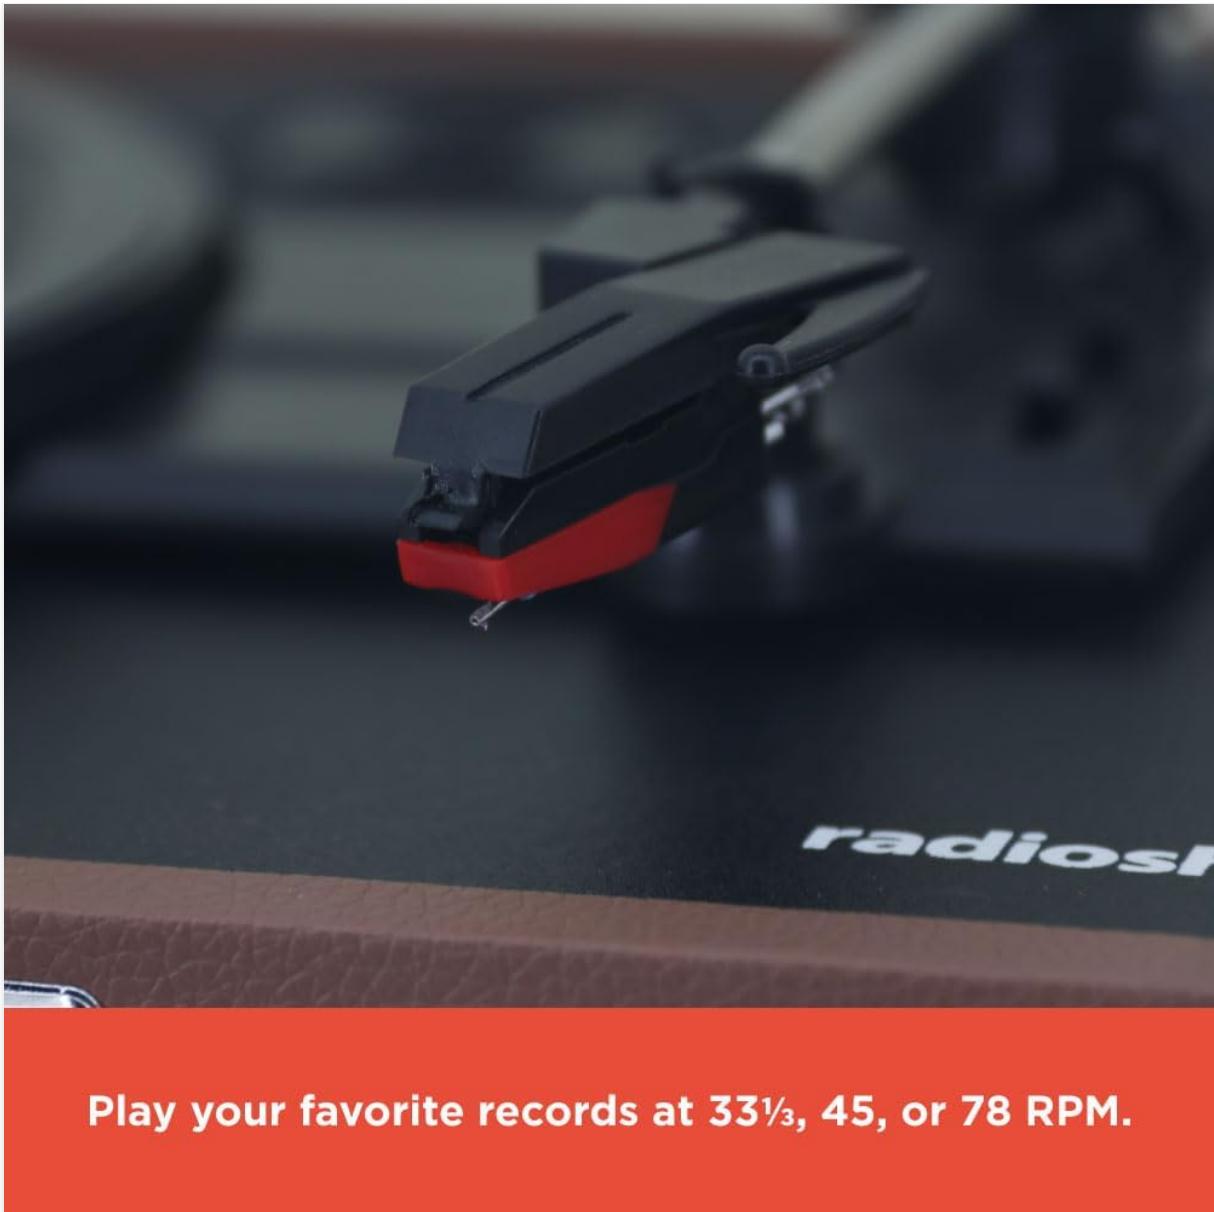

Play your favorite records at 33 $\frac{1}{3}$, 45, or 78 RPM.

Image: The turntable playing a record, highlighting its multi-speed capability.

Your browser does not support the video tag.

Video: Official RadioShack video demonstrating the vintage turntable in suitcase style, showing basic operation.

Bluetooth Connectivity

1. **Power On:** Turn on the turntable using the power/volume knob.
2. **Select Bluetooth Mode:** Switch the function selector to 'BT' (Bluetooth). The Bluetooth indicator light will begin to blink, indicating that the turntable is in pairing mode.

3. **Enable Bluetooth on Device:** On your external audio device (e.g., smartphone, tablet), enable Bluetooth and search for available devices.
4. **Pair Device:** Select 'Turntable' from the list of available Bluetooth devices. Once successfully paired, the Bluetooth indicator light will become solid.
5. **Play Music:** You can now play music from your external device, and the audio will be streamed through the turntable's built-in speakers.

External Audio Connections

- **RCA Audio Outputs:** Connect RCA audio cables (not included) from the 'OUT' ports on the back of the turntable to the audio input jacks of an external amplifier or powered speakers for a more powerful sound experience.
- **3.5mm AUX Input:** Connect an external audio device (e.g., MP3 player, smartphone) to the 3.5mm AUX input jack on the turntable using a 3.5mm audio cable (not included).
- **3.5mm Headphone Input:** For private listening, plug your headphones into the 3.5mm headphone jack located on the control panel.



Image: The RCA audio outputs on the back of the turntable for connecting to external stereo systems.



Plug in your headphones for private listening.

Image: The headphone jack for private listening.

MAINTENANCE

- **Stylus Care:** The stylus is delicate. Avoid touching it with your fingers. Clean it periodically with a soft brush, moving from back to front along the stylus tip.
- **Turntable Cleaning:** Wipe the turntable unit and cabinet with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- **Record Care:** Handle records by their edges to avoid touching the grooves. Store records vertically in their protective sleeves to prevent warping and dust accumulation.

TROUBLESHOOTING

| Problem | Solution |
|----------|---|
| No Power | Ensure the power adapter is securely connected to the turntable and a working electrical outlet. Check if the power/volume knob is turned ON. |

| Problem | Solution |
|--------------------------|--|
| No Sound | Increase the volume. Verify that the correct mode (Phono or Bluetooth) is selected. If using external speakers, check their connections and power. If playing a record, ensure the stylus is properly placed on the record and is not damaged. |
| Skipping/Distorted Sound | Clean the record and stylus. Ensure the record is placed flat on the platter. Verify that the turntable is on a stable, level surface. |
| Bluetooth Pairing Issues | Ensure the turntable is in Bluetooth pairing mode (blinking indicator light). Confirm your external device's Bluetooth is enabled and searching. Move devices closer together. Try restarting both the turntable and your external device. |

SPECIFICATIONS

- **Model Number:** 4001790
- **Brand:** RadioShack
- **Speeds:** 33-1/3, 45, 78 RPM
- **Connectivity:** Bluetooth, RCA Audio Out, 3.5mm AUX Input, 3.5mm Headphone Output
- **Speakers:** Built-in 3W x 2
- **Dimensions:** 13.78 x 10.24 x 4.72 inches
- **Weight:** 6 pounds
- **Material:** MDF case wrapped by PVC vinyl



Product dimensions:
Height 4.2 in, width 10.2 in, length 13.7 in.

Image: Product dimensions for the turntable.

WARRANTY AND SUPPORT

For detailed warranty information, product registration, and customer support, please refer to the specific documentation included with your purchase or visit the official RadioShack website. Keep your proof of purchase for any warranty claims.