

MC107D-1GP

Power-XL StirMax 7.5 Qt Multi-Cooker User Manual

Model: MC107D-1GP

INTRODUCTION

Thank you for choosing the Power-XL StirMax 7.5 Qt Multi-Cooker. This versatile 9-in-1 appliance is designed to simplify your meal preparation, offering functions such as slow cooking, searing, sautéing, simmering, roasting, steaming, baking, and rice cooking. Its innovative Auto-Stir Technology ensures even cooking and prevents sticking, making your cooking experience more convenient and efficient.

Key Features:

- **Versatile 9-in-1 Multi-Cooker:** Offers 9 cooking functions, including slow cook, sear, sauté, steam, bake, and more. Ideal for one-pot meals, stews, soups, and roasts.
- **Auto-Stir Technology for Even Cooking:** Innovative stirring function prevents sticking and burning, ensuring even heat distribution.
- **Large 7.5-Quart Capacity:** Cook large family meals with ease. Perfect for meal prep, batch cooking, and hosting gatherings.
- **Nonstick Pot & Glass Lid:** Durable nonstick inner pot ensures easy cleanup. Transparent glass lid allows monitoring. Dishwasher-safe parts.
- **One-Touch Digital Control Panel:** Simple, user-friendly interface for precise cooking times and temperatures. Built-in safety features.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance cooks under pressure. Improper use may result in scalding injury. Make certain unit is properly closed before operating.
- Always check the pressure release valve for clogging before use.
- Do not open the multi-cooker until the unit has cooled and internal pressure has been released.

PRODUCT OVERVIEW

Components



Figure 1: Power-XL StirMax Multi-Cooker with Glass Lid

This image displays the complete Power-XL StirMax Multi-Cooker, featuring its main body, handles, and the transparent glass lid. The overall design is sleek black with a prominent PowerXL logo on the front panel.



Figure 2: Digital Control Panel

A close-up view of the multi-cooker's digital control panel. It features a central digital display for time and temperature, along with various buttons for temperature adjustment, time adjustment, start/stop, and preset cooking functions like STIRMAX, BRAISEMAX, SLOW COOK, STEW/SOUP, KEEP WARM, STEAM/BOIL, RISOTTO, SAUTÉ, and RICE. Stirring options (STIR HIGH, STIR LOW, STIR DELAY, STIR OFF) are also visible.

Control Panel Functions

- **Digital Display:** Shows cooking time and temperature.
- **TEMP Buttons:** Adjusts cooking temperature.
- **TIME Buttons:** Adjusts cooking duration.
- **START/STOP Button:** Initiates or pauses cooking.
- **STIRMAX:** Activates the auto-stirring function for maximum stirring.
- **BRAISEMAX:** Preset for braising.
- **SLOW COOK:** Preset for slow cooking.
- **STEW/SOUP:** Preset for stews and soups.
- **KEEP WARM:** Automatically switches to keep food warm after cooking.
- **STEAM/BOIL:** Preset for steaming or boiling.

- **RISOTTO:** Preset for cooking risotto.
- **SAUTÉ:** Preset for sautéing.
- **RICE:** Preset for cooking rice.
- **STIR HIGH/LOW/DELAY/OFF:** Controls the speed and timing of the auto-stirring function.

SETUP

Before First Use

1. Unpack all components from the box and remove any packaging materials.
2. Wash the nonstick inner pot and glass lid with warm, soapy water. Rinse thoroughly and dry completely.
3. Wipe the exterior of the main unit with a clean, damp cloth. Do not immerse the main unit in water.
4. Ensure the auto-stirring paddle is securely attached to its central post inside the inner pot.
5. Place the multi-cooker on a stable, level, heat-resistant surface, away from walls or other appliances to allow for proper ventilation.
6. Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

General Operation

1. Add your ingredients to the nonstick inner pot.
2. Place the inner pot into the main unit.
3. Secure the glass lid on top of the multi-cooker.
4. Select your desired cooking function using the preset buttons (e.g., SLOW COOK, SAUTÉ, RICE).
5. Adjust the temperature and time using the TEMP and TIME buttons as needed.
6. Press the START/STOP button to begin cooking.
7. If using the auto-stirring function, select STIR HIGH, STIR LOW, or STIR DELAY as appropriate for your recipe.
8. The multi-cooker will automatically switch to KEEP WARM mode once the cooking cycle is complete.

Using Auto-Stir Technology

The Auto-Stir Technology is designed to provide continuous or intermittent stirring, ensuring even cooking and preventing food from sticking to the bottom of the pot. This feature is particularly useful for dishes that require frequent stirring, such as risottos, stews, or sauces.

NO MORE

STANDING OVER A HOT STOVE



Figure 3: Auto-Stir Technology in action, demonstrating even mixing.

This image shows the Power-XL StirMax Multi-Cooker from a top-down perspective, with the auto-stirring paddle actively mixing a dark, thick mixture, likely chocolate or a similar ingredient, demonstrating its ability to ensure even consistency.

SEARS, STIRS & SHREDS



NO HASSLE COOKING

Figure 4: The StirMax paddle effectively shredding cooked meat.

The image captures the multi-cooker's interior with a large quantity of cooked, shredded meat (resembling pulled pork). The auto-stirring paddle is visible, demonstrating its capability to not only stir but also shred ingredients during the cooking process.

SEARS, STIRS & SHREDS

NO HASSLE COOKING

**BUILT-IN
AUTO-STIRRER**



Figure 5: Close-up of the built-in auto-stirrer mechanism.

A detailed close-up of the auto-stirrer paddle within the multi-cooker's pot, showing its design and how it interacts with the food. The paddle is positioned at the bottom of the pot, ready to stir ingredients.

EASIER, FASTER MEALS

WITH LESS EFFORT



Figure 6: The auto-stirrer ensuring even cooking of chicken and vegetables.

This image illustrates the auto-stirrer's effectiveness in a dish containing chicken pieces and colorful vegetables like broccoli and bell peppers, highlighting its role in distributing heat and ingredients evenly for consistent cooking.



Figure 7: The auto-stirrer in use, highlighting its efficiency.

A dynamic shot of the auto-stirrer actively mixing a dish, emphasizing its contribution to faster and more efficient cooking by continuously moving ingredients, as indicated by the text overlay "COOK 60% FASTER AND DO LESS WORK".

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your Power-XL StirMax Multi-Cooker.

Cleaning Instructions

1. Always unplug the multi-cooker from the power outlet and allow it to cool completely before cleaning.
2. The nonstick inner pot and glass lid are dishwasher safe. Alternatively, they can be washed by hand with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry.
3. Remove the auto-stirring paddle for separate cleaning. It can also be washed by hand or in the dishwasher.
4. Wipe the exterior of the main unit with a clean, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
5. Ensure all parts are completely dry before reassembling or storing the appliance.

TROUBLESHOOTING

If you encounter any issues with your Power-XL StirMax Multi-Cooker, please refer to the following table for common

problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; unit not properly assembled.	Ensure power cord is securely plugged into a working outlet. Check if inner pot and lid are correctly placed.
Auto-stirring paddle not moving.	Paddle not properly installed; STIR OFF selected; food too thick.	Ensure paddle is securely attached. Check control panel to ensure STIR HIGH or STIR LOW is selected. Add more liquid if food is too dense.
Food sticking to the pot.	Insufficient liquid; stirring function not used; high heat for too long.	Add more liquid as per recipe. Ensure auto-stirring is active. Adjust temperature settings.
Steam escaping from lid.	Lid not properly sealed; gasket issues.	Ensure lid is securely closed and aligned. Check lid gasket for damage or displacement.

SPECIFICATIONS

Feature	Detail
Brand	Generic
Model Number	MC107D-1GP
Capacity	7.5 Quarts
Wattage	1000 watts
Voltage	120 Volts
Product Dimensions	12.63"D x 14.8"W x 9.87"H
Item Weight	10.59 Pounds
Material	Non-stick ceramic-coated pot, Metal
Control Method	Touch
Control Type	Digital
Number of Settings	9
Dishwasher Safe Parts	Yes (Inner Pot, Glass Lid)



Figure 8: Product dimensions for placement reference.

This image provides a visual representation of the Power-XL StirMax Multi-Cooker's dimensions, indicating its height (9.5 inches), depth (11.5 inches), and width (13 inches) to assist users in planning counter space.

WARRANTY AND SUPPORT

Limited Warranty

This Power-XL StirMax Multi-Cooker comes with a limited manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions, including coverage duration and limitations. Keep your purchase receipt as proof of purchase.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact the manufacturer's customer support. Contact information can typically be found on the product packaging or the manufacturer's official website.

