

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Voomy](#) /

› [Voomy W3S 3-in-1 MagSafe Wireless Charging Station User Manual](#)

Voomy W3S

Voomy W3S 3-in-1 MagSafe Wireless Charging Station User Manual

Model: W3S | Brand: Voomy

INTRODUCTION

Thank you for choosing the Voomy W3S 3-in-1 MagSafe Wireless Charging Station. This device is designed to provide a convenient and efficient charging solution for your iPhone, Apple Watch, and AirPods simultaneously. Please read this manual carefully before use to ensure proper operation and to maximize the lifespan of your product.

SAFETY INFORMATION

- Do not disassemble or modify the device.
- Keep the device away from water, moisture, and high temperatures.
- Avoid dropping or subjecting the device to strong impacts.
- Use only the provided USB-C cable and power adapter.
- Ensure proper ventilation during use to prevent overheating.
- This device is equipped with intelligent protection against overheating, short circuits, and overvoltage.

PACKAGE CONTENTS

Please check the box for the following items:

- Voomy W3S 3-in-1 Wireless Charging Station
- USB-C Cable
- Power Adapter
- User Manual

Tu estilo, Tu elección

Personaliza con el modo de espera iOS

18.



Image: The Voomy W3S charging station, including the device itself, a USB-C cable, and a power adapter, displayed alongside its retail packaging and user manual.

PRODUCT OVERVIEW

The Voomy W3S is a versatile and compact charging solution. Its foldable design makes it ideal for travel and allows for various viewing angles. It features dedicated charging areas for your iPhone, Apple Watch, and AirPods.

Carga 3 dispositivos al mismo tiempo



Image: The Voomy W3S charging station in an upright position, actively charging an iPhone (displaying time and weather) and an Apple Watch, placed on a wooden desk next to a plant and keys.



¡Crea un **lugar central** para todos tus dispositivos en casa o en la oficina!

Image: Three views of the Voomy W3S charging station demonstrating its foldable design, from fully flat to partially and fully upright, highlighting its adjustable nature.

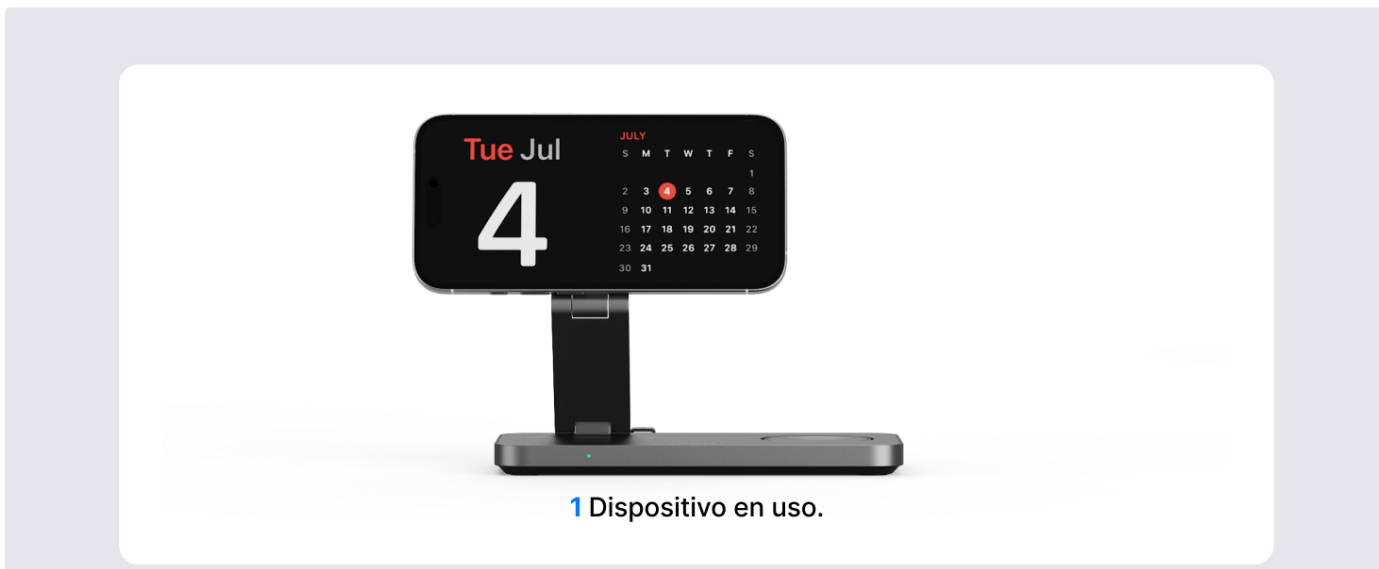


Image: A close-up view of the Voomy W3S charging station, emphasizing its high-quality materials, the 15-watt MagSafe integrated magnet, and the USB-C connection port.

SPECIFICATIONS

Model Name	W3S
Brand	Voomy
Dimensions	7.5 x 15 x 3.2 cm
Weight	288 g
Power Output (iPhone)	Up to 15W (MagSafe compatible)
Power Output (AirPods)	5W (Qi compatible)
Power Output (Apple Watch)	3W (Wireless compatible)
Input Voltage	9 Volts
Amperage	2.7 Amperes
Connector Type	USB Type-C
Compatible Devices	iPhone (12-16 series), Apple Watch (all wireless models), AirPods (with wireless charging case)
Material	Acrylonitrile Butadiene Styrene, Polycarbonate
Special Features	Wireless Charging, Multi-device Charging, Fast Charging, Magnetic (MagSafe)



3 Dispositivos en uso.

Image: Diagram illustrating the Voomy W3S charging station's power distribution: 15 Watts for iPhone, 5 Watts for AirPods, and 3 Watts for Apple Watch.



2 Dispositivos en uso.

Image: Visual representation of compatible Apple products: iPhone (12-16 series), AirPods with wireless charging case, and Apple Watch (all wireless models), indicating their respective charging wattages.

SETUP INSTRUCTIONS


1. **Unpack the Charger:** Carefully remove the Voomy W3S charging station, USB-C cable, and power adapter from the packaging.
2. **Connect Power:** Insert one end of the provided USB-C cable into the USB-C port on the back of the charging station. Connect the other end of the USB-C cable to the provided power adapter.
3. **Plug into Outlet:** Plug the power adapter into a wall outlet. The indicator light on the charging station will illuminate briefly, indicating it is powered on and ready for use.
4. **Adjust Position:** Unfold the charging station to your desired angle. The MagSafe charging pad for iPhone can be adjusted from 0 to 70 degrees for optimal viewing.

OPERATING INSTRUCTIONS


1. **Charging iPhone:** Place your MagSafe-compatible iPhone (iPhone 12 series or newer) onto the magnetic charging pad. The magnets will align your iPhone automatically for optimal charging. The iPhone display may show a MagSafe charging animation.

2. **Charging Apple Watch:** Place your Apple Watch onto the dedicated Apple Watch charging puck. Ensure the watch is properly seated and begins charging.
3. **Charging AirPods:** Place your AirPods (with wireless charging case) onto the flat Qi charging pad located on the base of the station. The indicator light on your AirPods case will confirm charging.
4. **Simultaneous Charging:** The Voomy W3S supports simultaneous charging of all three devices.

Carga inalámbrica 3 en 1

 **15 Vatios para iPhone**
iPhone 12-16 serie.



 **5 vatios para AirPods**
Todos los AirPods con estuche de carga inalámbrica.



 **5 vatios para Apple Watch**
Todos los modelos de Apple Watch son compatibles con wireless.



Image: A visual guide showing the Voomy W3S charging an iPhone (15W), AirPods (5W), and Apple Watch (3W), with examples of compatible devices.

Note: For optimal charging performance, ensure your iPhone is MagSafe compatible (iPhone 12 series or newer), your AirPods have a wireless charging case, and your Apple Watch supports wireless charging. The station provides up to 15W for iPhone, 5W for AirPods, and 3W for Apple Watch.

MAINTENANCE

- **Cleaning:** Disconnect the charger from the power source before cleaning. Use a soft, dry cloth to wipe the surface of the charging station. Do not use liquid cleaners or aerosols.

- **Storage:** When not in use, store the charging station in a cool, dry place. Its foldable design allows for compact storage.
- **Cable Care:** Avoid bending or crimping the USB-C cable excessively.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device not charging.	<ul style="list-style-type: none"> Not properly connected to power. Device not correctly placed on charging pad. Device not compatible with wireless charging. Thick phone case interfering. 	<ul style="list-style-type: none"> Ensure the USB-C cable and power adapter are securely connected and plugged into a working outlet. Reposition the device on the charging pad to ensure proper alignment. Verify your device supports wireless charging (MagSafe for iPhone, Qi for AirPods, wireless for Apple Watch). Remove any thick or metallic phone cases.
Slow charging.	<ul style="list-style-type: none"> Using a non-original or low-power adapter. Device misalignment. Background apps consuming power. 	<ul style="list-style-type: none"> Use the provided Voomy power adapter. Ensure the device is perfectly centered on the charging pad. Close unnecessary background applications on your device.
Overheating during charging.	<ul style="list-style-type: none"> Poor ventilation. Foreign objects on the charging pad. Device case too thick. 	<ul style="list-style-type: none"> Ensure the charging station is placed in a well-ventilated area. Remove any metal objects, credit cards, or other foreign items from the charging pad. Remove the phone case if it is excessively thick.

WARRANTY AND SUPPORT

Voomy products are designed and developed in the Netherlands, focusing on quality, functionality, and innovation. For warranty information or technical support, please refer to the official Voomy website or contact your retailer. Keep your purchase receipt as proof of purchase.

Manufacturer: The Brand Lab B.V.

Country of Origin: China



Image: The Voomy brand logo, featuring the text "VOOMY" with the tagline "WE CHARGE YOUR LIFE".

