

[Manuals.plus](#) /

› [BIUBLE](#) /

› BIUBLE 8000A Jump Starter with Air Compressor User Manual

BIUBLE X6

BIUBLE 8000A Jump Starter with Air Compressor User Manual

Model: X6 | Brand: BIUBLE

1. PRODUCT OVERVIEW

The BIUBLE 8000A Jump Starter with Air Compressor is a versatile and essential tool for any vehicle owner. It combines a powerful 8000A peak current jump starter capable of starting all gas engines and up to 16L diesel engines, a 150 PSI air compressor for tire inflation, a 26800mAh power bank for charging electronic devices, and multiple emergency light modes. Designed for reliability and safety, this device ensures you are prepared for various roadside emergencies, from dead batteries to flat tires.



Figure 1: The BIUBLE 8000A Jump Starter with Air Compressor, showcasing its compact design and integrated display.

2. PACKAGE CONTENTS

Please check the package contents upon unboxing to ensure all items are present:

- 1 × BIUBLE 8000A Jump Starter
- 1 × Smart Jumper Cables
- 1 × Detachable Air Hose + 4 × Air Nozzles
- 1 × Type-C Charging Cable
- 1 × Instruction Manual
- 1 × Storage Bag

3. INITIAL SETUP

3.1 Charging the Device

Before first use, fully charge the jump starter. It comes with a 26800mAh high-capacity battery. Use the provided Type-C charging cable to connect the device to a suitable USB power source. The LCD display will indicate the charging status. A full charge typically takes approximately 3 hours.



Figure 2: The jump starter being used as a portable power bank, illustrating its charging capabilities.

4. OPERATING INSTRUCTIONS

4.1 Jump Starting a Vehicle

This jump starter is designed to start completely dead batteries, supporting all gas engines and up to 16L diesel engines.

1. Ensure the jump starter is sufficiently charged.
2. Insert the smart jumper cable plug firmly into the jump starter's designated port.
3. Connect the red (+) clamp to the positive terminal of the vehicle's battery.
4. Connect the black (-) clamp to the negative terminal of the vehicle's battery.
5. Wait for the indicator light on the smart jumper cable to turn solid green, indicating a safe connection.

6. Start your vehicle's engine.
7. Once the vehicle starts, immediately remove the clamps from the battery terminals, then disconnect the jumper cable from the jump starter.



Figure 3: Illustration of connecting the jump starter to a car battery for a quick start.

Video 1: A comprehensive demonstration of unboxing, connecting, and using the BIUBLE jump starter to start a vehicle, inflate tires, and charge devices.

4.2 Using the Air Compressor

The integrated 150 PSI air compressor can inflate tires rapidly, with an airflow of 45L/Min. It features smart preset and auto shut-off functions.

1. Screw the detachable air hose into the air output port of the jump starter.
2. Attach the air hose nozzle to the tire valve or the appropriate air nozzle for other inflatables (e.g., balls, bikes).
3. Press the power button to turn on the device. The LCD display will show the current pressure.
4. Use the '+' and '-' buttons to set the desired pressure. You can also cycle through different inflation modes (car, motorcycle, bicycle, ball) using the mode button.

5. Press the start button to begin inflation. The compressor will automatically stop once the preset pressure is reached.
6. Disconnect the air hose from the tire/inflatable and the jump starter.



Figure 4: The jump starter connected to a tire, demonstrating its air inflation capability.

Video 2: A detailed look at the BIUBLE Jump Starter's air compressor function, including connecting the hose and setting pressure.

4.3 Power Bank Function

The 26800mAh battery capacity allows the jump starter to function as a portable power bank. It features two fast-charging USB output ports (QC3.0) and one Type-C input/output port.

1. Connect your electronic device (smartphone, tablet, etc.) to one of the USB output ports using a compatible charging cable.
2. The device will automatically begin charging.

4.4 Emergency LED Lights

The jump starter is equipped with a 400 lumens LED light, offering three modes for various emergency situations:

- **Lighting Mode:** Provides continuous illumination for working in dark environments.

- **SOS Mode:** Emits an SOS signal for emergency situations.
- **Strobe Mode:** Flashes rapidly to attract attention.

To activate the lights, press the light button on the device. Press again to cycle through the modes.



Figure 5: The jump starter displaying its three emergency light modes: Lighting, SOS, and Strobe.

5. CARE AND MAINTENANCE

- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures. Use the provided storage bag for protection.
- **Charging:** For optimal battery life, recharge the jump starter every 3-6 months, even if not in use. It can standby for 24+ months on a full charge.
- **Cleaning:** Wipe the device with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Battery Life:** The internal battery supports 2000+ recharge cycles.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vehicle does not jump start.	Low battery on jump starter; incorrect clamp connection; vehicle battery completely dead or severely damaged.	Ensure jump starter is fully charged. Check clamp connections (red to positive, black to negative). Ensure smart cable indicator is green. If battery is severely damaged, professional assistance may be required.
Air compressor not inflating.	Air hose not securely connected; incorrect pressure setting; device not powered on.	Ensure air hose is screwed in tightly. Verify desired pressure is set and device is powered on. Check for blockages in the hose or nozzle.
Device not charging.	Charging cable faulty; power adapter issue; charging port damaged.	Try a different Type-C cable and power adapter. Ensure the charging port is clean and free of debris.
LCD display not working.	Device battery is completely drained; device malfunction.	Charge the device for at least 30 minutes. If the issue persists, contact customer support.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Model	X6
Peak Current	8000 Amps
Battery Capacity	26800mAh
Air Compressor Pressure	150 PSI
Airflow	45L/Min
USB Output 1	5V/3A
USB Output 2	5V/3A, 9V/2A, 12V/1.5A (QC3.0)
Type-C Input/Output	5V/2A, 9V/2A
Product Dimensions	1.96"D x 4.72"W x 6.29"H
Item Weight	2.75 pounds
Operating Temperature	-20°C to +60°C (-4°F to +140°F)

8. WARRANTY AND CUSTOMER SUPPORT

BIUBLE is committed to providing excellent customer service and product reliability.

- **Warranty:** Enjoy a 3-year warranty on your BIUBLE Jump Starter.
- **Technical Support:** Lifetime technical support is available for all BIUBLE products.

- **Customer Service:** For any questions or assistance, please feel free to contact us. Our team is dedicated to helping you within 24 hours.

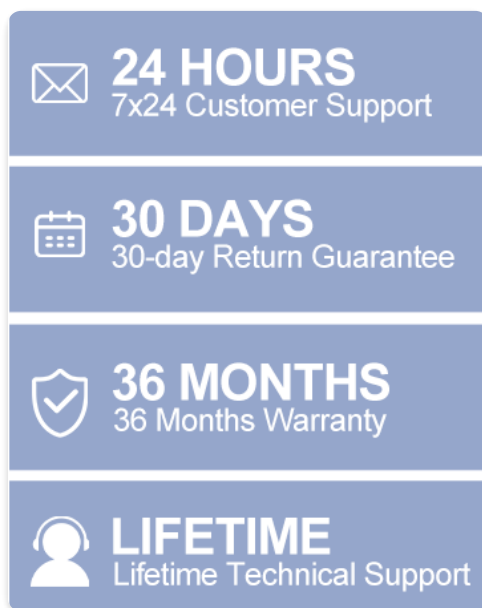


Figure 6: BIUBLE's dedicated customer support team is ready to assist you.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question