

[Manuals.plus](#) /

› [Smoby](#) /

› Smoby Corolle 3-Wheel Scooter with Doll Seat Instruction Manual

Smoby 7600750923

Smoby Corolle 3-Wheel Scooter with Doll Seat Instruction Manual

Model: 7600750923

IMPORTANT SAFETY INFORMATION

Please read this instruction manual carefully before assembly and use of the Smoby Corolle 3-Wheel Scooter. Keep this manual for future reference.

- **Recommended Age:** Suitable for children aged 3 years and older.
- **Maximum Load:** The scooter is designed to support a maximum weight of 20 kg (approximately 44 lbs).
- **Adult Supervision:** Always ensure children are supervised by an adult while using the scooter.
- **Protective Gear:** Always wear appropriate protective gear, including a helmet, knee pads, and elbow pads, when riding the scooter.
- **Safe Environment:** Use the scooter on flat, dry, and clean surfaces, away from traffic, steep slopes, and water.
- **Doll Seat:** The doll seat is for dolls only. Do not place pets or other objects in the doll seat.

PRODUCT OVERVIEW

The Smoby Corolle 3-Wheel Scooter is designed for young children, featuring a stable three-wheel design, an adjustable handlebar, and a unique integrated doll seat. Its robust metal frame ensures durability and safety.



Image: The Smoby Corolle 3-Wheel Scooter, showcasing its pink design, three wheels, adjustable handlebar, and front-mounted doll seat.

SETUP AND ASSEMBLY

The Smoby Corolle Scooter requires minimal assembly. Ensure all components are present and undamaged before beginning.

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all components listed in the packaging contents are present. If any parts are missing or damaged, contact customer support immediately.
2. **Attach Handlebar:** Insert the handlebar into the main scooter frame. Ensure it clicks securely into place or is fastened according to the specific mechanism (e.g., tightening a clamp or screw).
3. **Adjust Handlebar Height:** The handlebar can be adjusted to two heights: 67 cm and 70 cm. Locate the adjustment mechanism (usually a button or lever on the stem) and set it to the appropriate height for the child. Ensure it is securely locked in position before use.
4. **Check Connections:** Before first use, ensure all connections, especially the wheels and handlebar, are securely fastened.



Image: A line drawing illustrating the dimensions of the Smoby Corolle Scooter, showing a height of 67 cm, length of 56 cm, and width of 32 cm.

OPERATING INSTRUCTIONS

Follow these steps for safe and enjoyable use of the scooter.

1. **Riding Position:** Place one foot on the anti-slip deck of the scooter. Use the other foot to push off the ground to gain momentum.
2. **Steering:** The scooter is designed for intuitive lean-to-steer functionality. Lean gently in the desired direction to turn.
3. **Stopping:** To stop, gently place the foot that was pushing on the ground to slow down, or use the rear foot brake if equipped (check product for specific brake type).
4. **Using the Doll Seat:**
 - Place your favorite doll (not included) into the integrated doll seat located on the handlebar.
 - The doll can be positioned facing forward (in the direction of travel) or facing the child. Ensure the doll is securely seated before riding.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your scooter.

- **Cleaning:** Clean the scooter with a damp cloth and mild soap. Avoid abrasive cleaners or solvents.
- **Inspection:** Periodically check all screws, bolts, and connections to ensure they are tight. Inspect wheels for wear and tear.
- **Storage:** Store the scooter in a dry place, away from direct sunlight and extreme temperatures, to prevent material degradation.

- **Lubrication:** The wheels are designed for smooth operation and generally do not require lubrication. If any squeaking occurs, consult a professional.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Scooter feels unstable.	Loose handlebar or wheel connections.	Check and tighten all screws and bolts. Ensure the handlebar is securely locked at the chosen height.
Wheels are not rolling smoothly.	Dirt or debris in wheel bearings; worn wheels.	Clean wheels and axles. If wheels are significantly worn, consider replacement (contact customer support).
Missing parts upon unboxing.	Packaging error.	Immediately contact Smoby customer support with your purchase details and a description of the missing part.

SPECIFICATIONS

Model Number:	7600750923
Brand:	Smoby
Product Dimensions (L x W x H):	55 cm x 32 cm x 67 cm (21.65 x 12.56 x 26.38 inches)
Adjustable Handlebar Height:	67 cm and 70 cm
Item Weight:	2.15 kg (2148 Grams)
Material:	Metal, Plastic
Recommended Age:	36 months - 10 years
Maximum Load Capacity:	20 kg
Number of Wheels:	3
Color:	Rose

WARRANTY AND SUPPORT

Smoby products are manufactured with high-quality materials and undergo rigorous quality control. For any questions, concerns, or warranty claims, please contact Smoby customer support.

You can find more information and contact details on the official Smoby website or through your retailer.

Visit the [Smoby Brand Store](#) for additional products and support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question