

OS32ATVHD

Generic OS32ATVHD 32-inch LED TV

User Manual

1. IMPORTANT SAFETY INFORMATION

Please read all safety and operating instructions carefully before using this television. Keep this manual for future reference.

- **Power Source:** Ensure the TV is connected to a power supply within the specified voltage range.
- **Ventilation:** Do not block ventilation openings. Allow adequate space around the TV for proper airflow.
- **Cleaning:** Unplug the TV before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Water and Moisture:** Do not expose the TV to rain or moisture. Do not place objects filled with liquids on the TV.
- **Placement:** Place the TV on a stable, level surface. Avoid direct sunlight, heat sources, and excessive dust.
- **Lightning:** Unplug the TV during lightning storms or when unused for long periods.

2. PACKAGE CONTENTS

Verify that all items are included in your package:

- Generic OS32ATVHD 32-inch LED TV
- Remote Control
- Power Cable
- User Manual (this document)
- TV Stand Components (Base and Screws)



Image: Generic OS32ATVHD 32-inch LED TV.

3. SETUP

3.1. Unpacking

Carefully remove the TV and all accessories from the packaging. Retain the packaging for future transport or service needs.

3.2. Stand Installation (Optional)

If you are not wall-mounting the TV, attach the included stand:

1. Place the TV screen-down on a soft, flat surface to prevent scratches.
2. Align the stand base(s) with the screw holes on the bottom of the TV.
3. Secure the stand(s) using the provided screws. Do not overtighten.

3.3. Wall Mounting (Optional)

The TV is wall-mountable. A VESA-compatible wall mount bracket (not included) is required. Follow the instructions provided with your wall mount bracket and ensure professional installation for safety.

3.4. Connecting External Devices

Connect your external devices to the appropriate ports on the TV. Ensure the TV and devices are powered off before making connections.

- **HDMI:** For high-definition audio and video from Blu-ray players, game consoles, or set-top boxes.
- **USB:** For connecting USB storage devices to play media files.
- **VGA:** For connecting a computer. Use the PC audio input for sound.
- **AV (Composite):** For connecting older devices like VCRs or older DVD players.



Image: Rear view of the TV with connectivity ports.

3.5. Power Connection

After all connections are made, plug the power cable into the TV's power input, then plug the other end into a wall power outlet.

4. OPERATING INSTRUCTIONS

4.1. Power On/Off

Press the **POWER** button on the remote control or on the TV to turn the TV on or off.

4.2. Remote Control Functions

The included remote control allows you to access all TV functions. Ensure batteries are correctly inserted.

- **POWER:** Turns the TV on or off.
- **INPUT/SOURCE:** Selects the input source (HDMI, USB, VGA, AV).
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes channels.

- **MENU:** Opens the main menu for settings.
- **Navigation Buttons (Up/Down/Left/Right):** Navigates through menus.
- **OK/ENTER:** Confirms selections.

4.3. Selecting Input Source

Press the **INPUT** or **SOURCE** button on the remote control to cycle through available input sources (e.g., HDMI1, HDMI2, USB, VGA, AV). Select the desired source using the navigation buttons and press **OK**.

4.4. Menu Navigation and Settings

Press the **MENU** button to access the TV's settings. Use the navigation buttons to move between options and **OK** to select.

- **Picture Settings:** Adjust brightness, contrast, color, sharpness, and aspect ratio.
- **Sound Settings:** Control volume, equalizer, sound mode, and balance.
- **Channel Settings:** Scan for channels (if using an antenna) and manage channel lists.
- **System Settings:** Access language, time, and other general TV settings.

5. MAINTENANCE

5.1. Cleaning the TV

Always unplug the TV before cleaning.

- **Screen:** Gently wipe the screen with a soft, dry, lint-free cloth. Do not use abrasive cleaners or sprays directly on the screen.
- **Frame:** Use a soft, slightly damp cloth to clean the TV frame.

5.2. General Care

Ensure the TV is placed in a well-ventilated area to prevent overheating. Avoid exposing the TV to extreme temperatures or humidity.

6. TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Solution
No power	<ul style="list-style-type: none"> • Check if the power cable is securely connected to the TV and the power outlet. • Verify the power outlet is working by plugging in another device. • Ensure the remote control batteries are not depleted.
No picture, but sound is present	<ul style="list-style-type: none"> • Check the input source selection (e.g., HDMI1, AV). • Ensure the video cable (HDMI, VGA, AV) is securely connected to both the TV and the external device. • Try a different input source or device to isolate the problem.
No sound, but picture is present	<ul style="list-style-type: none"> • Check the volume level and ensure the TV is not muted. • Verify audio cables are correctly connected (if using external audio). • Check sound settings in the TV menu.

Problem	Possible Solution
Remote control not working	<ul style="list-style-type: none"> • Replace the batteries with new ones. • Ensure there are no obstructions between the remote and the TV's IR sensor. • Point the remote directly at the TV.

7. SPECIFICATIONS

Feature	Detail
Brand	Generic
Model Name	OS32ATVHD
Screen Size	32 inches
Display Technology	LED
Resolution	4K (3840 x 2160 pixels)
Connectivity	HDMI (multiple ports), USB, VGA, AV Input
Included Components	Remote Control
Special Features	Wall Mountable, Energy-saving technology
Recommended Uses	Entertainment, TV display

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or contact your retailer. Keep your purchase receipt as proof of purchase.