

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LOVENSE](#) /

› [LOVENSE Lush 4 and Hush 2 Instruction Manual](#)

LOVENSE Lush 4, Hush 2 1.5in

LOVENSE Lush 4 and Hush 2 Instruction Manual

Comprehensive Guide for Your LOVENSE Devices

1. INTRODUCTION

This instruction manual provides detailed guidance for the safe and effective use of your LOVENSE Lush 4 G-Spot Vibrator and LOVENSE Hush 2 1.5-inch Anal Vibrator. This bundle is designed to offer a versatile experience, whether for solo or partnered use. Please read this manual thoroughly before first use and retain it for future reference.

2. SAFETY INFORMATION

- **Material Safety:** Both devices are made from body-safe silicone. Clean thoroughly before and after each use.
- **Lubrication:** Always use a water-based lubricant with silicone products to prevent damage to the material and ensure comfortable use. Oil-based lubricants can degrade silicone.
- **Waterproof:** Both devices are IPX7 waterproof, meaning they can be submerged in up to 1 meter of water for 30 minutes. This allows for easy cleaning and use in wet environments.
- **Charging:** Use only the provided magnetic charging cable. Do not use the devices while charging.
- **Storage:** Store devices in a clean, dry place, away from direct sunlight and extreme temperatures. Keep out of reach of children.

3. PRODUCT OVERVIEW

3.1 LOVENSE Lush 4 G-Spot Vibrator

The Lush 4 is a wearable G-spot vibrator designed for precise internal stimulation. It features a powerful motor, ergonomic curves for secure placement, and app-controlled functionality.

LOVENSE Lush 4

Remote-controlled G-spot vibrator



App
Remote Control



10000+
Modes



Intense
Vibrations



IPX7
Waterproof



Fast &
Stable Connectivity



Rapid
Charging



36 dB
Whisper Quiet



Dynamic
LED Light

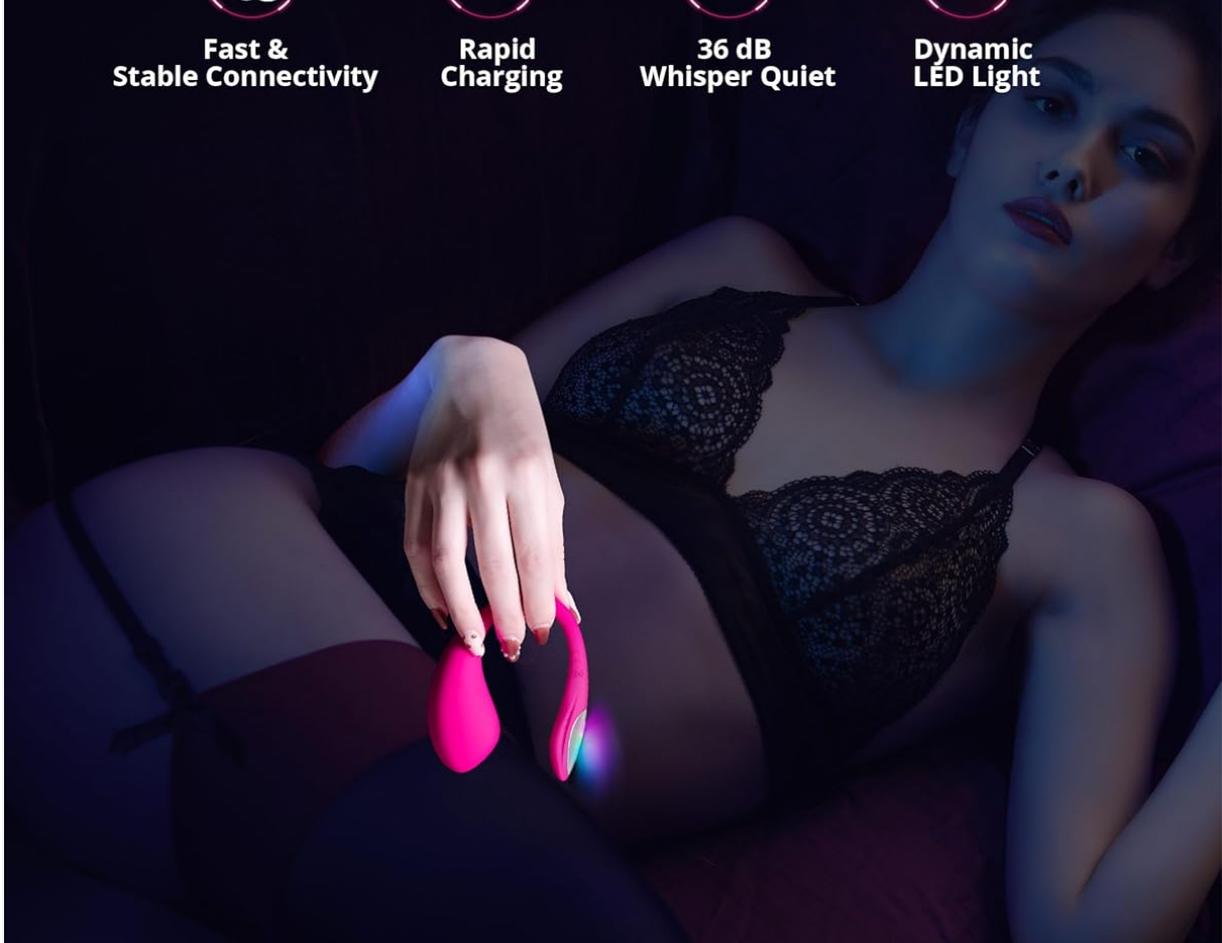


Image: LOVENSE Lush 4 G-Spot Vibrator highlighting its key features including app remote control, multiple modes, intense vibrations, IPX7 waterproofing, fast charging, quiet operation, and dynamic LED light.

Intense G-Spot Vibrations

Thoughtful curves ensure pinpoint G-spot stimulation



Up to 7,000 vibrations/min



Image: A detailed view of the Lush 4's thoughtful curve design, engineered for pinpoint G-spot stimulation, capable of delivering up to 7,000 vibrations per minute.

3.2 LOVENSE Hush 2 1.5-inch Anal Vibrator

The Hush 2 is a 1.5-inch anal vibrator designed for deep and rumbly pleasure. It features a smooth surface, a flared base for safety, and powerful vibrations, also controllable via the LOVENSE app.

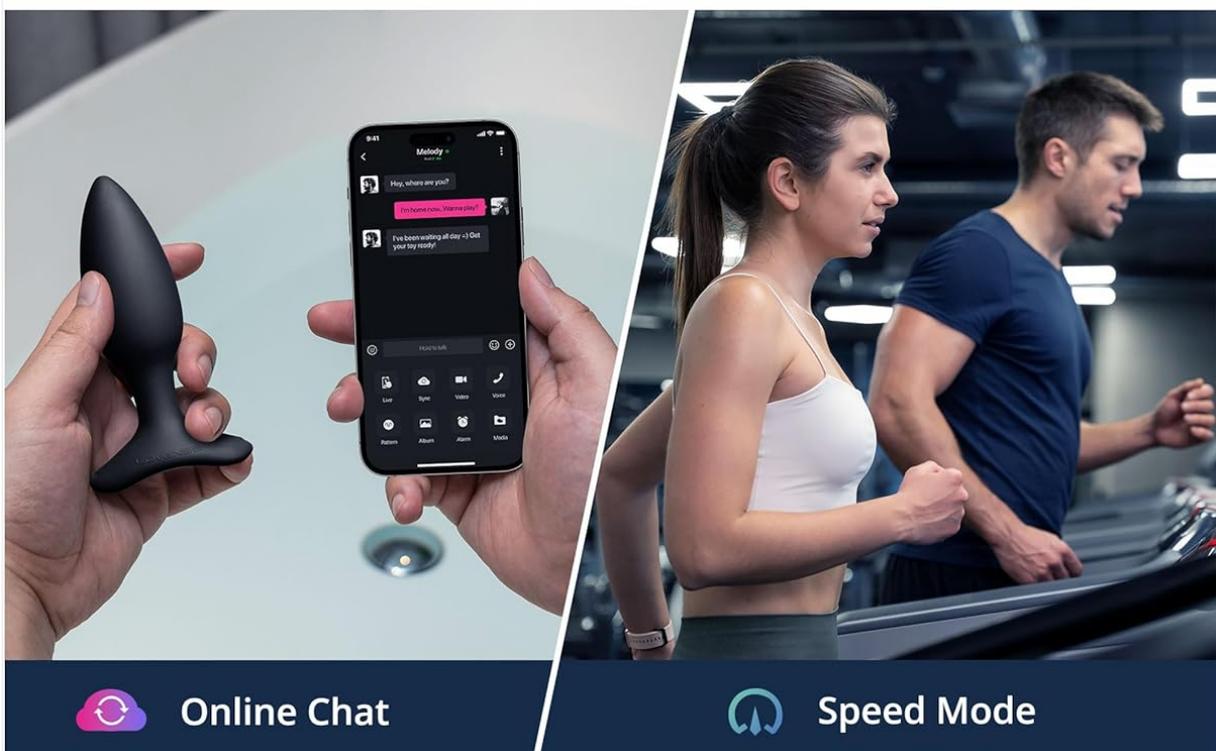


Image: The LOVENSE Hush 2 1.5-inch Anal Vibrator, illustrating its dimensions and key features such as powerful vibrations, magnetic charging, smooth design, and 7 built-in patterns.

4. SETUP

4.1 Initial Charging

1. Locate the magnetic charging cable provided with your devices.
2. Attach the magnetic end of the cable to the charging port on each device. The Lush 4 has a small metallic contact point, and the Hush 2 has a similar contact point.
3. Connect the USB end of the cable to a standard USB power adapter (not included) or a computer USB port.
4. Charge both devices fully before first use. An indicator light on the device will show charging status (refer to

the app for precise battery levels). Lush 4 supports rapid charging.

4.2 App Download and Pairing

1. Download the official LOVENSE Remote App from your smartphone's app store (available for iOS and Android).
2. Ensure Bluetooth is enabled on your smartphone.
3. Turn on your LOVENSE device by pressing and holding the power button until it vibrates or the LED light activates.
4. Open the LOVENSE Remote App. The app will automatically search for nearby LOVENSE devices.
5. Select your Lush 4 or Hush 2 from the list of discovered devices to pair. The app will confirm successful connection.

Image: The LOVENSE Remote App interface, demonstrating its capabilities for remote control, custom patterns, sound control, and music syncing.

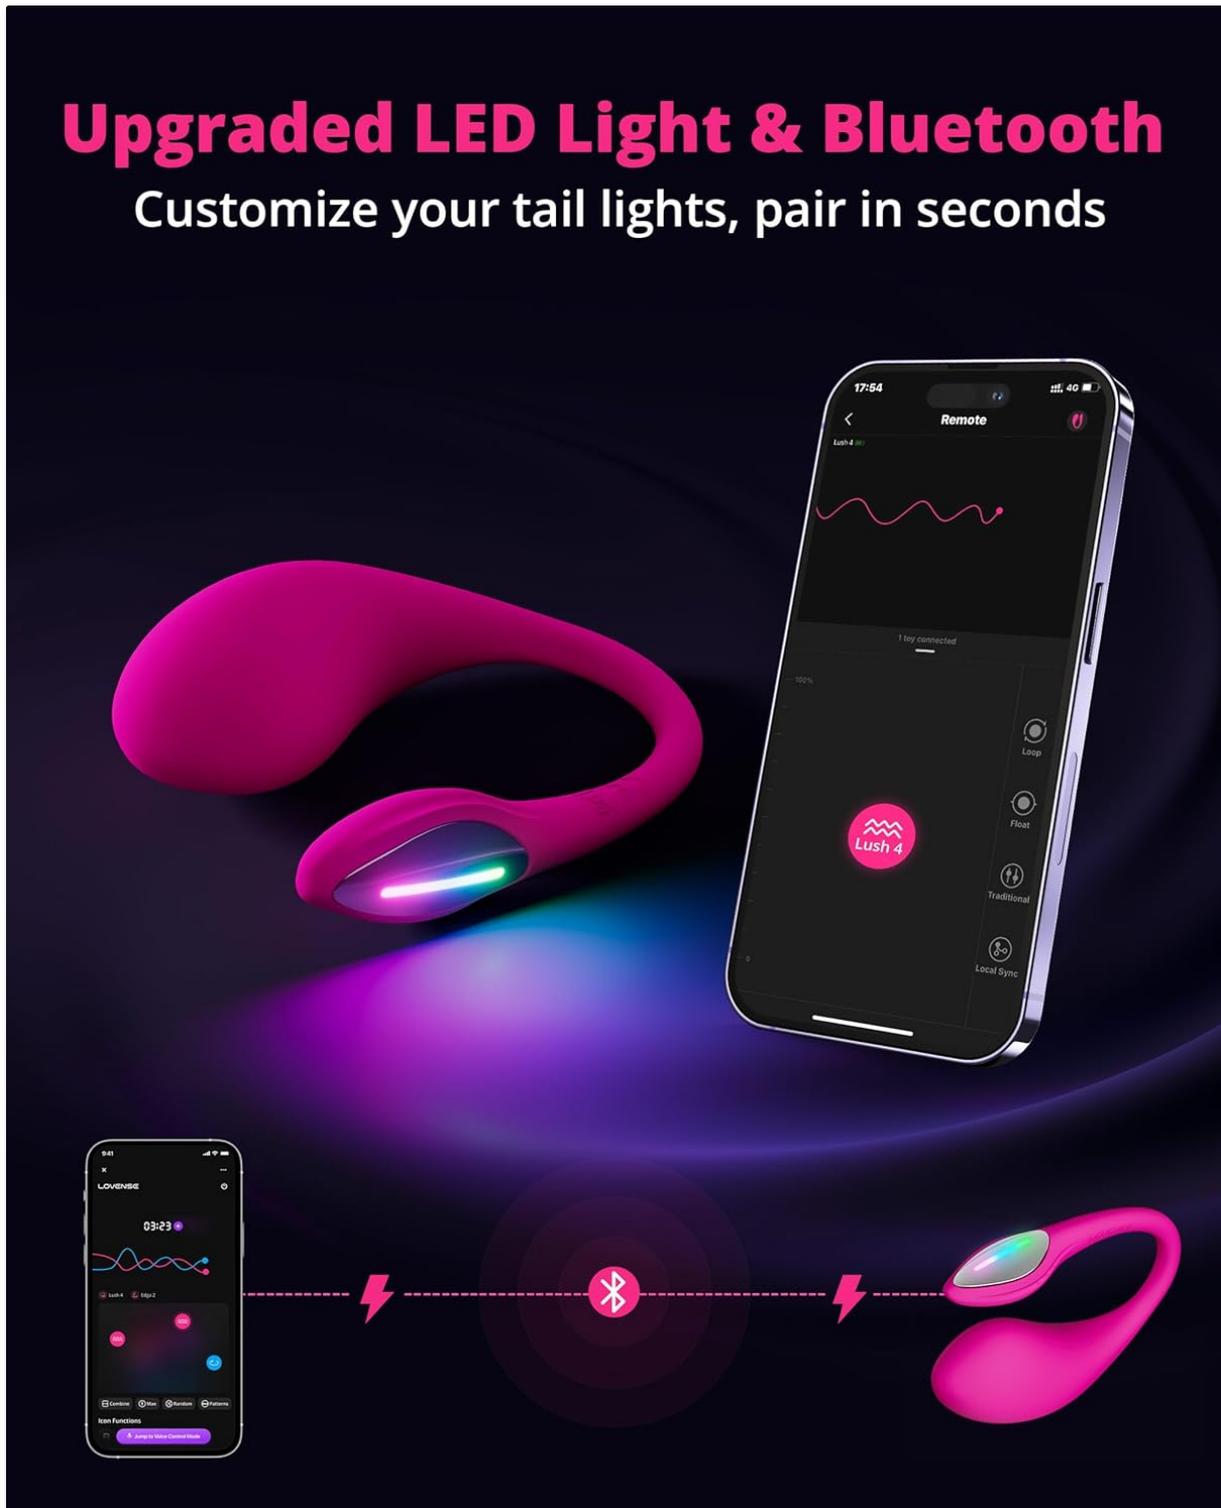


Image: The Lush 4 device connected to the LOVENSE app via Bluetooth, illustrating how to customize the dynamic LED light and control vibrations from the smartphone.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation (Manual)

- **Power ON/OFF:** Press and hold the power button on the device for 2-3 seconds.
- **Cycle Patterns (Hush 2):** Short press the power button to cycle through the 7 built-in vibration patterns.

5.2 App-Controlled Operation

The LOVENSE Remote App unlocks the full potential of your devices, offering extensive control and interactive features.

- **Remote Control:** Adjust vibration intensity and patterns directly from the app interface.
- **Custom Patterns:** Create and save your own unique vibration patterns.
- **Sound Control:** Sync vibrations to ambient sounds or your voice.
- **Music Sync:** Connect your music library and experience vibrations synchronized with your favorite tunes.
- **Long-Distance Control:** Share control of your device with a partner anywhere in the world via the app.
- **Group Control (D&S):** Participate in or host group control sessions.
- **Online Chat:** Communicate with partners or other users within the app.
- **Speed Mode:** Experience vibrations that respond to your physical activity (e.g., running).
- **Dynamic LED Light (Lush 4):** Customize the color and pattern of the LED light on your Lush 4 through the app.

LOVENSE Remote App

The advertisement features a split-screen background. On the left, a young man in a white t-shirt is looking at his smartphone, with a location pin icon and the text "New York" below him. On the right, a woman in a silver turtleneck and black lace underwear is shown from the waist up, with a location pin icon and the text "Berlin" below her. A dashed white line connects the two location pins. In the foreground, a smartphone displays the app's interface, which includes a video call with the woman, a "remote mode" button, and various control options like "Pulse", "Control Link", and "Music". To the right of the phone are two QR codes and buttons for "Download on the App Store" and "Download for Android".

Image: The LOVENSE Remote App facilitating long-distance control, demonstrating how users in different locations can interact and control devices remotely.

Intense Vibrations



Image: A visual representation of advanced LOVENSE app features, including D&S Group Control, Sync to Sounds, Online Chat, and Speed Mode, illustrating diverse interactive possibilities.



Image: The Hush 2 anal vibrator in use, with the LOVENSE app interface showing controls for intense vibrations and pattern selection.

6. MAINTENANCE

6.1 Cleaning

1. Always clean your LOVENSE devices before and after each use.
2. Wash the devices with warm water and a mild, antibacterial soap.
3. Rinse thoroughly to remove all soap residue.
4. Pat dry with a lint-free cloth or allow to air dry completely before storing.
5. Do not use harsh chemicals, alcohol-based cleaners, or petroleum-based products, as these can damage

the silicone.

6.2 Storage

- Store your devices in a clean, dry, and cool place.
- Keep them separate from other silicone products to prevent material degradation.
- Avoid direct sunlight and extreme temperatures.

6.3 Battery Care

- Charge the devices regularly, even if not used frequently, to maintain battery health.
- Avoid completely draining the battery before recharging.

7. TROUBLESHOOTING

7.1 Device Not Turning On

- **Check Battery:** Ensure the device is fully charged. Connect it to the charger for at least 30 minutes.
- **Power Button:** Press and hold the power button firmly for 2-3 seconds.

7.2 Connectivity Issues (Bluetooth)

- **Bluetooth On:** Verify that Bluetooth is enabled on your smartphone.
- **Device On:** Ensure your LOVENSE device is powered on.
- **App Permissions:** Check if the LOVENSE Remote App has Bluetooth permissions enabled in your phone settings.
- **Restart:** Try restarting both your smartphone and the LOVENSE device.
- **Re-pair:** In the app, try to forget the device and re-pair it.
- **Proximity:** Ensure your device is within close range of your smartphone.

7.3 Vibrations Weak or Inconsistent

- **Battery Level:** Low battery can affect vibration strength. Recharge the device.
- **App Settings:** Check the vibration intensity settings within the LOVENSE Remote App.
- **Firmware Update:** Ensure your device's firmware is up to date via the app.

8. SPECIFICATIONS

8.1 LOVENSE Lush 4

- **Vibration Intensity:** Up to 7,000 vibrations/min
- **Noise Level:** 36 dB (Whisper Quiet)
- **Waterproof Rating:** IPX7 (Submersible up to 1 meter for 30 minutes)
- **Connectivity:** Bluetooth, Fast & Stable
- **Charging:** Magnetic, Rapid Charging
- **Features:** App Remote Control, 10000+ Modes, Dynamic LED Light, Wearable

8.2 LOVENSE Hush 2 1.5-inch

- **Diameter:** 1.5 inches (38 mm)
- **Insertable Length:** 3.94 inches (100 mm)
- **Total Length:** 4.78 inches (121.5 mm)
- **Neck Diameter:** 0.67 inches (17 mm)
- **Base Width:** 2.64 inches (67 mm)
- **Waterproof Rating:** IPX7 (Submersible up to 1 meter for 30 minutes)
- **Charging:** Magnetic
- **Features:** Powerful Vibrations, Smooth Design, Flared Base, 7 Built-in Patterns

8.3 General

- **ASIN:** B0DW8WC52M
- **Date First Available:** February 4, 2025

9. WARRANTY INFORMATION

LOVENSE products typically come with a limited warranty covering manufacturing defects. For specific warranty terms and conditions, please refer to the official LOVENSE website or contact customer support. Keep your proof of purchase for warranty claims.

10. CUSTOMER SUPPORT

If you encounter any issues or have questions not covered in this manual, please contact LOVENSE customer support through the following channels:

- **LOVENSE Remote App:** Access support directly within the application.
- **Official Website:** Visit the LOVENSE official website for FAQs, support articles, and contact forms.
- **Email Support:** Refer to the LOVENSE website for the appropriate support email address.