

[manuals.plus](#) /› [Silver Crest](#) /› [Silver Crest 8L Air Fryer with Visual Window Instruction Manual](#)

## Silver Crest 8L Air Fryer with Visual Window

# Silver Crest 8L Air Fryer with Visual Window Instruction Manual

Model: 8L Air Fryer with Visual Window

## 1. IMPORTANT SAFETY INFORMATION

---

Please read this instruction manual carefully before using the appliance and save it for future reference. Incorrect operation due to disregard of instructions may cause harm or damage.

- Always place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow adequate air circulation.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Keep children and pets away from the appliance during operation.
- Do not block the air inlet or outlet vents during operation.
- Unplug the air fryer from the outlet when not in use and before cleaning. Allow it to cool down completely before handling.
- The appliance features an automatic shut-off function for safety.
- Use only original accessories and parts provided by the manufacturer.

## 2. PRODUCT OVERVIEW

---

### 2.1 Components



Image 1: The Silver Crest 8L Air Fryer, showcasing its sleek black design, digital control panel, and the visual window with food cooking inside.

1. **Main Unit:** Houses the heating element and fan.
2. **Control Panel:** Digital LED touch screen for setting time, temperature, and selecting presets.
3. **Cooking Basket:** Removable basket for holding food.
4. **Crisper Tray:** Inserted into the cooking basket to allow air circulation around food and drain excess oil.
5. **Visual Window:** Transparent window on the front of the basket to monitor cooking progress without opening.
6. **Handle:** Heat-resistant handle for safe removal of the cooking basket.
7. **Air Inlet/Outlet Vents:** Located on the top and back for proper air circulation.

## 2.2 Key Features

- **8L XXXL Capacity:** Ideal for preparing large meals for families or gatherings.
- **Smart Visual Cooking Window:** Allows real-time monitoring of food without interrupting the cooking process.
- **4-in-1 Cooking Presets:** Dedicated settings for Fries, Chicken, Steak, Pizza, Nuts, and Cake for convenient cooking.

- **Advanced Air Circulation Technology:** Ensures even heating and crispy results with minimal oil.
- **Energy-Efficient Design:** Designed to save energy and cook faster than conventional ovens.
- **Easy to Clean:** Food-grade stainless steel basket and crisper tray are dishwasher-safe.



**Easily Serve Your Whole Family**

*Image 2: The air fryer with its 8-liter cooking basket fully extended, highlighting its large capacity suitable for family-sized meals.*

# EVEN HEATING TECHNOLOGY

**Ensures Quick and Uniform Cooking**



360° Air Circulation



Guilt-Free Meals



Perfectly Crispy  
Every Time

*Image 3: Diagram illustrating the 360° air circulation technology within the air fryer, ensuring even heating for perfectly crispy results.*

## 3. SETUP

- Unpacking:** Carefully remove all packaging materials, including any protective films or stickers.
- Initial Cleaning:** Before first use, wash the cooking basket and crisper tray with warm soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
- Placement:** Place the air fryer on a flat, stable, heat-resistant surface. Ensure there is at least 10 cm (4 inches) of clear space around the back and sides of the appliance for proper ventilation.
- Power Connection:** Plug the power cord into a grounded electrical outlet.

## 4. OPERATING INSTRUCTIONS

### 4.1 Control Panel Overview

The air fryer features an intuitive LED touch screen control panel. The main controls include:

- **Power Button ():** Turns the appliance on/off.

- **Start/Pause Button ( )**: Starts or pauses the cooking cycle.
- **Temperature Control (°C)**: Adjusts the cooking temperature. Press to select, then use +/- to change.
- **Time Control ( )**: Adjusts the cooking time. Press to select, then use +/- to change.
- **Preset Icons**: Touch an icon (e.g., Fries, Chicken) to select a pre-programmed cooking mode.

*Note: If the display shows "-- 66 --" or similar after pressing a control, it indicates the setting is ready for adjustment. Use the +/- buttons to change the value, then press the corresponding control button again (e.g., Temperature or Time) or the Start/Pause button to confirm.*

## 4.2 Basic Operation

1. **Prepare Food**: Place your ingredients in the cooking basket, ensuring not to overfill. For best results, use the crisper tray.
2. **Insert Basket**: Slide the cooking basket firmly into the main unit.
3. **Power On**: Press the Power button ( ) to turn on the air fryer. The display will illuminate.
4. **Set Temperature**: Touch the Temperature Control icon (°C). The temperature display will flash. Use the '+' and '-' buttons to adjust the desired temperature.
5. **Set Time**: Touch the Time Control icon ( ). The time display will flash. Use the '+' and '-' buttons to adjust the desired cooking time.
6. **Start Cooking**: Press the Start/Pause button ( ) to begin the cooking cycle.
7. **Monitoring**: Use the visual window to observe the cooking progress.
8. **Shaking Food**: For even cooking, especially with smaller items, pull out the basket halfway through the cooking time, shake the contents, and then reinsert the basket. The air fryer will resume cooking automatically.
9. **Completion**: The air fryer will beep when the cooking time is complete and automatically shut off. Carefully pull out the basket using the handle.
10. **Serve**: Remove food from the basket. Use heat-resistant tongs or utensils.

## 4.3 Using Preset Modes

The air fryer comes with several convenient preset cooking modes:

1. Follow steps 1-3 from Basic Operation.
2. **Select Preset**: Touch the desired preset icon on the control panel (e.g., Fries, Chicken). The air fryer will automatically set the optimal time and temperature for that food type.
3. **Adjust (Optional)**: You can manually adjust the time or temperature even after selecting a preset by touching the respective control icon and using the '+' and '-' buttons.
4. **Start Cooking**: Press the Start/Pause button ( ) to begin cooking.

*Refer to the recipe section or online resources for specific cooking times and temperatures for various foods.*

## 5. MAINTENANCE AND CLEANING

---

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.


### 5.1 Cleaning Instructions

1. **Unplug and Cool**: Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Basket and Crisper Tray**:

- Wash with warm soapy water using a soft sponge.
- Avoid abrasive tools or harsh scrubbers to protect the non-stick coating.
- For stubborn residue, soak the basket and tray in warm soapy water for 10-15 minutes before cleaning.
- These parts are dishwasher-safe.
- Ensure they are thoroughly dried before next use.

3. **Main Unit:** Wipe the exterior with a damp cloth. Do not use abrasive cleaners or immerse the unit in water.

4. **Heating Element:** Use a soft brush to gently remove any food residue from the heating element inside the air fryer.

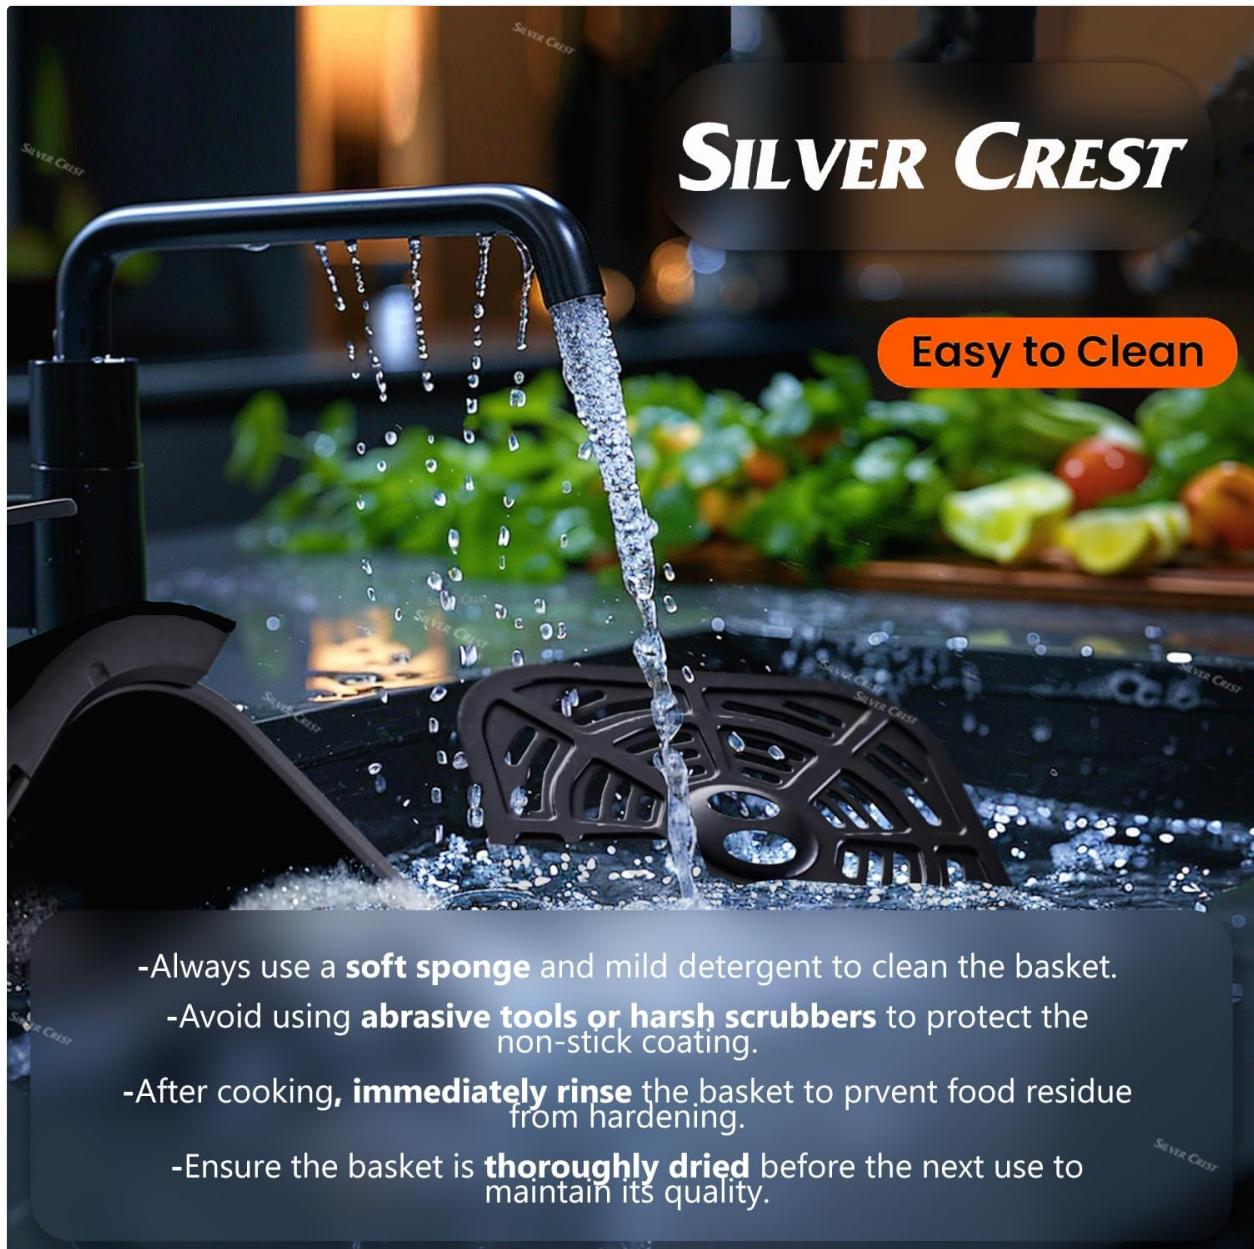

*Image 4: Visual guide demonstrating the ease of cleaning the air fryer basket and crisper tray under running water with a soft sponge.*

## 5.2 Recommended Accessories for Easier Cleaning

To prevent food residue from sticking and simplify cleanup, consider using:

- **Paper Liners:** Disposable and convenient for grease-free cooking.
- **Baking Paper (Parchment):** A versatile option for cooking and cleanup.

- **Aluminum Foil:** Ideal for heavier or messier dishes.
- **Silicone Baskets:** Reusable and dishwasher-safe.

## SIMPLIFY YOUR AIR FRYER ROUTINE

### WE RECOMMEND USING:

**-Paper Liners:**

Disposable and easy to use for grease-free cooking.



**-Baking Paper (Parchment):**

A versatile option for cooking and cleanup.



**-Aluminum Foil:**

Ideal for heavier or messier dishes.

**-Silicone Baskets:**

Reusable and dishwasher-safe.

***These liners prevent food residue from sticking to the basket, making cleaning quick and effortless.***

*Image 5: Recommendations for using paper liners, baking paper, aluminum foil, or silicone baskets to simplify air fryer cleaning.*

## 6. TROUBLESHOOTING

If you encounter any issues with your air fryer, please refer to the following table:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; Power button not pressed; Power outage.	Ensure the power cord is securely plugged into a working outlet. Press the Power button. Check your household circuit breaker.

Problem	Possible Cause	Solution
Food is not cooked evenly.	Basket is overfilled; Food not shaken; Incorrect temperature/time.	Do not overfill the basket. Shake the basket contents halfway through cooking. Adjust temperature and time as needed.
White smoke coming from the appliance.	Grease residue from previous use; Fatty food cooking.	Clean the basket and crisper tray thoroughly after each use. For fatty foods, consider using a liner or adding a small amount of water to the bottom of the outer pan to prevent smoke.
Display shows "-- 66 --" or similar when setting temperature/time.	This is the prompt for adjustment.	Use the '+' and '-' buttons to change the value. Press the corresponding control button (Temperature or Time) or the Start/Pause button to confirm your selection.
Timer flashes continuously after setting.	Setting not confirmed; Appliance waiting for start command.	After setting the time, press the Start/Pause button () to begin the cooking cycle.

## 7. SPECIFICATIONS

Feature	Detail
Brand	Silver Crest
Model	8L Air Fryer with Visual Window
Capacity	8 Liters
Color	Black
Product Dimensions (D x W x H)	25 cm x 28 cm x 29 cm
Item Weight	4.62 kg
UPC	643985921801
ASIN	B0DW96TYVT

## Compact Size And Sleek Design Look Great On The Countertop



Image 6: Diagram showing the dimensions of the Silver Crest 8L Air Fryer: 25 cm depth, 28 cm width, and 29 cm height.

### 8. WARRANTY AND SUPPORT

This Silver Crest Air Fryer is designed for reliable performance. For any warranty claims or technical support, please refer to the retailer where the product was purchased or contact Silver Crest customer service through their official channels.

Please retain your proof of purchase for warranty purposes.

<p><b>SILVERCREST®</b></p> <p>10,000mAh POWER BANK SPBP 4 A2</p> <p>10,000mAh POWER BANK Operatörünüz tarafından onaylıdır.</p> <p>POWE BANK - 10,000 mAh Birçok farklı teknolojiyi destekler.</p> <p>POWE BANK - 10,000 mAh Birçok farklı teknolojiyi destekler.</p> <p>POWE BANK - 10,000 mAh Birçok farklı teknolojiyi destekler.</p> <p>IAN 345992_2004</p>	<p><a href="#">SILVER CREST 10,000mAh Power Bank (SPBP 4 A2) - User Manual &amp; Safety Guide</a></p> <p>Official user manual and safety instructions for the SILVER CREST 10,000mAh Power Bank (Model SPBP 4 A2). Learn about intended use, technical specifications, operation, troubleshooting, and warranty.</p>
<p><b>SILVERCREST®</b></p> <p></p> <p><a href="#">PDF ONLINE</a></p> <p>CELLULITE MASSAGER SMG 2.4 D2</p> <p>CELLULITE MASSAGER Operatörünüz tarafından onaylıdır.</p> <p>ELEKTRİKİYİ APARAT ZİYADE MASA ÜZERİ CELULİTA MASAJ'E ZA CRUET OPERATORI MASAJ'E ZA CRUET OPERATORI ANTİZİYİTİTİK MASA ÜZERİ ANTİZİYİTİTİK MASA ÜZERİ ZİYADE MASA ÜZERİ ZİYADE MASA ÜZERİ</p> <p>IAN 444858_2307</p>	<p><a href="#">SILVER CREST SMG 2.4 D2 Cellulite Massager Operating Instructions</a></p> <p>Discover the features and safe usage of the SILVER CREST SMG 2.4 D2 Cellulite Massager with these comprehensive operating instructions. Learn about charging, application, cleaning, and disposal.</p>
<p></p> <p><a href="#">PDF ONLINE</a></p> <p>IAN 444315_2307</p>	<p><a href="#">SILVER CREST HG09121 Sandwichmaker, Waffelautomat &amp; Grill Bedienungsanleitung</a></p> <p>Umfassende Bedienungsanleitung für den SILVER CREST HG09121 3-in-1 Sandwichmaker, Waffelautomat und Grill, inklusive Bedienung, Sicherheitshinweisen und Rezepten.</p>
<p><b>SILVERCREST®</b></p> <p></p> <p><a href="#">PDF ONLINE</a></p> <p>CORDLESS HAND-HELD VACUUM CLEANER SAS 7.4 LI F4</p> <p>AKKUKÄYTÖINEN RIKKAIMURI</p> <p>AKKUMULATÖRİ RIKKAIMURI</p> <p>AKKU-HANDSTAUBSAUGER RIKKAIMURI</p> <p>IAN 460626_2407</p>	<p><a href="#">SILVER CREST SAS 7.4 LI F4 Akkukäyttöinen Rikkaimuri – Lyhyt Käyttöohje</a></p> <p>Lyhyt käyttöohje SILVER CREST SAS 7.4 LI F4 -akkukäyttöiselle rikkaimurille. Sisältää perustiedot, turvallisuusohjeet ja linkin täydelliseen käyttöoppaaseen osoitteessa <a href="http://www.lidl-service.com">www.lidl-service.com</a>.</p>
<p><b>SILVERCREST®</b></p> <p></p> <p><a href="#">PDF ONLINE</a></p> <p>HAND-HELD WET &amp; DRY VACUUM CLEANER SAS 7.4 LI D3</p> <p>KÉZI PORSZÍVÓ HASZNÁLATI úTMUTATÓ</p> <p>KÉZI PORSZÍVÓ HASZNÁLATI úTMUTATÓ</p> <p>KÉZI PORSZÍVÓ HASZNÁLATI úTMUTATÓ</p> <p>KÉZI PORSZÍVÓ HASZNÁLATI úTMUTATÓ</p> <p>IAN 346141_2004</p>	<p><a href="#">SILVER CREST SAS 7.4 LI D3 Kézi porszívó Használati útmutató</a></p> <p>Ez a dokumentum részletes útmutatást és biztonsági előírásokat tartalmaz a SILVER CREST SAS 7.4 LI D3 típusú kézi nedves és száraz porszívóhoz. Ismerje meg a készülék funkcióit, a biztonságos használatot, a karbantartást és a hibaelhárítást. További információkért látogasson el a <a href="http://www.lidl-service.com">www.lidl-service.com</a> weboldalra.</p>
<p><b>SILVERCREST®</b></p> <p></p> <p><a href="#">PDF ONLINE</a></p> <p>WET &amp; DRY HAND-HELD VACUUM CLEANER SAS 7.4 LI C2</p> <p>WET &amp; DRY HAND-HELD VACUUM CLEANER</p> <p>WET &amp; DRY HAND-HELD VACUUM CLEANER</p> <p>IAN 331174_1907</p>	<p><a href="#">SILVER CREST SAS 7.4 LI C2 Wet &amp; Dry Handheld Vacuum Cleaner: User Manual &amp; Operating Guide</a></p> <p>Comprehensive operating instructions and user manual for the SILVER CREST SAS 7.4 LI C2 Wet &amp; Dry Handheld Vacuum Cleaner. Learn about features, safety, usage, charging, and maintenance.</p>

