

[Manuals.plus](#) /

› [Dometic](#) /

› Dometic FlyTec FT200 RH Vers. Instruction Manual

Dometic 9104117296

Dometic FlyTec FT200 RH Vers. Instruction Manual

Model: 9104117296

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of the Dometic FlyTec FT200 RH Vers. fly screen. Please read this manual thoroughly before installation and use to ensure proper function and safety. Keep this manual for future reference.

SAFETY INFORMATION

Always observe the following safety precautions:

- Ensure all components are securely fastened before use.
- Do not attempt to modify the product. Modifications can lead to malfunction and void the warranty.
- Keep small parts away from children to prevent choking hazards.
- Use appropriate tools for installation to avoid damage to the product or injury.
- If any part is damaged, do not use the product. Contact Dometic support for replacement parts.

WHAT'S IN THE BOX

Carefully unpack all components and check against the list below. If any parts are missing or damaged, contact your supplier immediately.



Image: All components included in the Dometic FlyTec FT200 RH Vers. package. This includes the main retractable screen unit, two separate rail sections (top and bottom), and a small plastic bag containing screws and other small fasteners necessary for installation.

- Main Fly Screen Assembly (1 unit)
- Top Rail (1 unit)
- Bottom Rail (1 unit)
- Fasteners and Screws (1 bag)
- Instruction Manual (this document)

SETUP AND INSTALLATION

Follow these steps for proper installation of your Dometic FlyTec FT200 RH Vers. fly screen. It is recommended to have two people for certain steps.

1. **Prepare the Installation Area:** Ensure the mounting surface is clean, dry, and free from obstructions. Measure the opening to confirm compatibility with the fly screen dimensions.
2. **Attach Rails:** Secure the top and bottom rails to the designated positions within the frame. Use the provided screws and ensure they are level and aligned. Refer to the specific mounting points on your RV or vehicle.
3. **Mount Main Screen Assembly:** Carefully position the main fly screen assembly into the installed rails. Slide it into place, ensuring it fits snugly and operates smoothly within the tracks.
4. **Secure the Assembly:** Fasten the main assembly to the rails and frame using the remaining screws. Double-check all connections for stability.
5. **Test Operation:** Gently extend and retract the fly screen to ensure it moves freely without catching or resistance. Adjust alignment if necessary.



Image: The Dometic FlyTec FT200 RH Vers. fly screen fully assembled and ready for use. This image demonstrates the sleek, compact design of the screen when installed, highlighting its retractable mesh and sturdy frame.

OPERATING INSTRUCTIONS

The Dometic FlyTec FT200 RH Vers. fly screen is designed for simple and efficient operation.

- **To Open:** Gently pull the handle of the fly screen across the opening. The screen will extend smoothly along its tracks.
- **To Close:** Guide the handle back to its starting position. The screen will retract into its housing.
- **Locking Mechanism (if applicable):** Some models may feature a locking mechanism to keep the screen in a desired position. Consult your specific model's features for details.

***Note:** Do not force the screen if it encounters resistance. Check for obstructions in the tracks.*

MAINTENANCE

Regular maintenance will ensure the longevity and optimal performance of your fly screen.

- **Cleaning the Mesh:** Use a soft, damp cloth with mild soap and water to gently wipe down the screen mesh. Avoid harsh chemicals or abrasive cleaners.
- **Cleaning the Tracks:** Periodically clean the top and bottom tracks to remove dust, dirt, and debris that could impede smooth operation. A vacuum cleaner with a brush attachment can be useful.
- **Lubrication:** If the screen movement becomes stiff, apply a small amount of silicone-based lubricant to the tracks. Do not use oil-based lubricants as they can attract dirt.
- **Inspection:** Regularly inspect the mesh for tears or holes and the frame for any signs of damage or loose fasteners. Address any issues promptly.

TROUBLESHOOTING

If you encounter issues with your Dometic FlyTec FT200 RH Vers. fly screen, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Screen does not retract fully.	Debris in tracks, damaged spring mechanism.	Clean tracks thoroughly. If problem persists, contact support.
Screen is difficult to open/close.	Tracks are dirty or dry, misalignment.	Clean and lubricate tracks. Check for proper alignment during installation.
Mesh is torn or damaged.	Physical damage.	Mesh cannot be repaired. Contact Dometic for replacement parts or service.

If the problem persists after attempting these solutions, please contact Dometic customer support.

SPECIFICATIONS

Attribute	Detail
Model	Dometic FlyTec FT200 RH Vers.
Item Model Number	9104117296
Brand	Dometic
Item Weight	10.91 pounds (approx. 4.95 kg)
Package Dimensions	72.44 x 7.87 x 4.33 inches (approx. 184 x 20 x 11 cm)
Fit Type	Universal Fit

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your purchase or visit the official Dometic website. Dometic products are known for their high quality and durable construction.

For technical support, replacement parts, or service inquiries, please contact Dometic customer service:

- **Website:** www.dometic.com
- **Contact Information:** Refer to the "Contact Us" section on the Dometic website for phone numbers and email support in your region.