

## AKAI AQUA7004NV

# AKAI AQUA7004NV Front-Load Washing Machine User Manual

Model: **AQUA7004NV**

Capacity: **7 kg** | Spin Speed: **1000 rpm**

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. This manual provides important information regarding the safe installation, use, and maintenance of your washing machine.

- **Electrical Safety:** Ensure the appliance is connected to a properly grounded power outlet. Do not use extension cords or multiple socket adapters. Disconnect from power before any cleaning or maintenance.
- **Water Safety:** Ensure water inlet and drain hoses are correctly installed to prevent leaks. Do not operate the machine if there is a water leak.
- **Child Safety:** Keep children and pets away from the appliance during operation. The child safety lock function should be activated to prevent accidental program changes or door opening.
- **Installation:** The appliance must be installed on a firm, level surface. Remove all transport bolts before first use to prevent damage.
- **General Use:** Do not wash items that are soiled with flammable substances. Do not attempt to repair the appliance yourself; contact qualified service personnel.

## 2. PRODUCT OVERVIEW

Familiarize yourself with the components of your AKAI AQUA7004NV washing machine.



**Image 1:** Front view of the AKAI AQUA7004NV washing machine. It features a white casing, a central circular door for loading laundry, a detergent dispenser drawer on the top left, and a control panel with a program selection dial and function buttons on the top right.

## Control Panel Description

The control panel allows you to select wash programs and customize settings.

- **Program Dial:** Used to select the desired wash program. Programs include:

- Rapid 15'
  - Rapid 40'
  - Shirts
  - Mixed
  - Coloreds 40°C
  - Hand Wash/Delicates
  - Spin
  - Rinse
  - Cotton 90°C
  - Cotton (general)
  - Cotton 60°C
  - Eco 40-60
  - Cotton 20°C
  - Easy Care
  - Wool
- **Function Buttons:** These buttons allow for additional customization:
    - **Delay:** Sets a delayed start time for the wash cycle.
    - **Temperature:** Adjusts the wash water temperature.
    - **Prewash:** Adds a pre-wash phase to the selected program.
    - **Spin Exclusion:** Disables the final spin cycle.
    - **Start/Pause:** Initiates or pauses the selected wash program.

### 3. INSTALLATION AND SETUP

---

Proper installation is crucial for the optimal performance and longevity of your washing machine.

#### 3.1 Unpacking

1. Remove all packaging materials.
2. Locate and remove the transport bolts from the rear of the machine. These bolts secure the drum during transit and must be removed before operation. Keep them for future transport.

#### 3.2 Positioning

- Place the washing machine on a firm, level floor.
- Adjust the leveling feet at the bottom of the machine until it is perfectly stable and level.
- Ensure adequate ventilation around the appliance.

#### 3.3 Water Connection

- Connect the water inlet hose to a cold water tap with a 3/4 inch thread. Ensure the connection is tight to prevent leaks.
- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during draining. The drain hose should not be kinked or obstructed.

#### 3.4 Electrical Connection

- Plug the power cord into a grounded electrical outlet (220-240 V / 50Hz).
- Do not use adapters or extension cords.

### 3.5 First Use

Before washing clothes for the first time, run an empty wash cycle to clean the drum and remove any manufacturing residues.

1. Add a small amount of detergent to the main wash compartment.
2. Select a high-temperature program (e.g., Cotton 60°C or 90°C).
3. Start the cycle without any laundry.

## 4. OPERATING INSTRUCTIONS

---

Follow these steps for effective and efficient washing.

### 4.1 Loading Laundry

- Sort laundry by fabric type, color, and degree of soiling.
- Open the washing machine door and load items loosely into the drum, ensuring not to overload. The maximum load capacity is 7 kg.
- Close the door firmly.

### 4.2 Adding Detergent and Softener

- Pull out the detergent dispenser drawer.
- Add detergent to the main wash compartment (usually marked with 'II' or a large 'A').
- If using pre-wash, add detergent to the pre-wash compartment (usually marked with 'I' or a small 'A').
- Add fabric softener to the compartment marked with a flower symbol. Do not exceed the 'MAX' fill line.
- Gently push the dispenser drawer back into place.

### 4.3 Selecting a Program

- Turn the program dial to select the desired wash program based on your laundry type. Refer to the 'Programs Overview' section for details.

### 4.4 Adjusting Program Options

- After selecting a program, use the function buttons to customize settings such as temperature, pre-wash, or spin exclusion.
- To set a delayed start, press the 'Delay' button repeatedly until the desired delay time is displayed.

### 4.5 Starting a Cycle

- Press the 'Start/Pause' button to begin the wash cycle. The indicator light will illuminate.

### 4.6 Interrupting/Changing a Cycle

- To pause a running cycle, press the 'Start/Pause' button.
- To change a program, first pause the machine, then turn the program dial to 'Off' and select a new

program. You may need to drain the water if the new program requires it.

### 4.7 End of Cycle

- The machine will signal the end of the cycle.
- Wait for the door lock to release before opening the door.
- Remove laundry promptly to prevent creasing.

## 5. PROGRAMS OVERVIEW

This table provides a general guide to the available wash programs.

Program	Description	Typical Use
Rapid 15'	Quick wash cycle for lightly soiled items.	Small loads, refresh clothes.
Rapid 40'	Fast wash for moderately soiled items.	Daily wear, mixed fabrics.
Shirts	Specific program for shirts to minimize creasing.	Cotton and synthetic shirts.
Mixed	For washing mixed fabrics together.	General mixed laundry.
Coloreds 40°C	Maintains color vibrancy for colored garments at 40°C.	Colored cottons and synthetics.
Hand Wash/Delicates	Gentle cycle for delicate items or those requiring hand washing.	Lingerie, silk, very delicate fabrics.
Spin	Drains water and performs a spin cycle.	Removes excess water from hand-washed items.
Rinse	Performs a rinse cycle.	Adds an extra rinse, or rinses hand-washed items.
Cotton 90°C	High-temperature wash for heavily soiled white cottons.	Towels, bed linen, heavily soiled whites.
Cotton	Standard wash for cotton items.	Everyday cotton garments.
Cotton 60°C	Wash for cotton items at 60°C.	Moderately soiled cottons.
Eco 40-60	Energy-efficient program for normally soiled cottons at 40-60°C.	Energy-saving wash for cottons.
Cotton 20°C	Low-temperature wash for cottons.	Lightly soiled cottons, energy saving.
Easy Care	For synthetic and mixed fabrics that require less ironing.	Synthetics, easy-care garments.
Wool	Gentle program specifically designed for wool items.	Woolen garments.

## 6. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

### 6.1 Cleaning the Detergent Dispenser

- Pull out the dispenser drawer completely.
- Remove any removable parts and rinse them under running water.
- Clean the inside of the dispenser housing with a brush.
- Reassemble and reinsert the drawer.

### 6.2 Cleaning the Drum

- Periodically run an empty wash cycle at a high temperature (e.g., Cotton 90°C) with a descaling agent or washing machine cleaner to remove detergent residues and limescale.

### 6.3 Cleaning the Door Seal

- Wipe the rubber door seal after each wash to remove lint and moisture, preventing mold and odors.

### 6.4 Cleaning the Drain Filter

- Locate the drain filter, usually at the bottom front of the machine.
- Place a shallow container underneath to catch any residual water.
- Carefully unscrew and remove the filter.
- Clean the filter of any lint, coins, or foreign objects.
- Rinse the filter under running water and screw it back in securely.

### 6.5 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

## 7. TROUBLESHOOTING

Before contacting service, try these solutions for common issues.

Problem	Possible Cause	Solution
Machine does not start	No power, door not closed, program not selected, Start/Pause not pressed.	Check power supply, ensure door is latched, select program, press Start/Pause.
Water not filling	Water tap closed, inlet hose kinked, water pressure too low.	Open water tap, straighten hose, check water supply.
Water not draining	Drain hose kinked or blocked, drain filter blocked.	Straighten drain hose, clean drain filter.
Excessive vibration/noise	Transport bolts not removed, machine not level, uneven load.	Remove transport bolts, adjust leveling feet, redistribute laundry.

Problem	Possible Cause	Solution
Detergent residues in dispenser	Insufficient water pressure, dispenser blocked.	Check water pressure, clean detergent dispenser.

## 8. TECHNICAL SPECIFICATIONS

Detailed specifications for the AKAI AQUA7004NV washing machine.

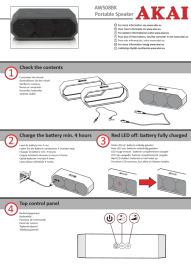
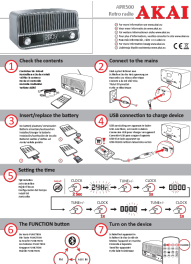
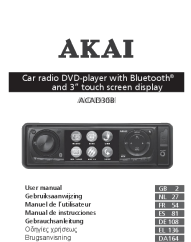
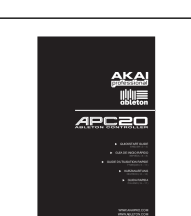


Feature	Specification
Power Supply	220-240 V / 50Hz
Current	10 A
Load Capacity	7 kg
Drum Diameter	44 cm
Spin Speed	1000 rpm
Noise Level (Washing)	58 dB
Noise Level (Spinning)	76 dB
Water Consumption per Cycle	45 liters
Energy Consumption (per 100 cycles)	69 kWh
Number of Programs	15
Dimensions (WxDxH)	59.7 x 49.7 x 84.5 cm
Net Weight	55.2 kg
Energy Efficiency Class	D

## 9. WARRANTY AND SUPPORT

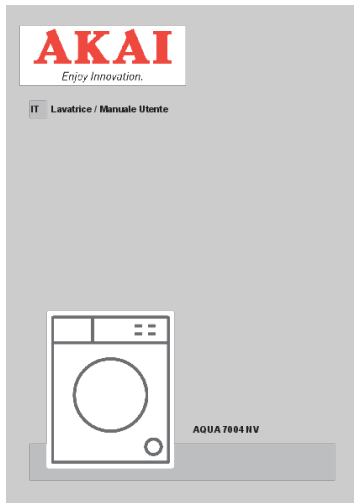 
For warranty information, please refer to the documentation provided at the time of purchase. The warranty period and terms may vary depending on your region and retailer.

If you encounter any issues that cannot be resolved using the troubleshooting guide, or for technical assistance, please contact AKAI customer support or your authorized service center. Contact details can typically be found on the AKAI official website or in your purchase documentation.

Related Documents - AQUA7004NV

	<p><a href="#">AKAI AWS08BK Portable Speaker: Quick Start Guide and Specifications</a></p> <p>Get started with your AKAI AWS08BK Portable Speaker. This guide covers setup, charging, Bluetooth and AUX connections, control panel functions, and detailed specifications.</p>
	<p><a href="#">AKAI APR500 Retro Radio Quick Start Guide and Specifications</a></p> <p>Get started with your AKAI APR500 Retro Radio. This guide provides instructions on setup, basic functions, alarm settings, Bluetooth connectivity, and technical specifications.</p>
	<p><a href="#">AKAI ACAD30B Car Radio DVD Player with Bluetooth &amp; 3" Touchscreen User Manual</a></p> <p>This user manual provides comprehensive instructions for the AKAI ACAD30B car radio DVD player. Learn about its features including Bluetooth connectivity, DVD/CD/USB/SD/MMC playback, 3-inch touchscreen operation, installation, and troubleshooting.</p>
	<p><a href="#">Akai APC20 Ableton Controller Quickstart Guide</a></p> <p>Get started with your Akai APC20 Ableton Controller. This guide provides essential information on setup, connection, and basic operation with Ableton Live.</p>
	<p><a href="#">AKAI DV-R3400SS Service Manual: Technical Specifications, Parts, and Schematics</a></p> <p>Official service manual for the AKAI DV-R3400SS DVD Home Theatre System, featuring detailed specifications, performance data, electrical parts lists, wiring diagrams, schematics, and exploded views for repair and maintenance.</p>
	<p><a href="#">Akai AKSCART88 Replacement Remote Control Guide</a></p> <p>A comprehensive guide comparing the original Akai AKSCART88 remote control buttons with their replacements, detailing functional changes and compatibility for users.</p>





[\[pdf\]](#)

AQUA 7004 NV IT Lavatrice Manuale Utente Schede tecniche it Page 2 Icona Tipo Significato

PERICOLO Rischio di lesioni gravi o morte RISCHIO DI FOLGORAZIONE ELETTRICA manuale uso

lavatrice Akai AQUA7004NV schede lavatrici |||

IT Lavatrice / Manuale Utente AQUA 7004 NV Grazie per aver scelto questo prodotto.

Questo manuale utente contiene importanti informazioni di sicurezza e istruzioni sull'utilizzo e manutenzione del vostro apparecchio. Prima di utilizzare il vostro apparecchio vi preghiamo di leggere questo manuale ...

lang:it score:22 filesize: 5.71 M page\_count: 33 document date: 2020-10-30