

[Manuals.plus](#) /

› [Ninja](#) /

› Ninja Countertop Oven Double Stack XL & Air Fryer with Pro Cook System DCT651 Instruction Manual

Ninja DCT651

Ninja Countertop Oven Double Stack XL & Air Fryer with Pro Cook System DCT651 Instruction Manual

Model: DCT651

INTRODUCTION

Welcome to the instruction manual for your Ninja Countertop Oven Double Stack XL & Air Fryer with Pro Cook System, Model DCT651. This versatile appliance is designed to enhance your cooking experience with its innovative features and multiple cooking functions. Please read this manual thoroughly before operating the appliance to ensure safe and efficient use. Keep this manual for future reference.



Image: The Ninja Countertop Oven Double Stack XL, showcasing its dual oven capabilities with food cooking in both compartments simultaneously.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons. Always ensure the appliance is placed on a stable, heat-resistant surface. Do not immerse the cord, plugs, or main housing in water or other liquid. Close supervision is necessary when any appliance is used by or near children. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Refer all servicing to an authorized service facility.

- Always unplug the appliance from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for anything other than its intended use.
- Do not cover the air vents while the appliance is operating.

WHAT'S INCLUDED

Your Ninja Countertop Oven Double Stack XL & Air Fryer comes with the following components:

- 2 Sheet Pans

- 2 Wire Racks
- 1 Air Fry Basket
- 1 Crumb Tray
- Pro Cook Thermometer
- Quick Start Guide
- 15 Recipe Guide



Elevated design

The dual-cooking design handles 2 meals at once, making it perfect for entertaining.

Image: Various accessories included with the oven, such as sheet pans, wire racks, and an air fry basket.

PRODUCT FEATURES

The Ninja Countertop Oven Double Stack XL is equipped with advanced features for versatile cooking:

- **SMART FINISH with DualZone Technology:** Synchronize both independent ovens to cook two different meals in two different ways, ensuring they finish at the same time.



Smart Finish™ with DualZone™ Technology

Sync both independent ovens to cook 2 meals or 2 appetizers, 2 different ways that finish at the same time.

Image: The oven with two distinct dishes cooking in separate compartments, highlighting the Smart Finish and DualZone capabilities.

- **FLAVORSEAL TECHNOLOGY:** Two separate ovens prevent flavor transfer between dishes, maintaining the distinct taste of each meal.
- **FLEXDOOR:** This innovative door design allows you to access just the top oven for smaller items or open the full door to utilize both ovens for larger meals.



FlexDoor™

Unlock 2 ovens in 1. Use the top zone for appetizers, sides or desserts, or open the entire door to access your full meal underneath.

Image: The FlexDoor feature, demonstrating how the top oven can be opened independently for convenience.

- **PRO COOK SYSTEM:** Achieve precise doneness from rare to well-done with the integrated Pro Cook System and Auto Temp Detect Intelligence, eliminating guesswork.



Pro Cook System

Get the perfect doneness from rare to well at the touch of a button—no guesswork required.

Image: The Pro Cook System in action, with the integrated thermometer monitoring the internal temperature of food.

- **12-IN-1 FUNCTIONALITY:** Offers 12 versatile cooking programs: Bake, Broil, Reheat, Keep Warm, Toast, Bagel, Air Fry, Convection Bake, Pizza, Air Roast, Whole Roast, and Dehydrate.
- **XL FAMILY-SIZED CAPACITY:** Designed to fit up to 6 lbs of wings, 6 salmon fillets, a 4.5-pound chicken, family-size sheet pan meals, and up to 6 slices of bread.



Mix & match

Make an app, side, or dessert while your main cooks.

Image: A large roasted chicken occupying the bottom oven, illustrating the generous XL family-sized capacity.

- **INTUITIVE DISPLAY:** Easily set time and temperature, and track cooking progress in both ovens with a user-friendly digital display and control knob.



Intuitive display

Easily set time/temp and track cooking progress in both ovens.

Image: A detailed view of the intuitive control panel, showing the digital display and various function buttons.

SETUP

Before first use, ensure all packaging materials are removed from the appliance and accessories. Wash all removable parts (sheet pans, wire racks, air fry basket, crumb tray) in warm, soapy water, then rinse and dry thoroughly. Wipe the interior and exterior of the main unit with a damp cloth. Place the oven on a clean, dry, level surface, ensuring adequate clearance (at least 6 inches) from walls and other appliances for proper ventilation.

OPERATING INSTRUCTIONS

General Operation

1. Plug the power cord into a wall outlet. The display will illuminate.
2. Press the Power button () to turn the unit on. The display will show "HELLO".
3. Use the control panel on the right side of the appliance to select your desired cooking function.
4. The control knob allows you to adjust temperature, time, and other settings. Press the knob to confirm selections.

5. Press the Start/Stop button to begin or pause cooking.

Using the Top Oven

The top oven is ideal for quick meals and snacks. Press the **TOP** button to activate the top oven functions:

- **BROIL:** For quick browning and melting.
- **TOAST:** For perfectly toasted bread. Adjust shade and number of slices.
- **BAGEL:** To toast bagels to your preference.
- **BAKE:** For baking smaller items.
- **REHEAT:** To warm up leftovers.
- **KEEP WARM:** To maintain food temperature after cooking.

Using the Bottom Oven

The bottom oven is suitable for larger meals and air frying. Press the **BOTTOM** button to activate the bottom oven functions:

- **WHOLE ROAST:** For roasting large cuts of meat or poultry.
- **AIR ROAST:** For crispy exteriors and juicy interiors on roasted foods.
- **AIR FRY:** For crispy results with little to no oil. Use the air fry basket.
- **CONVECTION BAKE:** For even baking results with fan-assisted heat.
- **PIZZA:** Optimized settings for cooking pizzas.
- **DEHYDRATE:** For drying fruits, vegetables, and making jerky.

Smart Finish with DualZone Technology

To use Smart Finish, select a function and settings for the top oven, then press the **SMART FINISH** button. Select a function and settings for the bottom oven. The oven will automatically adjust cooking times so both meals finish simultaneously. The display will indicate when each zone is preheating and cooking.

Using the Pro Cook Thermometer

Insert the Pro Cook Thermometer into the thickest part of your food, avoiding bone. Plug the thermometer into the port on the side of the oven. Select a cooking function and desired doneness level. The oven will automatically cook until the target internal temperature is reached, then switch to Keep Warm mode.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your appliance.

- Always unplug the oven and allow it to cool completely before cleaning.
- **Exterior:** Wipe the exterior with a damp cloth. Do not use abrasive cleaners or scouring pads.
- **Interior:** Wipe the interior walls with a damp cloth and mild soap. For stubborn stains, use a non-abrasive liquid cleanser or spray.
- **Accessories:** Wash sheet pans, wire racks, and the air fry basket in warm, soapy water. The crumb tray should be emptied and cleaned regularly to prevent grease buildup.
- Do not immerse the main unit in water.

TROUBLESHOOTING

If you encounter any issues with your Ninja Countertop Oven, please refer to the following common troubleshooting tips:

- **Appliance not turning on:** Ensure the power cord is securely plugged into a working electrical outlet. Check your circuit breaker.

- **Food not cooking evenly:** Ensure food is placed evenly on the rack/pan. For best results, preheat the oven before adding food.
- **Smoke or odor during first use:** This is normal and should dissipate quickly. It is due to the burning off of manufacturing residues.
- **Error codes on display:** Unplug the unit, wait 5 minutes, then plug it back in. If the error persists, contact customer support.

For more detailed troubleshooting or persistent issues, please contact Ninja Customer Support.

SPECIFICATIONS

Brand	Ninja
Model Name	Ninja DCT651
Color	Stainless Steel
Special Features	Adjustable Rack, Auto Cook Menu, Automatic Shut-Off, Large Capacity, Programmable
Control Type	Button Control
Included Components	Air Fry Basket, Baking Pan, Crumb Tray, Pro Cook Thermometer, Wire Rack
Power Source	AC adapter
Number of Shelves	2
Size	18.6 in L x 16.39 in W x 13.26 in H
Item Weight	31.3 pounds
Manufacturer	SharkNinja

WARRANTY AND SUPPORT

Your Ninja Countertop Oven Double Stack XL & Air Fryer is covered by a manufacturer's warranty. For specific warranty details, please refer to the warranty card included with your product or visit the official Ninja website. For customer support, product registration, or to order replacement parts, please visit the Ninja support portal or contact their customer service line. This product is also eligible for optional extended protection plans, including 3-Year and 4-Year Protection Plans, and a Complete Protect monthly plan. Please refer to your purchase documentation for details on these additional options.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question