

[Manuals+](#)

[Q & A](#) | [Deep Search](#) | [Upload](#)

OCCVDFVEE-GRAYOAK-55CM/22IN

Rotatable Wood Turntable Round Lazy Susan Instruction Manual

Brand: Generic | Model: OCCVDFVEE-GRAYOAK-55CM/22IN

PRODUCT OVERVIEW

This Rotatable Wood Turntable, also known as a Lazy Susan, is designed to enhance your dining experience by providing an easy and elegant way to share food at your table. Crafted from high-quality wood boards, it features a smooth surface, rounded edges, and resistance to heat and scratches. Its silent rotating base ensures smooth 360° rotation for convenient access to dishes.



Image: The Rotatable Wood Turntable in a gray oak finish, showcasing its round design and smooth surface. This image provides a general view of the product.

KEY FEATURES

- **High-quality Material:** Constructed from durable wood boards with a smooth surface, rounded edges, and resistance to heat and scratches.
- **Multi-functional Design:** Ideal for various settings including hotels, restaurants, kitchens, birthday parties, and family dinners.
- **Stable and Silent Operation:** Features a rotating base that allows for easy, quiet, and smooth 360° rotation. Equipped with non-slip pads to prevent sliding.
- **360° Rotation:** Provides flexible, smooth, and silent manual rotation, designed to be anti-tilting for enhanced stability.
- **Easy to Install:** No assembly required; simply place it on your dining table for immediate use.

- **Durable**
- **Wear-resistant**
- **Easy to Clean**
- **Thickened Material**



Image: A close-up view illustrating the layered construction and material properties, emphasizing durability, wear-resistance, ease of cleaning, and thickened material.



Image: A stack of different Lazy Susan finishes, including wood grain and marble patterns, demonstrating the range of aesthetic options available.

SETUP

The Rotatable Wood Turntable is designed for immediate use and requires no assembly. Simply remove the product from its packaging and place it directly onto the desired flat surface, such as a dining table or kitchen counter. Ensure the surface is stable and level before placing the turntable.

OPERATING INSTRUCTIONS

To operate the Lazy Susan, gently rotate the top plate in either direction. The integrated silent base allows for smooth and quiet 360° rotation, making it easy for everyone at the table to access shared dishes without needing to reach across. Place dishes evenly on the surface for balanced rotation.

360° Rotatable Tray



Image: The Lazy Susan in action on a dining table, illustrating its 360-degree rotation capability with directional arrows.

MAINTENANCE AND CARE

To ensure the longevity and optimal performance of your Rotatable Wood Turntable, follow these maintenance guidelines:

- **Cleaning:** Wipe the surface with a soft, damp cloth. For stubborn stains, a mild soap solution can be used, followed by wiping with a clean, dry cloth. Avoid abrasive cleaners or harsh chemicals.
- **Scratch Resistance:** While the product is designed to be scratch-resistant, avoid dragging sharp or heavy objects across the surface to prevent potential damage.
- **Heat Resistance:** The turntable is heat-resistant, but it is recommended to use placemats or trivets under extremely hot dishes to protect the finish over time.
- **Storage:** Store the turntable in a dry place away from direct sunlight and extreme temperature fluctuations.



Easy to clean
Just wipe it down



Scratch resistant
Wear-resistant



Anti-scalding
no deformation

Image: A visual representation of the turntable's properties, including ease of cleaning (water droplets), scratch resistance (pen mark), and anti-scalding capabilities (lighter flame).

TROUBLESHOOTING

If you encounter any issues with your Rotatable Wood Turntable, please refer to the following common solutions:

- **Turntable does not rotate smoothly:**
 - Ensure the turntable is placed on a completely flat and level surface.
 - Check that there are no obstructions or debris under the base or along the rotating mechanism.
 - Distribute the weight of items on the turntable evenly. Uneven weight distribution can affect rotation.
- **Turntable makes noise during rotation:**
 - Verify that the turntable is clean and free of dust or food particles that might interfere with the silent mechanism.
 - Ensure the turntable is not overloaded beyond its recommended capacity.

SPECIFICATIONS

| Attribute | Detail |
|--------------|---|
| Product Name | Rotatable Wood Turntable Round Lazy Susan |

| Attribute | Detail |
|-------------------------------|-----------------------------------|
| Model Number | OCCVDFVEE-GRAYOAK-55CM/22IN |
| Material | Wood |
| Color | Gray Oak (as per current variant) |
| Shape | Round |
| Thickness | 1.6 cm |
| Size (Current Variant) | 55cm / 22in |
| Item Weight | 9.92 pounds (approx. 4500 Grams) |
| Assembly Required | No |
| Number of Pieces | 1 |

Product Dimensions



Image: A diagram illustrating the various available sizes of the Lazy Susan and recommended clearance (20-25cm) from the edge of the dining table for optimal use.

Product Display



Image: A collage showing the Lazy Susan in different dining table settings and color variants, demonstrating its versatility and aesthetic integration.

WARRANTY INFORMATION

Specific warranty details for this product are typically provided by the seller at the time of purchase. Please refer to your purchase documentation or contact the seller directly for information regarding warranty coverage, terms, and conditions.

CUSTOMER SUPPORT

For any questions, concerns, or assistance with your Rotatable Wood Turntable, please contact the seller directly through the platform where the purchase was made. Provide your order number and a detailed description of your inquiry to facilitate a prompt response.

