

Lawdiey KB1353

Lawdiey Electric Water Gun Instruction Manual

Model: KB1353

Brand: Lawdiey

1. INTRODUCTION

Thank you for choosing the Lawdiey Electric Water Gun. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new water gun. Please read it thoroughly before use.

Important Safety Information

- Always use responsibly.
- Do not aim at people's eyes or face.
- This product is splash-resistant, not waterproof. Do not immerse the gun body in water.
- Recommended for ages 8 years and up.



Image: Important safety warnings for the water gun, showing not to aim at faces and not to submerge the gun in water.

2. WHAT'S IN THE BOX

Your Lawdiey Electric Water Gun package includes the following components:

- 2 x Electric Water Gun
- 2 x Water Bottle (Drum Magazine)
- 2 x Green Dot Holographic Scope
- 2 x Muzzle Lights Caps
- 2 x USB Charge Cable for Water Gun Battery
- 2 x USB Charge Cable for Muzzle Lights Caps



Image: A visual representation of all components included in the product package.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment at the bottom of the water gun's handle.
2. Insert the provided battery into the compartment, ensuring proper alignment.
3. Secure the battery cover.

3.2 Water Tank Attachment & Filling

1. Attach the 800ml drum magazine (water bottle) to the designated port at the bottom of the water gun. Twist until secure.
2. For automatic water refill: Ensure the muzzle light device is removed. Submerge the muzzle of the water gun into a water source (e.g., pool, bucket). Press the trigger forward to activate the automatic suction, which will fill the water

tank.

3. Alternatively, you can unscrew the drum magazine, fill it directly with water, and then reattach it.



Image: Instructions for automatic water refill, highlighting the forward trigger press and the water suction mechanism.

3.3 Attaching Accessories (Scope, Muzzle Light)

1. To attach the Green Dot Holographic Scope: Loosen the screw on the side of the scope, slide it onto the rail on top of the water gun, and then tighten the screw to secure it. The scope can be turned on by twisting its base to activate the green dot.
2. To attach the Muzzle Light Cap: Gently push the orange piece into the barrel of the water gun, then twist the muzzle light cap onto the orange piece until secure.
3. Charging the Muzzle Light Cap: Use the smaller USB charge cable to charge the muzzle light cap. A red light indicates charging, and it will turn off when fully charged.

Accurate Target Locking



Image: The green dot holographic sight aids in accurate targeting.

3.4 Installation & Charging Guide Video

Video: A detailed guide on how to install the components and charge the water gun, provided by the seller.

4. OPERATION

4.1 Powering On/Off

Once the battery is installed, the water gun is ready for use. There is no separate power button; pulling the trigger activates the gun.

4.2 Firing Modes

The Lawdiey Electric Water Gun features an automatic firing mechanism. Simply pull the trigger to initiate a continuous stream of water. The gun can shoot water up to a range of 26-32 feet, providing ample distance for water battles.



Image: The water gun's high-powered performance allows for shooting up to 26-32 feet.

4.3 Muzzle Light & Holographic Sight

The built-in muzzle flame light illuminates when firing, adding a dynamic visual effect. The green dot holographic sight assists in aiming, enhancing precision during play.



Image: The water gun provides excitement in various outdoor scenes.

5. MAINTENANCE

- After each use, empty any remaining water from the tank.
- Wipe down the exterior of the water gun with a dry cloth.
- Ensure the muzzle light cap is removed before automatic water refill to prevent damage.
- Store the water gun in a cool, dry place away from direct sunlight when not in use.
- Regularly charge the battery and muzzle light cap to ensure optimal performance.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Water gun not firing.	Battery is low or not installed correctly.	Charge the battery or ensure it is properly inserted.
Automatic refill not working.	Muzzle light cap is still attached; muzzle not fully submerged.	Remove muzzle light cap. Ensure muzzle is fully submerged and trigger is pressed forward.
Muzzle light not working.	Muzzle light battery is low or not charged.	Charge the muzzle light cap using its dedicated USB cable.
Water gun leaks.	Water tank not securely attached.	Ensure the drum magazine is twisted on tightly.

7. SPECIFICATIONS

Feature	Detail
Model Number	KB1353
Product Dimensions	14.37 x 4.72 x 22.05 inches
Item Weight	2.88 pounds
Water Tank Capacity	800ml
Max Shooting Range	26-32 feet
Battery Life (Continuous Play)	Over 30 minutes
Recommended Age	8 years and up
Country of Origin	China

8. WARRANTY AND SUPPORT

For any questions, concerns, or warranty inquiries regarding your Lawdiey Electric Water Gun, please contact the manufacturer or seller directly through your purchase platform. Please refer to your purchase documentation for specific warranty terms and contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question