



Manuals.plus /

› MONOZEL /

› MONOZEL VC28 Handheld Vacuum User Manual

MONOZEL VC28

MONOZEL VC28 Handheld Vacuum User Manual

Model: VC028

INTRODUCTION

Thank you for choosing the MONOZEL VC28 Handheld Vacuum. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new device. Please read this manual thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.

- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

PRODUCT COMPONENTS

The MONOZEL VC28 Handheld Vacuum comes with the following components:



Image: The MONOZEL VC28 Handheld Vacuum in blue, shown with its various accessories including a charging cable, wall adapter, crevice tool, brush tool, and extension tubes. The image also highlights the washable HEPA filter and the vacuum's powerful suction.

- VC28 Handheld Vacuum Unit
- HEPA Filter (pre-installed)
- Accessory Kit (includes crevice tool, brush tool, extension tubes)
- USB Charging Cable
- Wall Adapter

SETUP

1. Unboxing and Inspection

Carefully remove all components from the packaging. Inspect the vacuum and accessories for any signs of damage. If any parts are missing or damaged, contact customer support.

2. Initial Charging

1. Connect the USB charging cable to the charging port on the vacuum.
2. Plug the wall adapter into a standard electrical outlet.
3. Allow the vacuum to charge completely before first use. The battery indicator on the vacuum will show charging status and full charge.
4. A full charge typically takes approximately 3-4 hours.

3. Attaching Accessories

To attach an accessory (e.g., crevice tool, brush tool, or extension tube), align the accessory with the vacuum's nozzle and push firmly until it clicks into place. To remove, pull the accessory away from the nozzle.

OPERATING INSTRUCTIONS

1. Powering On/Off

- To turn on the vacuum, press the power button located on the handle.
- To turn off the vacuum, press the power button again.

2. Using Different Modes

The VC28 Handheld Vacuum may feature multiple suction modes. Refer to the display on the vacuum for current mode indication. Press the mode button (if present, often integrated with the power button or a separate button nearby) to cycle through available suction settings (e.g., ECO, MAX).

3. Effective Cleaning with Attachments

- **Crevice Tool:** Ideal for reaching tight spaces, corners, and between cushions.
- **Brush Tool:** Suitable for cleaning delicate surfaces, upholstery, and dislodging stubborn dirt.
- **Extension Tubes:** Use with other attachments to extend reach for higher or lower areas.

For optimal performance, ensure the dust cup is not overfilled and the filter is clean before each use.

MAINTENANCE

1. Emptying the Dust Cup

1. Ensure the vacuum is turned off.
2. Locate the dust cup release button, typically near the nozzle. Press the button to detach the dust cup.
3. Hold the dust cup over a trash receptacle and empty its contents.

4. Reattach the dust cup to the vacuum until it clicks securely into place.

2. Cleaning the HEPA Filter

Regular cleaning of the HEPA filter is crucial for maintaining suction power and air quality.

1. With the dust cup detached, carefully remove the HEPA filter.
2. Tap the filter gently over a trash can to remove loose dust and debris.
3. If necessary, rinse the filter under cool running water until the water runs clear **Do not use hot water or detergents.**
4. Allow the filter to air dry completely for at least 24 hours before reinserting it into the vacuum **Do not use the vacuum with a wet filter.**
5. Reinsert the dry HEPA filter and reattach the dust cup.



Image: A close-up view of the washable HEPA filter, shown being rinsed with water, illustrating the cleaning process. This filter is designed to capture fine dust particles and can be reused after proper drying.

3. General Cleaning

Wipe the exterior of the vacuum with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure no water enters the charging port or other electrical components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is depleted.	Charge the vacuum fully.
	Power button not pressed correctly.	Ensure the power button is pressed firmly.
Low suction power.	Dust cup is full.	Empty the dust cup.
	HEPA filter is clogged or wet.	Clean and thoroughly dry the HEPA filter. Replace if necessary.
	Nozzle or attachment is blocked.	Remove any obstructions from the nozzle or attachments.
Vacuum stops during operation.	Battery is depleted.	Recharge the vacuum.
	Overheating protection activated.	Turn off the vacuum and allow it to cool down for at least 30 minutes before resuming use. Check for blockages.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	MONOZEL
Model Name	VC028
Special Feature	Portable
Filter Type	HEPA Filter
Included Components	Accessory Kit
Cordless	Yes
Capacity	0.26 Liters
Form Factor	Handheld
Color	Green
Product Dimensions	12"L x 3.8"W x 3.8"H
Item Weight	1 pounds
UPC	768825499330

WARRANTY INFORMATION

MONOZEL products are manufactured to high-quality standards. This product is covered by a limited warranty against manufacturing defects from the date of purchase. Please retain your proof of purchase for warranty claims. Specific warranty terms and conditions may vary by region. For detailed warranty information, please refer to the documentation included with your purchase or contact customer support.

CUSTOMER SUPPORT

For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact MONOZEL customer support. Please have your model number (VC028) and proof of purchase ready when contacting support.

Contact Information:

Website: www.monozel.com (*Hypothetical link, as none provided*)

Email: support@monozel.com (*Hypothetical email, as none provided*)

We are committed to providing excellent service and support for your MONOZEL product.