

LEGO 75639

LEGO ONE PIECE Pirate Ship Going Merry (Model 75639) Instruction Manual

Building Set for Ages 10+

INTRODUCTION

This instruction manual provides detailed guidance for assembling and understanding the features of your LEGO ONE PIECE Pirate Ship Going Merry (Model 75639) building set. Please follow the steps carefully to ensure correct construction and full enjoyment of the product.

PRODUCT OVERVIEW

The LEGO ONE PIECE Pirate Ship Going Merry set allows you to construct a detailed replica of the iconic ship from the Netflix Live Action Series ONE PIECE. This set includes the ship itself and five minifigures of the main characters.

Key Features:

- Authentically detailed Pirate Ship Going Merry model.
- Includes 5 LEGO ONE PIECE minifigures: Monkey D. Luffy, Zoro, Nami, Usopp, and Sanji.
- Features a master mast, sail, a sheep figurehead, and a rudder.
- Under-deck areas include a crew cabin, kitchen, food storage, poster storage, and an accessory workshop.
- Equipped with a cannon at the front of the ship.



Image: The complete LEGO ONE PIECE Pirate Ship Going Merry set, including the packaging box and the assembled ship with minifigures.

SETUP AND ASSEMBLY

Assembly of the LEGO ONE PIECE Pirate Ship Going Merry is required. The set contains 1376 pieces and is recommended for ages 10 and up. Detailed step-by-step instructions are provided in the included building guide. For an immersive building experience, you can also download the LEGO Builder app, which offers digital tools to zoom in, rotate models in 3D, save building kits, and track progress.

Assembly Tips:

- Organize pieces by color and size before starting.
- Follow the numbered bags in sequence.
- Ensure all connections are firm to maintain structural integrity.



10+



1376



Sätt segel mot äventyr på piratskeppet Going Merry

Image: A child engaged in assembling the LEGO ONE PIECE Going Merry ship, demonstrating the building process.

OPERATING AND PLAY FEATURES

Once assembled, the Going Merry offers various interactive play features:

- **Minifigure Placement:** Position the included minifigures on different parts of the ship, such as Luffy on the sheep figurehead, Zoro on deck, or Usopp in the crow's nest.
- **Cannon Function:** The cannon at the front of the ship can be used for imaginative play scenarios.
- **Interior Access:** The ship's structure allows access to the under-deck areas, including the crew cabin, kitchen, and storage spaces, for enhanced storytelling.



Image: The Monkey D. Luffy minifigure positioned on the iconic sheep figurehead at the bow of the Going Merry.



Image: The Sanji minifigure interacting with the detailed kitchen area located within the ship's interior.

Ikoniskt skepp med många rum för fantasifull lek



Image: A view of the interior sections of the Going Merry, showcasing the crew cabin and kitchen details.

MINIFIGURES

The set includes five detailed minifigures, allowing you to recreate scenes from ONE PIECE:

- **Monkey D. Luffy:** The captain, known for his straw hat.
- **Roronoa Zoro:** The swordsman, with his signature three swords.
- **Nami:** The navigator, often depicted with her staff.
- **Usopp:** The sharpshooter, identifiable by his long nose.
- **Sanji:** The chef, with his distinctive curly eyebrow.



Image: The five included minifigures: Monkey D. Luffy, Roronoa Zoro, Nami, Usopp, and Sanji, ready for adventure.

MAINTENANCE

To keep your LEGO ONE PIECE Pirate Ship Going Merry set in optimal condition:

- **Cleaning:** Dust regularly with a soft brush or cloth. For deeper cleaning, use a mild soap solution and lukewarm water. Rinse thoroughly and air dry. Avoid harsh chemicals or abrasive materials.
- **Storage:** Store the assembled model or individual pieces in a cool, dry place away from direct sunlight to prevent discoloration or warping.
- **Handling:** Handle the model with care, especially when moving it, to prevent pieces from detaching.

TROUBLESHOOTING

If you encounter any issues during assembly or play:

- **Missing Pieces:** If you find any missing pieces, please refer to the LEGO customer service website for replacement parts.
- **Assembly Errors:** Carefully review the instruction manual or the LEGO Builder app to identify and correct any misplaced pieces. Disassemble only the necessary sections to fix errors.

- **Loose Connections:** Ensure all studs are fully pressed into their corresponding holes to create secure connections.

SPECIFICATIONS

Product Dimensions	48 x 37.8 x 9.4 cm; 1.92 kg
Item Model Number	75639
Number of Pieces	1376
Manufacturer Recommended Age	10 years and up
Assembly Required	Yes
Material Type	Plastic
Color	Multicolor
Release Date	1 Sept. 2025



Image: A visual representation of the assembled LEGO Going Merry ship with its approximate dimensions (34 cm / 13.5

in. height, 20 cm / 8 in. width).

WARRANTY AND SUPPORT

For warranty information, replacement parts, or further assistance, please visit the official LEGO website or contact LEGO customer service. Keep your proof of purchase for any warranty claims.