



[Manuals.plus](#) /

› [Homtone](#) /

› Homtone 2 Flavor Ice Cream Maker ICE-2410 User Manual

Homtone ICE-2410

Homtone 2 Flavor Ice Cream Maker User Manual

Model: ICE-2410

INTRODUCTION

Thank you for choosing the Homtone 2 Flavor Ice Cream Maker, Model ICE-2410. This appliance is designed to produce delicious ice cream, sorbet, and gelato with ease, featuring a dual-bowl system for making two flavors simultaneously. Please read this manual thoroughly before operation to ensure safe and efficient use.

Built In 250W Compressor No Pre-Freezing

Two loading hoppers
1.3QT x 2=2.6QT



Figure 1: Homtone Ice Cream Maker Overview. This image shows the internal compressor and the two 1.3-quart loading hoppers, highlighting the no pre-freezing feature.

SAFETY INSTRUCTIONS

- Always ensure the appliance is unplugged before cleaning or when not in use.
- Do not immerse the motor base in water or other liquids.
- Keep hands and utensils out of the freezer bowl during operation to prevent injury and damage to the unit.
- Do not operate the appliance with a damaged cord or plug.
- This appliance is for household use only.
- Ensure proper ventilation around the unit during operation.

PRODUCT COMPONENTS

The Homtone ICE-2410 Ice Cream Maker includes the following components:

- Main Unit with Compressor
- Two Removable Stainless Steel Mixing Bowls (1.3QT each)
- Two BPA-Free Mixing Paddles
- Two Transparent Lids
- Measuring Cup
- Scraper



Figure 2: Product Components and Dimensions. The image displays the ice cream maker with its dimensions (36.5cm/14.4in width, 29cm/11.4in depth, 39.5cm/15.6in height) and included accessories: two 1.2L mixing bowls, a measuring cup, two paddles, and a scraper.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash the mixing bowls, paddles, lids, measuring cup, and scraper with warm, soapy water. Rinse thoroughly and dry completely. The main unit should be wiped with a damp cloth.

3. **Placement:** Place the ice cream maker on a stable, flat, and dry surface. Ensure there is adequate ventilation around the unit.
4. **Assemble:** Insert the mixing bowls into their respective compartments in the main unit. Place the mixing paddles inside the bowls, ensuring they are properly seated on the central shaft.

OPERATING INSTRUCTIONS

General Operation Steps

1. **Prepare Ingredients:** Ensure your ice cream or sorbet mixture is chilled according to your recipe.
2. **Pour Ingredients:** Pour the prepared ingredients into the mixing bowls. Do not overfill; leave space for expansion as the mixture freezes.
3. **Secure Lids:** Place the transparent lids on top of the mixing bowls.
4. **Select Mode:** Turn the control knob(s) to the desired mode. The Homtone ICE-2410 offers three modes:
 - **Ice Cream Mode:** For churning and freezing your mixture into ice cream, sorbet, or gelato.
 - **Mix Only Mode:** For mixing ingredients without freezing.
 - **Cool Only Mode:** To keep the finished product cold after churning.
5. **Start Churning:** The machine will begin churning and freezing. The built-in compressor ensures fast freezing without pre-freezing the bowls.
6. **Monitor Progress:** Churning typically takes less than an hour. The consistency will gradually thicken.
7. **Serve or Store:** Once the desired consistency is reached, turn the knob to stop. Remove the lids and bowls, then serve immediately or transfer to an airtight container for storage in the freezer.



Figure 3: Basic Operation Steps. This image illustrates the four main steps: 1. Pour ingredients into the bowl, 2. Put the lid on, 3. Rotate the button to ice cream mode, 4. Manually turn the knob to stop and enjoy. A note advises keeping production time under 80 minutes to prevent condensation and to use the cool mode or turn off after ice cream is formed.

Dual Flavor Production

The Homtone ICE-2410 allows you to make two different flavors simultaneously. Each bowl has an independent control knob.

- Prepare two different mixtures.
- Pour each mixture into its respective bowl.
- Set the control knob for each bowl to the desired mode (e.g., Ice Cream Mode for both).
- Monitor each flavor independently.

Two Independent Knob Control Systems

One machine with two bowls, two different flavors of ice cream can be made at the same time in one working cycle.



Figure 4: Independent Control System. This image highlights the two independent knob control systems, allowing for two different flavors of ice cream to be made in one working cycle. It also shows the icons for Mixing Only, Stop, Cooling Only, and Ice Cream Mode.

Keep Cool Function

After the ice cream has reached its desired consistency, you can turn the control knob to the "Cool Only" mode. This feature helps maintain the cold temperature of the ice cream, preventing it from melting for an extended period.

Keep Cold For Long Time

After the ice cream is formed, you can turn the knob to the cooling only mode to prevent the ice cream from melting and keep the taste better



Figure 5: Keep Cold Function. This image illustrates the machine's ability to keep ice cream cold for a long time after it's formed, preventing melting and preserving taste. Vent holes are also visible on the side of the unit.

Video Demonstrations

Homtone 2 Flavor Ice Cream Maker Overview

Your browser does not support the video tag.

Video 1: This video provides an overview of the Homtone 2 Flavor Ice Cream Maker, showcasing its design and key features.

Making Two Flavors Simultaneously

Your browser does not support the video tag.

Video 2: This video demonstrates the process of making two different ice cream or sorbet flavors at the same time using the dual-bowl functionality.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your ice cream maker.

1. **Unplug:** Always unplug the appliance from the power outlet before cleaning.
2. **Disassemble:** Remove the lids, mixing paddles, and mixing bowls from the main unit.
3. **Wash Removable Parts:** The stainless steel mixing bowls and BPA-free mixing paddles are dishwasher safe. Alternatively, wash them by hand with warm, soapy water, rinse thoroughly, and dry completely.
4. **Clean Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. Do not use abrasive cleaners or scourers. Never immerse the main unit in water.
5. **Storage:** Ensure all parts are completely dry before reassembling or storing the appliance. Store in a cool, dry place.

TROUBLESHOOTING

If you encounter any issues with your Homtone Ice Cream Maker, please refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outlet issue.	Ensure the power cord is securely plugged into a working outlet.
Ice cream is not freezing properly.	Ingredients not cold enough; overfilled bowl; incorrect mode selected.	Pre-chill ingredients; do not overfill bowls; ensure "Ice Cream Mode" is selected.
Loud noise during operation.	Paddles not properly seated; foreign object in bowl.	Check that paddles are correctly installed. Ensure no foreign objects are in the bowls.
Motor stops during churning.	Mixture too thick; motor overheating protection activated.	Ensure mixture consistency is appropriate. If motor overheats, unplug and let it cool down before restarting.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Homtone
Model Number	ICE-2410
Capacity	2.6 Quarts (2 x 1.3 Quarts)
Power Consumption	250W
Special Features	2 Flavor, Instant Cool, LCD Screen, Built-in Compressor (No Pre-freezing Necessary), Stainless Steel
Material	Plastic, Stainless Steel
Included Components	1 ice cream maker machine, 1 measuring cup, 1 scrapper, 2 bowls

Feature	Detail
Dimensions (L x W x H)	20"L x 15"W x 20"H
Operation Mode	Automatic
Product Care Instructions	Dishwasher Safe (removable parts)



Figure 6: Detailed Product Information. This image provides a summary of the ice cream maker's specifications, including capacity, voltage, power, noise level, and dimensions.

WARRANTY AND SUPPORT

The Homtone 2 Flavor Ice Cream Maker (Model ICE-2410) is backed by a **2-year warranty**. Additionally, lifetime technical support is provided to ensure your satisfaction.

For warranty claims, technical assistance, or any product-related inquiries, please contact Homtone customer support through the retailer's platform or the official Homtone website.