



[Manuals.plus](#) /

> [Quicent](#) /

> Quicent 10x10 Heavy Duty Pop-Up Canopy Tent Instruction Manual (Model CT1203AS)

Quicent CT1203AS

Quicent 10x10 Heavy Duty Pop-Up Canopy Tent Instruction Manual

Model: CT1203AS

INTRODUCTION

This manual provides detailed instructions for the safe and effective setup, operation, and maintenance of your Quicent 10x10 Heavy Duty Pop-Up Canopy Tent. Please read all instructions carefully before assembly and use to ensure proper function and longevity of your product.

SAFETY INFORMATION

- Always ensure the canopy is properly anchored using the provided sandbags, stakes, and guy lines, especially in windy conditions.
- Do not use the canopy in high winds exceeding 35 mph. Disassemble and store the canopy during severe weather.
- Keep the canopy away from heat sources and open flames to prevent fire.
- Always follow the manufacturer's instructions for setup, use, and dismantling.
- Two people are recommended for safe and efficient setup.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- 1x Top Cover
- 1x Wheeled Bag
- 3x Sidewalls
- 1x Awning
- 4x Sand bags
- Stakes and Guy Lines (quantity as supplied)

SETUP INSTRUCTIONS

Step 1: Unpack and Position the Frame

1. Remove the frame from the wheeled bag and place it in the desired setup location.
2. With a partner, gently pull the outer legs of the frame outwards, partially extending the frame.

Step 2: Attach the Canopy Top

1. Unfold the top cover and place it over the partially extended frame. Ensure the corners are aligned with the frame's corners.
2. Secure the canopy top to the frame using the hook-and-loop fasteners or ties provided.

Step 3: Fully Extend the Frame and Adjust Height

1. From opposite sides, push up on the lower truss bars until the frame fully locks into place.
2. Extend the telescopic legs to the desired height. The canopy features a three-level adjustable height mechanism. Press the push-button sliders on each leg to adjust.



Image: The canopy tent fully set up, showing its dimensions and three-level height adjustment. The image highlights the 10x10 ft base and adjustable heights of 120", 124", and 128".

Step 4: Secure the Canopy

Proper anchoring is critical for stability and safety.

Securing on Grass:

1. Fix the legs with ground stakes through the footpads.
2. Attach wind ropes to the tent's corners and secure them with stakes into the ground at an angle.
3. Add sandbags to the legs for additional weight and stability.

Securing on Concrete or Hard Surfaces:

1. Add weight to the legs using the provided sandbags.
2. Alternatively, tie the tent's wind ropes to heavy objects such as buckets filled with sand or rocks.

Your browser does not support the video tag.

Video: Demonstrates how to secure the canopy tent on both grass and concrete surfaces using stakes, sandbags, and heavy objects. This

video is provided by Brandline (the seller).

Step 5: Attach Sidewalls and Awning (Optional)

1. Attach the three removable sidewalls using the hook-and-loop fasteners or zippers.
2. Install the awning by attaching it to the designated points on the frame. Note that the awning requires assembly of multiple bars, nuts, screws, and rotating handles each time it is used.



Image: Illustrates the versatility of the canopy tent with different sidewall configurations: no sides, one side, and two sides, demonstrating its adaptability for various scenarios.

OPERATING INSTRUCTIONS

Using Sidewalls and Awning

- The three removable sidewalls and one removable awning provide flexible coverage.
- Sidewalls can be attached or removed as needed for privacy, wind protection, or shade.

- The sidewalls feature roll-up mesh windows for ventilation. Roll up the mesh windows to allow fresh air in, and roll them down to keep rain out.



4 in 1
 Suitable for various scenarios

Image: Depicts the canopy tent with its mesh windows. One panel shows the window open for air circulation, and another shows it closed for protection against rain.

Adjusting Height

The canopy height can be adjusted to three different levels by pressing the push-button sliders on each leg. Ensure all legs are adjusted to the same height for stability.

MAINTENANCE

Cleaning the Canopy Fabric

- Clean the canopy fabric with mild soap and water. Do not use harsh detergents or abrasive cleaners.
- Rinse thoroughly and allow the fabric to air dry completely before storage to prevent mildew.

Frame Care

- Inspect the alloy steel frame regularly for any signs of damage or wear.
- Ensure all moving parts are clean and free of debris. Lubricate joints if necessary.

Storage

- Before storing, ensure the canopy fabric and frame are completely dry.
- Fold the canopy neatly and place it back into the wheeled bag for protection.
- Store in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Canopy Instability

- **Issue:** Canopy feels unstable or sways in light wind.
- **Solution:** Ensure all legs are fully extended and locked. Verify that all ground stakes are firmly in place and guy lines are taut. Add sandbags to each leg for increased stability.

Water Pooling on Top

- **Issue:** Water collects on the canopy top during rain.
- **Solution:** Ensure the canopy top is properly stretched and secured to the frame, creating sufficient tension to allow water runoff. Adjust the height if necessary to create a slight slope.

Difficulty Extending/Retracting Frame

- **Issue:** Frame is stiff or difficult to open/close.
- **Solution:** Ensure no fabric is caught in the frame's moving parts. Apply a silicone-based lubricant to the joints if needed. Always use two people for assembly and disassembly to distribute force evenly.

SPECIFICATIONS

Brand	Quictent
Model Number	CT1203AS
Item Type Name	Heavy Duty Pop Up Canopy Tent
Material	Alloy Steel (Frame), 600D PU Coated Fabric (Cover)
Color	Pink
Item Weight	51.2 Pounds
Item Dimensions (L x W x H)	115"L x 115"W x 128"H (approx. 10x10 ft base)
Ultraviolet Light Protection	UPF 50+
Water Resistance Level	Waterproof
Required Assembly	Yes

WARRANTY INFORMATION

Your Quiccent 10x10 Heavy Duty Pop-Up Canopy Tent comes with the following warranty coverage:

- **Frame Warranty:** 1-year limited warranty.
- **Cover Warranty:** Half-year (6 months) limited warranty.

Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal use. It does not cover damage from improper setup, extreme weather conditions, misuse, or normal wear and tear.

CUSTOMER SUPPORT

For any questions, assistance, or warranty claims regarding your Quiccent canopy tent, please contact Brandline customer service:

- **Seller:** Brandline
- **Amazon Store:** [Visit the Quiccent Store on Amazon](#)
- **Customer Service:** Refer to your purchase platform for direct contact options or use the "Ask a question" feature on the product page.

Brandline is committed to providing quality service and support for your product.

