

Cooler Master MAP-T6PN-225PK-R1

Cooler Master Hyper 612 APEX CPU Air Cooler Instruction Manual

Model: MAP-T6PN-225PK-R1

1. INTRODUCTION

Thank you for choosing the Cooler Master Hyper 612 APEX CPU Air Cooler. This manual provides essential information for the proper installation, operation, and maintenance of your new CPU cooler. Please read these instructions carefully before proceeding with installation to ensure optimal performance and longevity of your product.

2. SAFETY INFORMATION

- Always disconnect power from your computer before installing or removing any components.
- Handle the cooler and its components with care to avoid damage.
- Keep out of reach of children.
- Ensure proper grounding to prevent electrostatic discharge (ESD) damage to sensitive components.
- Refer to your motherboard and CPU manuals for additional compatibility and installation guidelines.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- Hyper 612 APEX CPU Air Cooler
- Installation Kit (includes mounting brackets for various sockets, screws, and thermal paste)
- Instruction Manual

4. SETUP AND INSTALLATION

The Hyper 612 APEX is designed for simplified installation on a variety of platforms. Follow these general steps, referring to the specific instructions for your CPU socket type (AMD AM5/AM4 or Intel LGA 1851/1700) provided in

the installation kit.

4.1. Prepare Your Motherboard

Identify your CPU socket type. Install the appropriate backplate (if required) and mounting standoffs onto your motherboard. Ensure the CPU is correctly seated in its socket.

4.2. Apply Thermal Paste

Clean the CPU surface and the cooler's base. Apply a small amount of thermal paste to the center of the CPU's integrated heat spreader (IHS). Refer to the thermal paste manufacturer's instructions for the recommended application method.

4.3. Mount the Cooler

Carefully place the Hyper 612 APEX onto the CPU, aligning the mounting holes with the standoffs. Secure the cooler using the provided screws, tightening them in a diagonal pattern until snug. Do not overtighten.

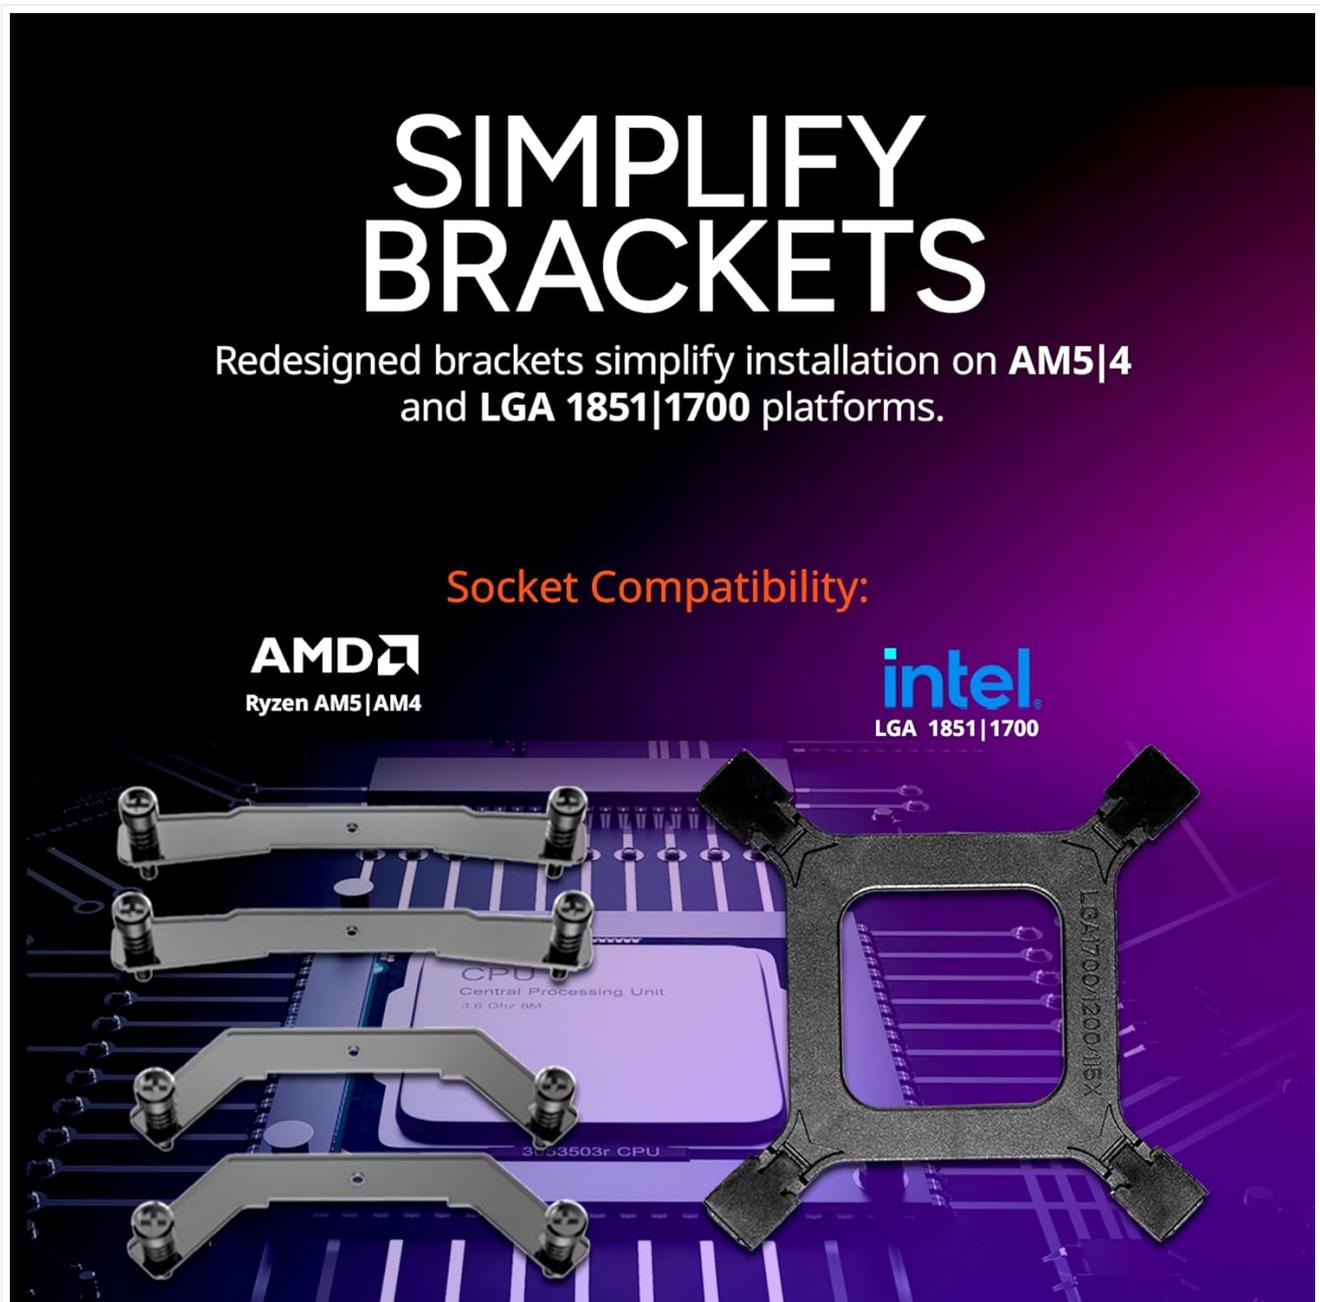


Image: Redesigned installation brackets for AMD AM5/AM4 and Intel LGA 1851/1700 platforms, simplifying the mounting process.

4.4. Install Fans and Connect Cables

Attach the Mobius 120 fans to the heatsink using the included clips. Connect the 4-pin PWM fan cables to the CPU_FAN headers on your motherboard. Ensure correct fan orientation for optimal airflow (typically pulling air through the heatsink towards the rear exhaust fan of your case).

MINIMALIST REDEFINED

A **Stealth** aesthetic brings a renewed vibe while keeping its **minimalistic** essence.



Image: The Cooler Master Hyper 612 APEX CPU cooler installed in a PC, showcasing its stealth aesthetic and compact design with RAM modules visible.

4.5. Removable Top Cover

The Hyper 612 APEX features a removable top cover for easier access during installation and future maintenance. This design simplifies the process of securing the cooler and cleaning the heatsink.

REMOVABLE COVER

Top cover engineered for hassle-free installation and maintenance



Image: Exploded view showing the removable top cover of the CPU cooler, designed for easy installation and maintenance access.

4.6. Installation Video Guide

For a visual guide on the installation process and product features, please refer to the official video below:

Your browser does not support the video tag.

Video: Official product video for the Cooler Master Hyper 612 APEX CPU Air Cooler, demonstrating its features and design, including aspects relevant to installation.

5. OPERATING INSTRUCTIONS

The Hyper 612 APEX is designed to provide efficient cooling for your CPU. Once installed, the cooler operates automatically, with fan speeds adjusted by your motherboard's PWM control based on CPU temperature.

5.1. SuperConducting Heat Pipes

The cooler utilizes six proprietary SuperConducting Composite Heat Pipes. These advanced heat pipes incorporate evaporator and condenser wick structures to enhance heat dissipation, ensuring optimal thermal performance for

demanding CPUs like AMD Ryzen 9 and Intel Ultra 9/i7.

COOL FOR R9 | ULTRA 7 | i7

Six heat pipes and a **copper** base ensure optimal cooling
for **AMD R9** and **Intel Ultra 7 | i7**.

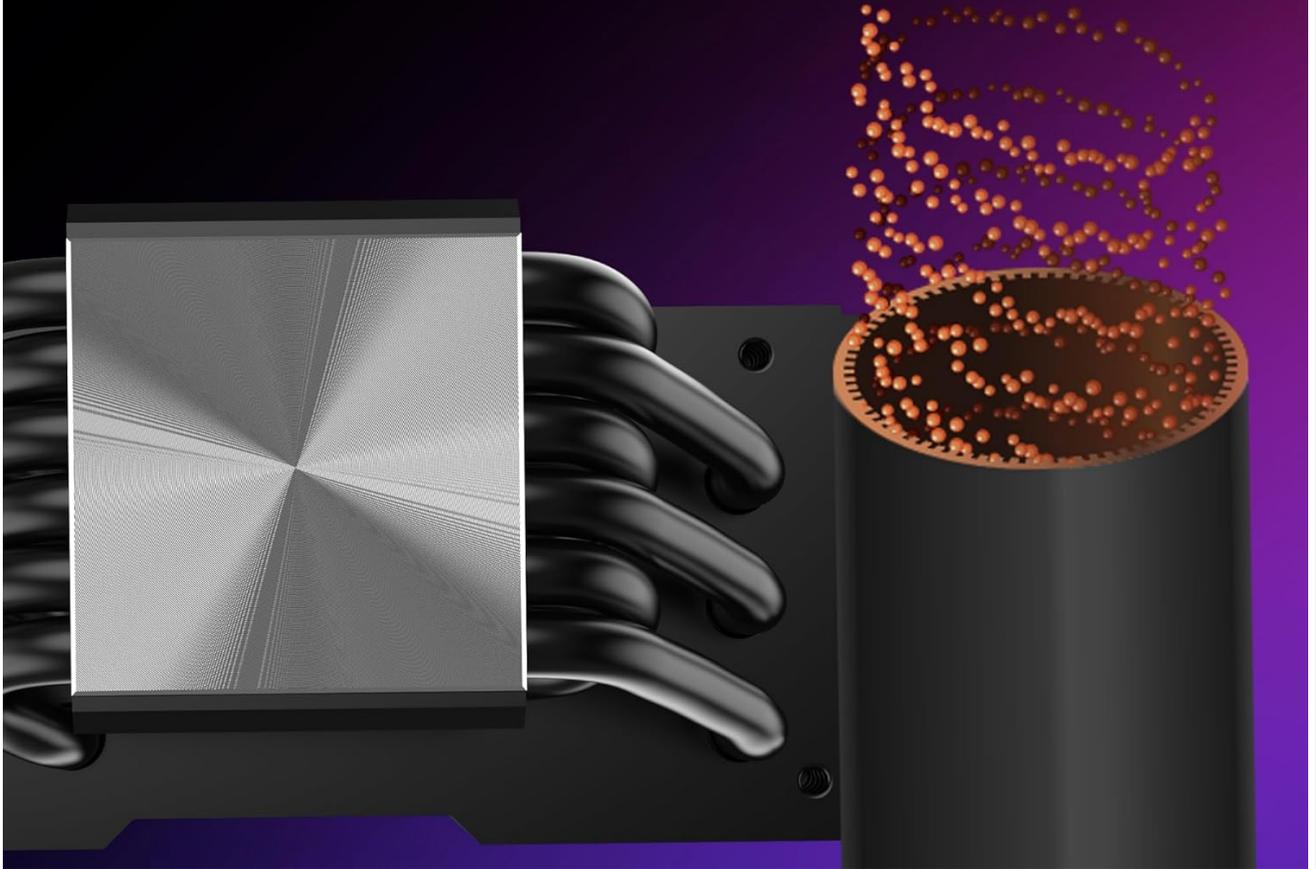


Image: Diagram illustrating the six copper heat pipes and copper base of the Hyper 612 APEX, designed for efficient heat dissipation from high-performance CPUs.

SUPERCONDUCTING HEAT PIPES

By incorporating advanced **evaporator** and **condenser wick** structures, enhance **heat dissipation** for thermal performance

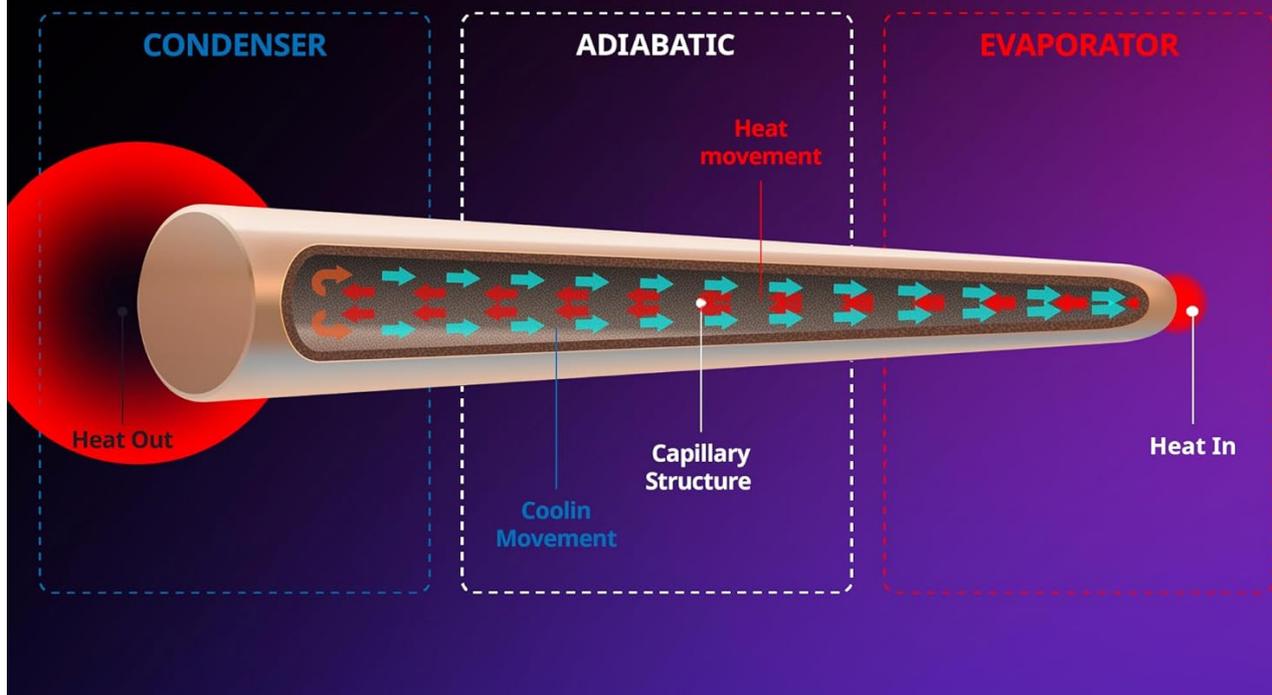


Image: Detailed diagram explaining the SuperConducting Composite Heat Pipes, showing the evaporator, adiabatic, and condenser sections with heat and coolant movement within the capillary structure.

5.2. Dual Mobius 120 Fans

The Hyper 612 APEX features dual Mobius 120 fans with Loop Dynamic Bearing and optimized PWM blades. These fans provide premium airflow while maintaining quiet operation. The dynamic PWM fan allows adjustable speeds from 0 to 2,400 RPM to balance noise and airflow effectively.

DUAL MOBIUS 120 FAN

Experience premium **airflow** with **Ring Blade Design**,
Loop Dynamic Bearing and optimized **PWM** blades
for stability.

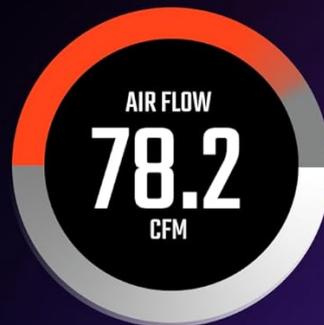


Image: The Mobius 120 fan, displaying key performance metrics: 2400 RPM speed, 30 dBA (max) noise level, 78.2 CFM airflow, and 3.63 mmH2O air pressure.

RING BLADE DESIGN

Interconnected fan blades engineered to form a **robust, rigid structure** that **minimizes vibrations**, ensuring stable and fluid airflow.



WITH
RBD



WITHOUT
RBD

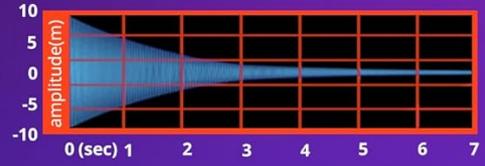


Image: Comparison image showing the Ring Blade Design (RBD) of the fan, which features interconnected blades for reduced vibration and stable airflow, versus a fan without RBD.

DYNAMIC PWM FAN

A **PWM** 4-pin header allows adjustable fan speeds from **0 to 2,400 RPM**, to balance noise and airflow.



Image: The dynamic PWM fan, indicating its adjustable speed range from 0 to 2400 RPM for balancing noise and airflow, with visual representations of different fan speeds.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your CPU cooler.

6.1. Cleaning the Heatsink and Fans

Over time, dust can accumulate on the heatsink fins and fan blades, reducing cooling efficiency. It is recommended to clean the cooler every 3-6 months, or more frequently in dusty environments.

- Disconnect power from your computer.
- Remove the removable top cover for easier access.
- Carefully remove the fans from the heatsink.
- Use compressed air to blow dust out of the heatsink fins. Hold the fans in place while cleaning to prevent over-spinning.

- Wipe fan blades with a soft, dry cloth.
- Reattach the fans and the top cover, ensuring all cables are properly connected.

7. TROUBLESHOOTING

If you encounter issues with your Hyper 612 APEX, consider the following:

7.1. High CPU Temperatures

- **Check Thermal Paste:** Ensure thermal paste was applied correctly and evenly. Reapply if necessary.
- **Verify Mounting Pressure:** Confirm the cooler is securely mounted and making firm contact with the CPU. Tighten screws diagonally.
- **Inspect Fan Operation:** Ensure both fans are spinning correctly and connected to the motherboard's CPU_FAN headers. Check for obstructions.
- **Clean Dust:** Dust buildup can significantly reduce cooling performance. Refer to the Maintenance section for cleaning instructions.
- **Case Airflow:** Ensure your PC case has adequate airflow with properly configured intake and exhaust fans.

7.2. Excessive Fan Noise

- **Check for Obstructions:** Ensure no cables or objects are interfering with the fan blades.
- **Fan Mounting:** Verify fans are securely attached and not vibrating against the heatsink or case.
- **Motherboard Fan Control:** Adjust fan curves in your motherboard's BIOS/UEFI settings to optimize noise levels.

8. SPECIFICATIONS

Detailed specifications for the Cooler Master Hyper 612 APEX CPU Air Cooler:

Feature	Specification
Brand	Cooler Master
Model Number	MAP-T6PN-225PK-R1
Compatible Devices	CPU, Desktop
Cooling Method	Fan
Material	Copper, Plastic
Heat Pipes	6 Superconducting Composite Heat Pipes
Fan Type	Dual Mobius 120 PWM Fans
Maximum Rotational Speed	2400 RPM
Air Flow Capacity	78.2 Cubic Centimeters Per Minute (CFM)
Noise Level	30 Decibels (Max)
Power Connector Type	4-Pin

Feature	Specification
Product Dimensions	5 x 4.4 x 6.2 inches (127 x 111.76 x 157.48 mm)
Item Weight	2.98 pounds (1.35 kg)
UPC	884102127267

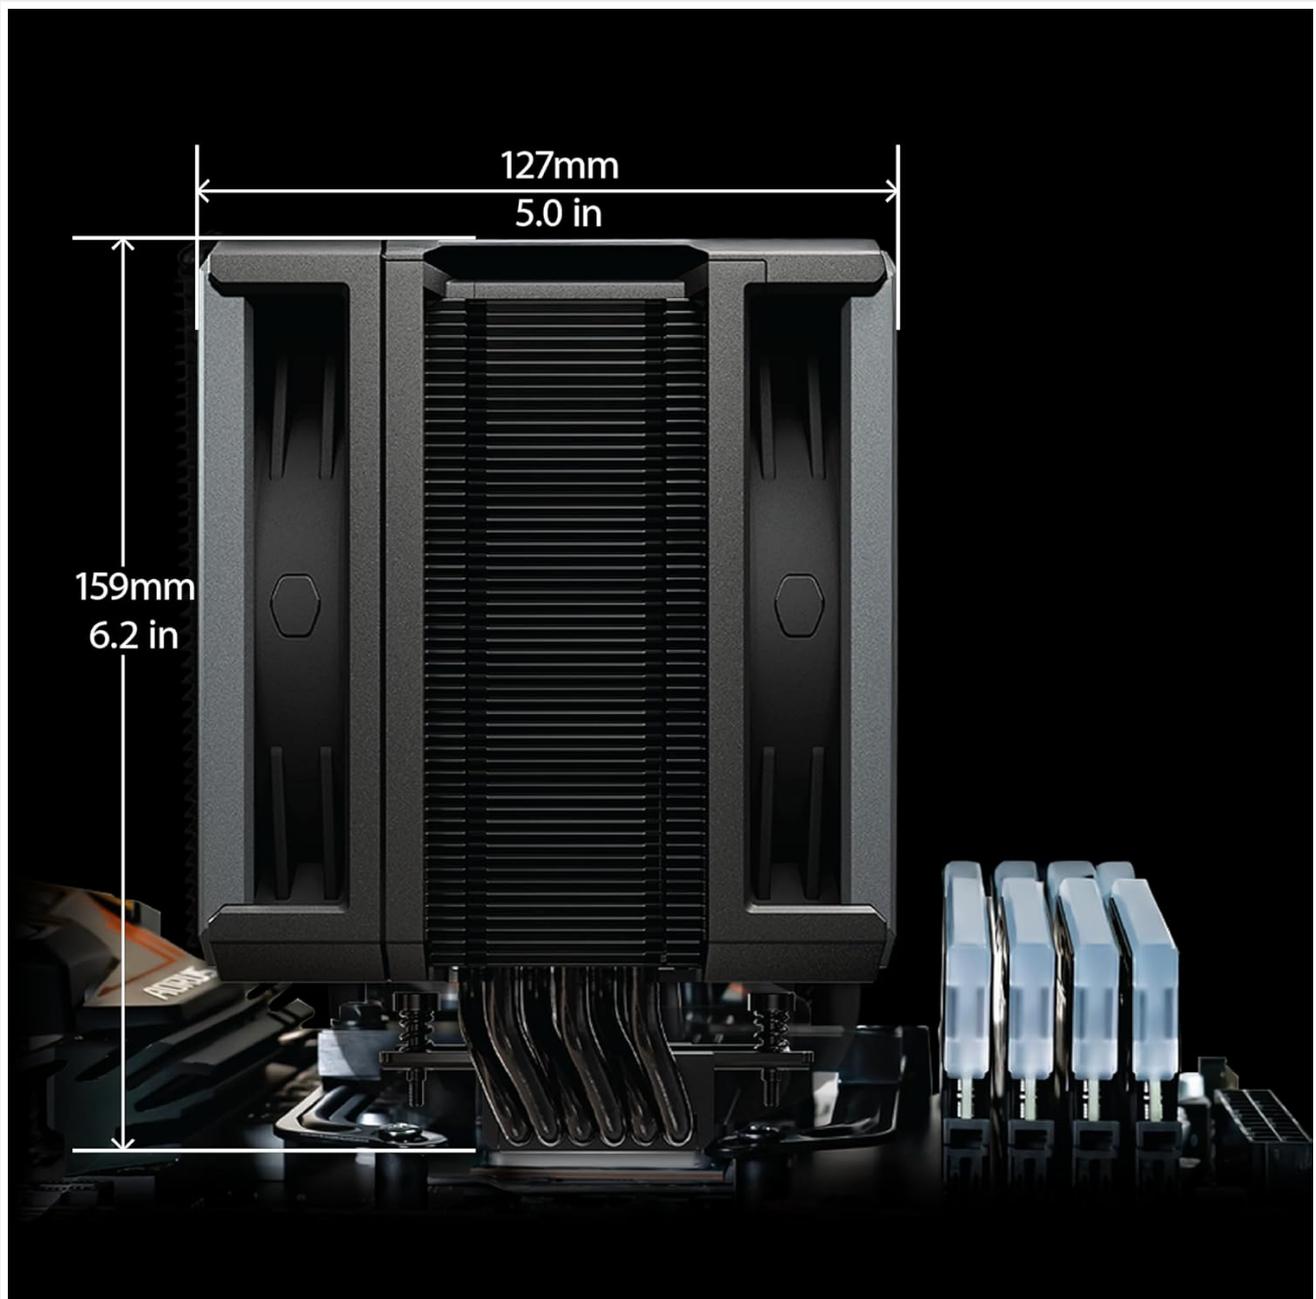


Image: Dimensions of the Cooler Master Hyper 612 APEX CPU Air Cooler, showing 127mm (5.0 in) width and 159mm (6.2 in) height.

9. WARRANTY AND SUPPORT

For detailed warranty information and technical support, please visit the official Cooler Master website or contact their customer service. Warranty terms may vary by region and retailer.

For product support and further assistance, please visit: [Cooler Master Official Website](#)

