

## Ingersoll I14305

# Ingersoll The Vert I14305 Automatic Watch User Manual

Model: I14305

## INTRODUCTION

This manual provides instructions for the proper use and care of your Ingersoll The Vert I14305 automatic watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.

The Ingersoll The Vert is a men's automatic watch featuring a skeletonized movement, a 43mm stainless steel case, scratch-resistant mineral glass, and a stainless steel bracelet. It is water-resistant up to 50 meters.

## SETUP

### 1. Initial Winding

As an automatic watch, the movement is powered by the motion of your wrist. For initial setup or if the watch has stopped, it requires manual winding.

- Locate the crown on the right side of the watch case.
- Ensure the crown is in the fully pushed-in position (position 0).
- Turn the crown clockwise approximately 30-40 times. This will build up a power reserve to start the watch.
- The second hand should begin to move.

### 2. Setting the Time


- Pull the crown out to position 1 (the first click).
- Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time.
- Once the time is set, push the crown back into position 0 to engage the movement and start the watch.



*Image: Side view of the Ingersoll The Vert watch, showing the crown used for winding and setting the time.*

### **3. Adjusting the Stainless Steel Bracelet**

The stainless steel bracelet features a push-button clasp. For proper fit, the bracelet may need to be adjusted by adding or removing links. This procedure typically requires specialized tools and is best performed by a qualified watchmaker or jeweler.

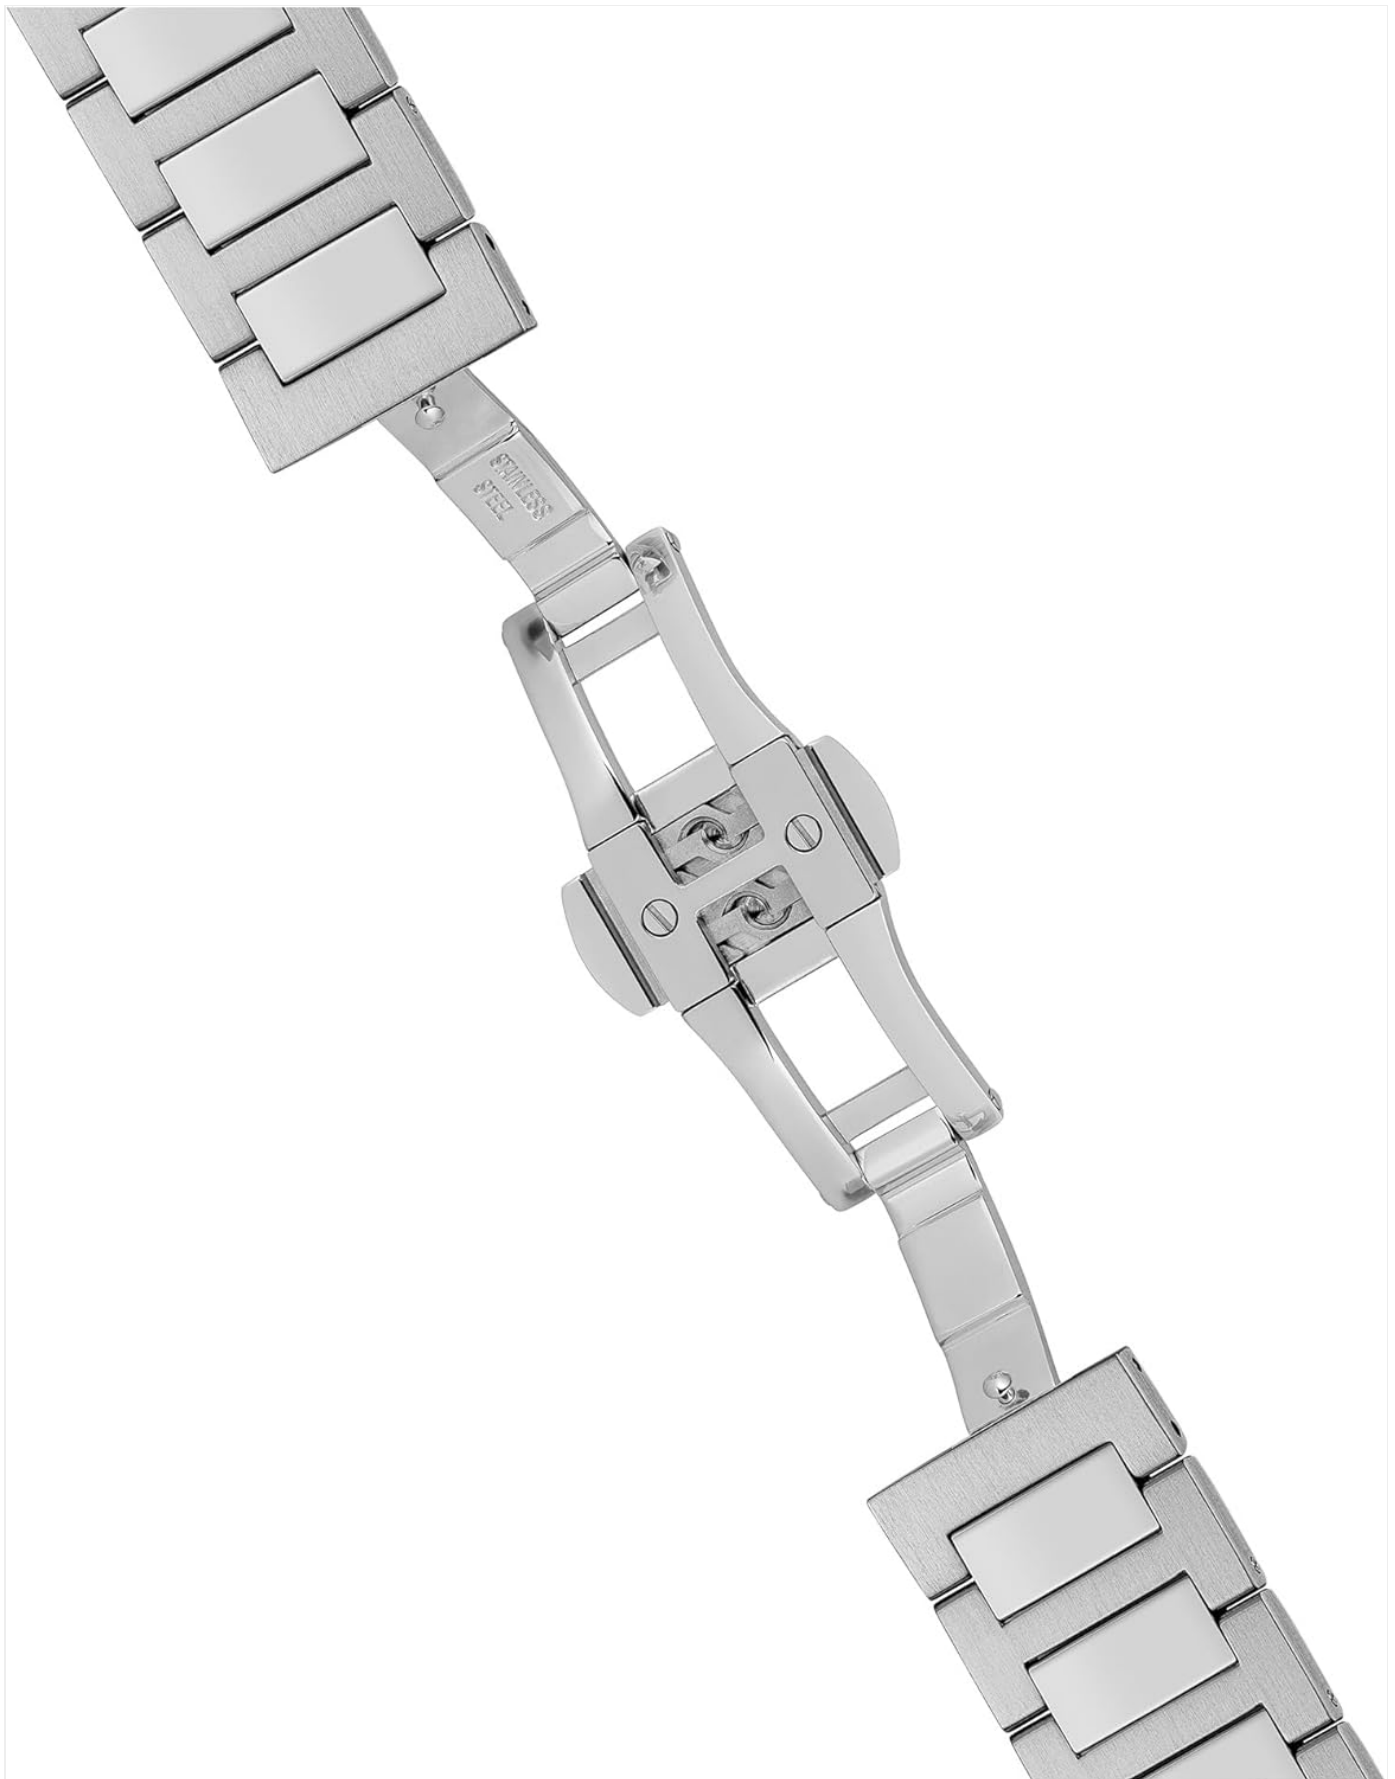

*Image: Close-up of the stainless steel bracelet with its push-button deployment clasp.*

## OPERATING YOUR AUTOMATIC WATCH

---

### Automatic Movement

Your Ingersoll The Vert watch is equipped with an automatic mechanical movement. This means it is powered by the

natural motion of your wrist. When worn regularly, the oscillating weight inside the watch winds the mainspring, providing power. If the watch is not worn for an extended period (typically 36-40 hours), the power reserve will deplete, and the watch will stop. In such cases, manually wind the watch as described in the "Initial Winding" section.



*Image: Detailed view of the skeleton dial, showcasing the intricate automatic movement components.*

## Water Resistance

The watch has a water resistance rating of 50 meters (5 ATM). This rating means the watch is suitable for short periods of recreational swimming. It is **not** suitable for diving, snorkeling, or prolonged water immersion.

- Always ensure the crown is fully pushed in before any contact with water.
- Do not operate the crown while the watch is wet or submerged.
- Avoid exposing the watch to hot water, steam, or sudden temperature changes, as this can compromise the water resistance seals.





114305

5ATM WATER RESISTANT

RF

STAINLESS STEEL 316L

20 JEWELS AUTOMATIC

## MAINTENANCE

---

### Cleaning

To maintain the appearance of your watch, regularly wipe the case and bracelet with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive materials.

### Storage

When not wearing your watch, store it in a cool, dry place away from direct sunlight, extreme temperatures, and strong magnetic fields. A watch box or a soft pouch is recommended to prevent scratches.

### Periodic Servicing

Like any precision mechanical instrument, your automatic watch benefits from periodic servicing (typically every 3-5 years) by a qualified watchmaker. This includes cleaning, lubrication, and adjustment of the movement to ensure continued accuracy and performance.

## TROUBLESHOOTING

---

### Watch Not Running

- **Insufficient Power Reserve:** Manually wind the watch by turning the crown clockwise 30-40 times. Wear the watch regularly to keep the power reserve charged.
- **Crown Position:** Ensure the crown is fully pushed into position 0.

### Time Inaccuracy

- **Low Power Reserve:** An automatic watch may lose accuracy if its power reserve is low. Ensure it is fully wound and worn consistently.
- **Magnetic Fields:** Exposure to strong magnetic fields (e.g., from speakers, refrigerators, or certain electronic devices) can affect the watch's accuracy. If you suspect magnetization, a watchmaker can demagnetize it.
- **Impact:** A severe impact can affect the delicate internal components. If accuracy issues persist after checking power reserve and magnetic exposure, professional inspection is recommended.

## SPECIFICATIONS

---

Feature	Detail
Model Number	I14305
Movement Type	Automatic Mechanical
Case Diameter	43 mm
Case Material	Stainless Steel
Crystal Material	Mineral Glass (Scratch-Resistant)
Bracelet Material	Stainless Steel

Feature	Detail
Bracelet Width	22 mm
Water Resistance	50 meters (5 ATM)
Dial Type	Skeleton
Product Dimensions	8.27 x 1.69 x 0.54 inches
Item Weight	7.05 ounces

## WARRANTY AND SUPPORT

---

### Lifetime Warranty

Ingersoll is proud to offer a lifetime warranty for the Ingersoll The Vert I14305 watch. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase. For detailed terms and conditions of the lifetime warranty, please refer to the official Ingersoll website or contact customer support.

### Customer Support

For any questions, service requests, or warranty claims, please contact Ingersoll customer support.

- **Official Website:** [www.ingersoll1892.com](http://www.ingersoll1892.com)
- **Contact Information:** Refer to the official website for the most current contact details, including phone numbers and email addresses.

