

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [VGR](#) /

> [VGR VL-118 Professional Corded & Cordless Hair Clipper Instruction Manual](#)

VGR VL-118

VGR VL-118 Professional Corded & Cordless Hair Clipper

Instruction Manual

INTRODUCTION

Thank you for choosing the VGR VL-118 Professional Corded & Cordless Hair Clipper. This device is designed for precise and efficient hair grooming, offering both corded and cordless operation for maximum flexibility. Please read this manual thoroughly before using the appliance to ensure safe and correct operation, and retain it for future reference.

SAFETY INFORMATION

- This appliance is not intended for use by children under 8 years of age without supervision.
- Keep the appliance away from water or other liquids. Do not use it in wet environments or near bathtubs, showers, basins, or other vessels containing water.
- Do not use this appliance on animals.
- Always unplug the clipper before cleaning or performing any maintenance.
- Keep lubricating oil and all accessories out of reach of children.
- Ensure the power cord is not damaged. If damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Do not disassemble the appliance yourself. For repairs, contact authorized service personnel.

PACKAGE CONTENTS

The VGR VL-118 Hair Clipper package includes the following items:

- 1x Hair Clipper (VGR VL-118)
- 6x Guide Combs (1.5mm, 3mm, 4.5mm, 6mm, 10mm, 13mm)
- 1x Type-C USB Cable
- 1x Cleaning Brush
- 1x Blade Protection Cap
- 1x Lubricating Oil Bottle
- 1x Comb
- 1x User Manual



Image: All components included in the VGR VL-118 Hair Clipper kit.

PRODUCT OVERVIEW

The VGR VL-118 features a durable design with key components for effective grooming:

- **Stainless Steel Blades:** High-quality, rust-resistant blades for sharp and smooth cutting.
- **Taper Lever:** Adjustable lever for customizing cutting lengths for fading, blending, and detailed trimming (0.8mm to 2.0mm).
- **LED Display:** Bright screen showing remaining battery life and usage status.
- **On/Off Switch:** For easy operation.
- **Hanging Hook:** For convenient storage.
- **Type-C USB Charging Port:** For versatile charging options.
- **2000mAh Lithium Battery:** Provides up to 200 minutes of cordless runtime.



Image: Key features of the VGR VL-118 Hair Clipper.



Image: Internal components and design of the VGR VL-118 Hair Clipper.

CHARGING THE CLIPPER

Before first use, fully charge the clipper. The LED display will indicate the battery percentage. A full charge provides up to 200 minutes of cordless operation.

1. Connect the Type-C USB charging cable to the charging port at the bottom of the clipper.
2. Plug the other end of the USB cable into a compatible adapter, laptop, or power bank.
3. The LED display will show the charging progress. Once fully charged (100%), disconnect the cable.



Image: Charging options and battery life of the VGR VL-118 Hair Clipper.

OPERATING INSTRUCTIONS

Attaching Guide Combs

The clipper comes with 6 guide combs (1.5mm, 3mm, 4.5mm, 6mm, 10mm, 13mm) to achieve various hair lengths.

1. Ensure the clipper is turned off.
2. Select the desired guide comb.
3. Align the comb with the clipper blade and push it firmly until it clicks into place.
4. To remove, gently pull the comb away from the blade.



Image: Available guide comb sizes for the VGR VL-118.

Adjusting Cutting Length with Taper Lever

The built-in taper lever allows for fine adjustment of cutting lengths between 0.8mm and 2.0mm without changing guide combs. This is ideal for fading and blending.

- Move the lever upwards for a shorter cut (closer to 0.8mm).
- Move the lever downwards for a longer cut (closer to 2.0mm).



Image: Taper lever and guide comb functionality.

General Usage

1. Ensure the clipper is charged or connected to power.
2. Attach the desired guide comb or adjust the taper lever for your preferred length.
3. Turn on the clipper using the power switch.

4. Begin trimming against the direction of hair growth for best results.
5. Always turn off the clipper before changing accessories or cleaning.

Your browser does not support the video tag.

Video: Demonstration of the VGR VL-118 Hair Clipper in use for hair trimming.

MAINTENANCE

Regular cleaning and oiling will ensure the longevity and optimal performance of your clipper.

1. **Cleaning the Blades:** After each use, turn off the clipper and remove any attached guide comb. Use the provided cleaning brush to remove loose hairs from the blades.
2. **Oiling the Blades:** Apply a few drops of the lubricating oil (included) to the blades. Turn on the clipper for a few seconds to distribute the oil evenly. This helps maintain blade sharpness and prevents rust.
3. **Storage:** Store the clipper in a dry place, away from direct sunlight and moisture. Use the blade protection cap to protect the blades when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper does not turn on.	Low battery or not charged.	Charge the clipper fully. Check the LED display for battery level.
Blades pull hair or cut poorly.	Blades are dull, dirty, or not oiled.	Clean and oil the blades. If blades are dull, consider replacement (contact support).
Clipper makes unusual noise.	Blades are not properly aligned or need oiling.	Ensure blades are clean and oiled. If noise persists, contact customer support.
Clipper stops during use.	Battery is depleted.	Recharge the clipper. Use corded operation if immediate use is required.

SPECIFICATIONS

Model Number	VL-118
Power Source	Battery Powered (Corded & Cordless)
Battery Type	Lithium Ion
Battery Capacity	2000mAh
Runtime	Up to 200 minutes
Charging Time	Approximately 3 hours
Blade Material	Stainless Steel
Adjustable Taper Lever	0.8mm - 2.0mm
Guide Comb Sizes	1.5mm, 3mm, 4.5mm, 6mm, 10mm, 13mm

Motor Speed	7000 RPM (Turbo Function)
Item Weight	260 g (0.26 Kilograms)
Product Dimensions	20 x 6 x 4 cm
Country of Origin	China

Your browser does not support the video tag.

Video: Overview of VGR VL-118 features including runtime, blades, taper lever, and LED display.

Your browser does not support the video tag.

Video: Detailed look at the VGR VL-118's design, features, and accessories.

WARRANTY AND SUPPORT

For warranty information, service, or support, please contact VGR customer care:

- **Email:** customercare@vgrofficial.in
- **Phone:** 9667796740
- **Website:** www.vgrofficial.in
- **Operating Hours:** 10:00 AM to 6:00 PM, Monday to Saturday.

Please retain your purchase receipt as proof of purchase for any warranty claims.