

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Outsunny](#) /

> [Outsunny Folding Gazebo 3x3m Instruction Manual \(Model 84C-463V00BG\)](#)

Outsunny 84C-463V00BG

Outsunny Folding Gazebo Instruction Manual

Model: 84C-463V00BG



Image: The Outsunny Folding Gazebo in an outdoor setting.

INTRODUCTION

Thank you for choosing the Outsunny Folding Gazebo. This manual provides important information for the safe assembly, operation, and maintenance of your gazebo. Please read these instructions thoroughly before use and retain them for future reference.

This folding gazebo is designed for outdoor use, providing shade and protection from insects with its integrated mosquito nets. It features a double roof for improved air circulation, adjustable height settings, and a sturdy powder-coated steel frame for durability.

SAFETY INFORMATION

- **Read all instructions:** Before assembly and use, carefully read and understand all instructions provided in this manual.
- **Weather conditions:** Do not use this gazebo in extreme weather conditions such as strong winds, heavy rain, or snow. Such conditions can cause damage to the gazebo and potential injury.
- **Stability:** Always use the provided guy ropes and ground stakes to secure the gazebo firmly to the ground. Failure to do so may result in the gazebo collapsing.
- **Assembly:** Assembly should be performed by at least two adults. Keep children and pets away from the assembly area to prevent accidents. Ensure all parts are correctly aligned and securely fastened.
- **Clearance:** Ensure adequate clearance around the gazebo from heat sources, open flames, and sharp objects.
- **Maintenance:** Regularly inspect the gazebo for any signs of wear or damage. Do not use if any part is compromised.

PACKAGE CONTENTS

Please verify that all components listed below are present before beginning assembly. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- 1 x Folding Garden Gazebo Frame
- 1 x Gazebo Canopy (Double Roof)
- 4 x Mosquito Net Side Walls
- 4 x Guy Ropes
- 8 x Ground Stakes
- 1 x Carrying Bag
- 1 x Instruction Manual (this document)

SETUP AND ASSEMBLY

Assembly of this folding gazebo is designed to be quick and requires two people. No additional tools are needed.

1. **Unpack the Gazebo:** Remove the folded gazebo frame from its carrying bag.

PORTÁTIL Y FÁCIL DE INSTALAR

Sácala de la bolsa de transporte



Despliega la estructura



Añade el toldo y las paredes laterales



Ajústalo a la altura adecuada

Image: Step-by-step visual guide for quick setup.

- 2. Unfold the Frame:** With a person on each side, gently pull the frame outwards until it begins to expand. Do not force the frame.
- 3. Attach the Canopy:** Place the main canopy over the top of the partially opened frame. Secure the canopy to the frame at all corners and attachment points. Ensure the double roof is correctly positioned for air circulation.
- 4. Fully Extend the Frame:** Continue to pull the frame outwards until it is fully extended and locked into place. You may need to push up on the center hub of the roof to fully extend the frame.
- 5. Adjust Height:** The gazebo features 3 adjustable height levels. Locate the push-button mechanisms on each leg. Press the button and slide the leg to your desired height. Ensure all four legs are set to the same height for stability.

ALTURA REGULABLE EN 3 NIVELES

Pulsa el botón para ajustar la altura

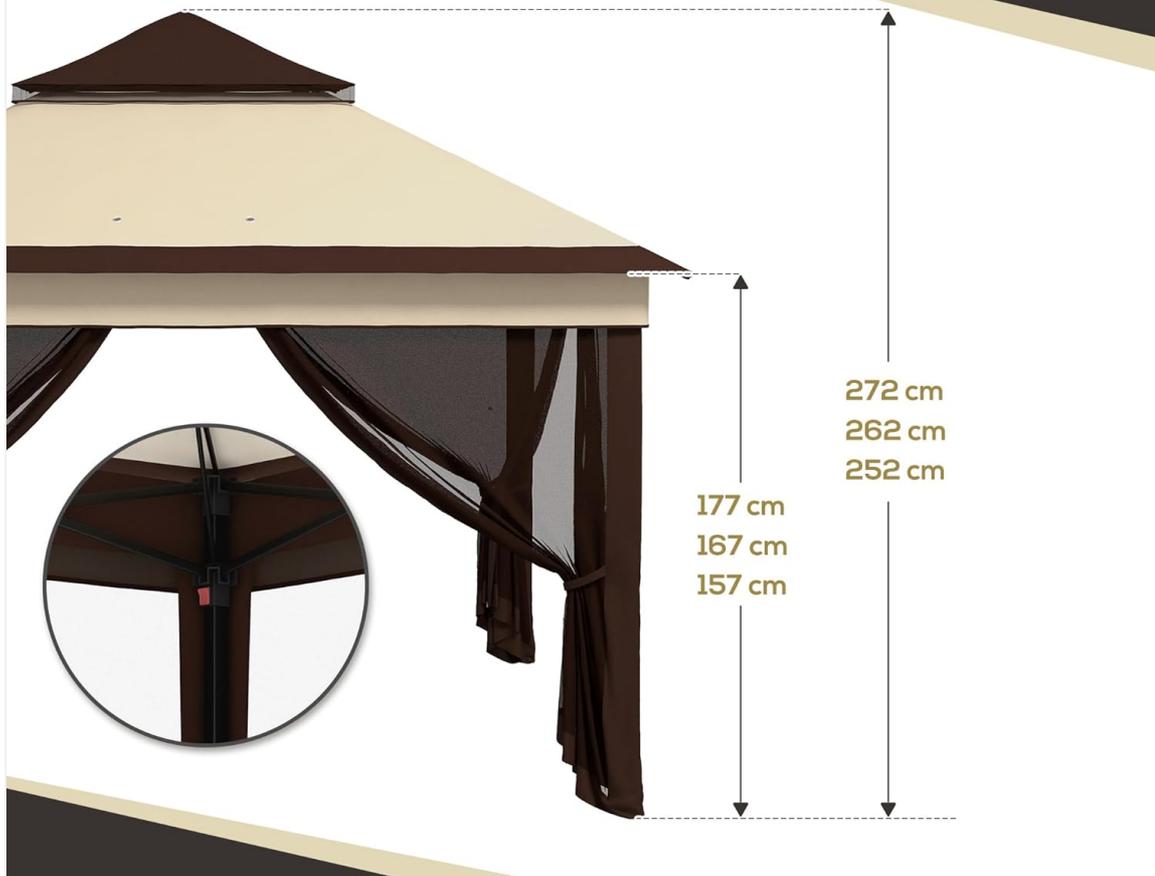


Image: Detail of the 3-level adjustable height mechanism.

- Attach Mosquito Nets:** Hang the mosquito net side walls from the canopy frame. The nets feature zippers for easy access and can be tied back when not in use.



Image: Detail of the mosquito net side wall.

- 7. Secure with Stakes and Ropes:** For maximum stability, especially in light winds, use the provided ground stakes to anchor each leg to the ground. Attach the guy ropes to the corners of the canopy and stake them into the ground at an angle, ensuring they are taut.

AJUSTES DE ESTABILIZACIÓN




Orificios de drenaje



Toldo con ventilaciones



Cuerdas de sujeción

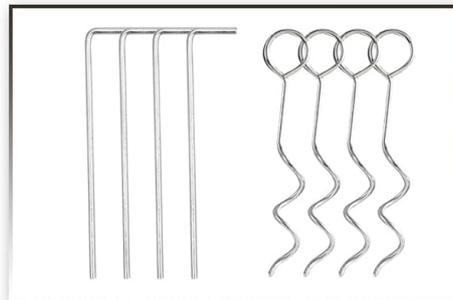

Estacas

Image: Stabilization features including drainage holes, vented canopy, guy ropes, and stakes.

OPERATING INSTRUCTIONS

- **Usage:** This gazebo is suitable for outdoor events, camping, parties, and providing shade in your garden. It is designed for 6-9 people.
- **Mosquito Nets:** Utilize the mosquito net side walls to protect against insects. The zippers allow for easy entry and exit. When not needed, the nets can be tied back to the legs.
- **Height Adjustment:** To change the height, ensure the gazebo is empty and carefully lower or raise each leg one at a time, pressing the adjustment button. Always ensure all legs are at the same height.
- **Weather Protection:** The UV30+ Oxford fabric canopy provides protection from the sun's harmful UV rays. The double roof design enhances air circulation, and drainage holes prevent water accumulation on the canopy during light rain.
- **Disassembly:** To disassemble, reverse the assembly steps. Ensure the canopy and nets are clean and dry before folding and storing in the carrying bag.

MAINTENANCE

- **Cleaning:** Clean the canopy and mosquito nets with a mild soap solution and water. Do not use harsh chemicals or abrasive cleaners. Rinse thoroughly and allow to air dry completely before storage.
- **Frame Care:** The powder-coated steel frame is designed for durability. Wipe down the frame with a damp

cloth as needed. Inspect for any rust or damage, especially at joints.

- **Storage:** When not in use, especially during off-season or anticipated severe weather, disassemble the gazebo and store it in its carrying bag in a cool, dry place. Ensure all fabric components are completely dry to prevent mold and mildew.
- **Inspection:** Periodically check all connections, ropes, and stakes for wear and tear. Replace any damaged components immediately to ensure safety and stability.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Gazebo is unstable or wobbly.	Not properly staked or guy ropes are loose. Legs are not at the same height.	Ensure all ground stakes are firmly inserted and guy ropes are taut. Verify all legs are locked at the same height setting. Do not use in strong winds.
Water pooling on the canopy.	Heavy rainfall exceeding drainage capacity. Canopy not stretched tautly.	Ensure canopy is stretched tightly across the frame. The canopy has drainage holes for light rain; for heavy rain, disassemble the gazebo.
Difficulty unfolding/folding the frame.	Frame joints are stiff or misaligned.	Ensure two people are assisting. Gently apply pressure. Check for any obstructions or bent parts. Do not force.
Mosquito nets do not close properly.	Nets are snagged or misaligned.	Check zippers for obstructions. Ensure nets are properly attached to the canopy and frame.

SPECIFICATIONS

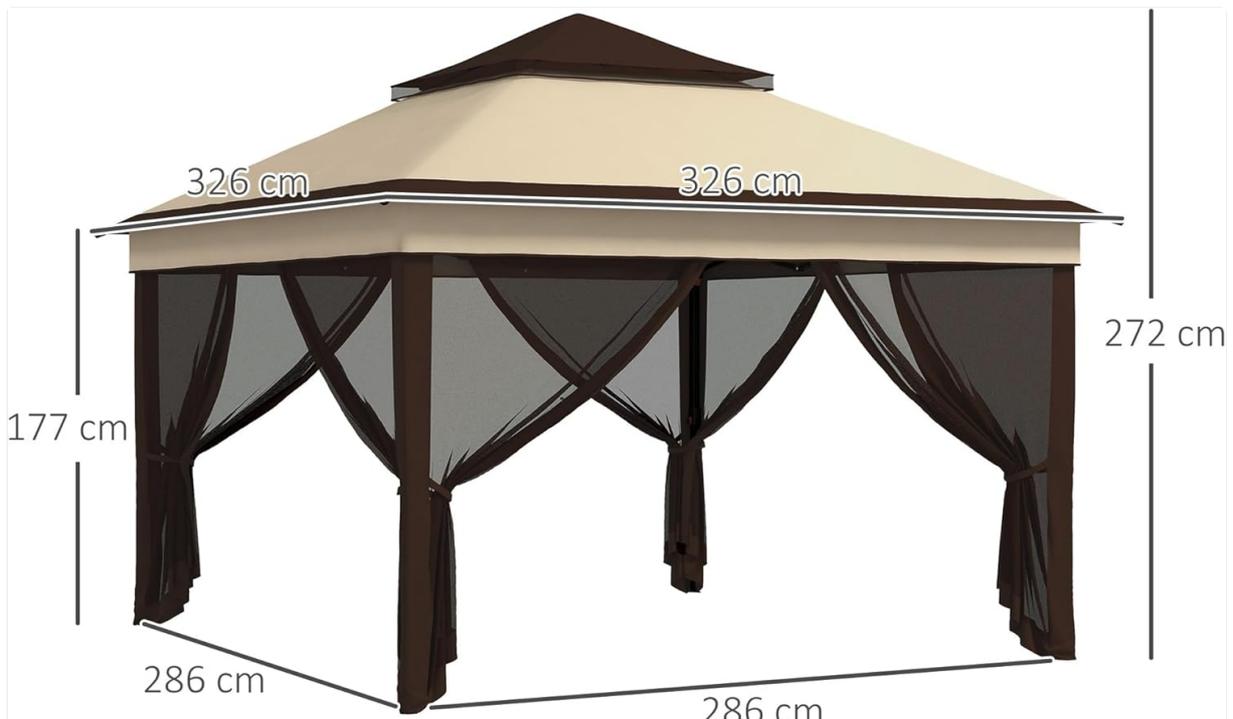


Image: Detailed dimensions of the gazebo.

- **Model Number:** 84C-463V00BG
- **Overall Dimensions (LxWxH):** 326 cm x 326 cm x 272 cm (128.35" x 128.35" x 107.09")
- **Eave Height:** 177 cm (69.7")

- **Distance Between Columns (LxW):** 286 cm x 286 cm
- **Mesh Panel Dimensions (WxH):** 294 cm x 198 cm
- **Adjustable Height Levels:** 3 (272 cm, 262 cm, 252 cm)
- **Materials:** Powder-coated Steel Frame, UV30+ Oxford Cloth Canopy, Mesh Side Walls
- **Item Weight:** 17 kg (37.4 lbs)
- **Floor Area:** 10.6 Square Meters
- **Color:** Beige and Coffee
- **Assembly Required:** Yes



Image: Materials used for the gazebo construction.

WARRANTY INFORMATION

Specific warranty details are typically provided at the point of purchase or on the manufacturer's official website. Please refer to your purchase documentation or contact Outsunny customer support for information regarding warranty coverage, terms, and conditions.

Note: Damage resulting from improper assembly, misuse, neglect, or extreme weather conditions may not be covered under warranty. Always follow the safety and maintenance guidelines in this manual.

CUSTOMER SUPPORT

For any questions, missing parts, or assistance with your Outsunny Folding Gazebo, please contact Outsunny customer support. Contact information can usually be found on the product packaging, the retailer's website, or the official Outsunny website.

When contacting support, please have your model number (**84C-463V00BG**) and proof of purchase readily available.