

Clatronic BS1314

Clatronic BS1314 2-in-1 Handheld and Stick Vacuum Cleaner User Manual

Model: BS1314

INTRODUCTION

Thank you for choosing the Clatronic BS1314 2-in-1 Handheld and Stick Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.

- Use extra care when cleaning on stairs.

PRODUCT OVERVIEW

The Clatronic BS1314 is a versatile 2-in-1 vacuum cleaner designed for both floor and handheld cleaning tasks. It features a powerful 600W motor and bagless filter technology.



Figure 1: The Clatronic BS1314 vacuum cleaner in its full stick configuration, showcasing its red and black design with the main motor unit, telescopic tube, and floor brush.

Components:

- **Main Motor Unit:** Contains the motor, dust cup, and filter system.

- **Telescopic Tube:** Adjustable aluminum tube for floor cleaning.
- **Floor Brush:** Switchable brush for different floor types.
- **Combination Brush/Cleaning Nozzle:** For handheld use and detailed cleaning.
- **Wall Mount:** For convenient storage.
- **Power Cord:** 6.8 meters in length for extended reach.

SETUP AND ASSEMBLY

Assembling for Stick Vacuum Mode:

1. **Attach the Telescopic Tube:** Insert the lower end of the main motor unit into the top of the telescopic tube until it clicks securely into place.
2. **Attach the Floor Brush:** Connect the floor brush to the bottom end of the telescopic tube, ensuring it is firmly attached.
3. **Adjust Tube Length:** Press the release button on the telescopic tube and extend or retract it to your desired length. Release the button to lock it in position.

Converting to Handheld Vacuum Mode:

1. **Detach Telescopic Tube:** Press the release button located where the main motor unit connects to the telescopic tube and pull the tube away.
2. **Attach Accessories:** Directly attach the combination brush/cleaning nozzle to the main motor unit for handheld cleaning tasks.

Wall Mount Installation:

Select a suitable location on a wall, ensuring it is near a power outlet and at a convenient height. Use appropriate screws and wall plugs (not included) to securely fasten the wall mount to the wall. The vacuum cleaner can then be hung on the mount for storage.

OPERATING INSTRUCTIONS

Using the Vacuum Cleaner:

1. **Plug In:** Insert the power plug into a suitable electrical outlet (220-240 V, 50/60 Hz).
2. **Power On/Off:** Locate the power switch on the main motor unit and press it to turn the vacuum cleaner ON. Press it again to turn it OFF.
3. **Floor Brush Adjustment:** If using the floor brush, use the switch on the brush head to adjust it for hard floors or carpets.
4. **Cleaning:** Move the vacuum cleaner slowly over the surface to be cleaned. For handheld mode, use the appropriate nozzle for crevices, upholstery, or other surfaces.
5. **After Use:** Turn off the vacuum cleaner and unplug it from the power outlet.

MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

Emptying the Dust Cup:

1. Ensure the vacuum cleaner is OFF and unplugged.
2. Locate the dust cup release button on the main motor unit. Press it and carefully detach the dust cup.
3. Hold the dust cup over a waste bin and open the bottom flap to empty the contents.
4. Close the flap and reattach the dust cup to the main motor unit until it clicks into place.

Cleaning the Filters:

The Clatronic BS1314 uses a microfilter system and a HEPA filter. These should be cleaned regularly, especially if suction power decreases.

1. With the dust cup detached, carefully remove the filters. Refer to the appliance diagram for exact filter locations.
2. Tap the filters gently over a waste bin to remove loose dust and debris.
3. If heavily soiled, rinse the filters under cold running water. **Ensure filters are completely dry before reinserting them into the vacuum cleaner.** Drying may take up to 24 hours.
4. Reassemble the filters and dust cup in reverse order.

General Cleaning:

- Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Check the floor brush for tangled hair or debris and remove it as needed.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Not plugged in; no power at outlet; power switch off.	Check power cord connection; test outlet with another appliance; ensure power switch is ON.
Low suction power.	Dust cup full; filters clogged; blockage in nozzle/tube.	Empty dust cup; clean or replace filters; check for and remove blockages.
Unusual noise.	Blockage in brush roll or air path; damaged component.	Turn off and unplug. Inspect brush roll and air paths for obstructions. If noise persists, contact customer support.
Dust escaping from vacuum.	Dust cup not properly installed; filters missing or damaged.	Ensure dust cup is securely latched; check that all filters are correctly in place and undamaged.

SPECIFICATIONS

Model:	BS1314
Power:	600 W
Voltage:	220-240 V, 50/60 Hz
Filter System:	Bagless, Microfilter, HEPA Filter
Cable Length:	6.8 m
Telescopic Tube Length:	Approx. 47 - 77 cm

Weight:	Approx. 4.85 lbs (2.2 kg)
Included Accessories:	Wall mount, combination brush/cleaning nozzle, switchable floor brush



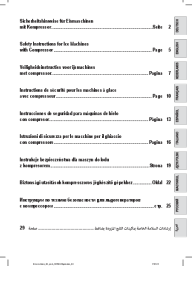
WARRANTY AND CUSTOMER SUPPORT




Clatronic products are manufactured with care and undergo strict quality controls. This product is covered by a manufacturer's warranty against defects in materials and workmanship under normal use. For specific warranty terms, duration, and to obtain service, please refer to the warranty card included with your purchase or contact Clatronic customer support.

For technical assistance, spare parts, or general inquiries, please visit the official Clatronic website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims.

© 2023 Clatronic. All rights reserved. Information in this manual is subject to change without notice.

Related Documents - BS1314

	<p>CLATRONIC BS 1314 Bodenstaubsauger Bedienungsanleitung</p> <p>Umfassende Bedienungsanleitung für den CLATRONIC BS 1314 Bodenstaubsauger. Enthält Anleitungen zur Bedienung, Wartung, Fehlerbehebung und Sicherheitshinweise für dieses Haushaltsgerät.</p>
	<p>CLATRONIC MG 3519 Multigrill Bedienungsanleitung und Garantie</p> <p>Umfassende Bedienungsanleitung und Garantieinformationen für den CLATRONIC MG 3519 Multigrill. Erfahren Sie mehr über sichere Handhabung, Bedienung, Reinigung, technische Daten und Garantiebedingungen für Ihr CLATRONIC Gerät.</p>
	<p>Safety Instructions for Clatronic Ice Cream Maker ICM 3784</p> <p>Comprehensive safety instructions and general guidelines for the Clatronic Ice Cream Maker ICM 3784, ensuring safe operation and maintenance for household use.</p>

	<p><u>CLATRONIC EK 3497 Eierkocher Bedienungsanleitung</u></p> <p>Umfassende Bedienungsanleitung für den CLATRONIC EK 3497 Eierkocher. Enthält detaillierte Informationen zur sicheren Nutzung, Inbetriebnahme, Reinigung und Garantie.</p>
	<p><u>Clatronic KA 3808 Kaffeeautomat Bedienungsanleitung</u></p> <p>Umfassende Bedienungsanleitung für den Clatronic KA 3808 Kaffeeautomaten. Enthält Anleitungen zur Inbetriebnahme, Bedienung, Reinigung, Wartung und Fehlerbehebung für optimale Kaffeezubereitung.</p>
	<p><u>Clatronic Knetmaschine KM 3711/KM 3712 Bedienungsanleitung und Garantie</u></p> <p>Umfassende Bedienungsanleitung und Garantiefinformationen für die Clatronic Knetmaschine KM 3711/KM 3712. Enthält Sicherheitshinweise, Bedienung, Rezepte und Fehlerbehebung in mehreren Sprachen.</p>