

Scheppach AVC25

Scheppach AVC25 Electric Ash Vacuum Cleaner User Manual

Model: AVC25

1. IMPORTANT SAFETY INSTRUCTIONS

Read all safety warnings and instructions carefully before using this appliance. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury. Keep these instructions for future reference.

- **Do not vacuum hot ashes.** Ensure all ashes are completely cold before vacuuming. Hot ashes can cause fire.
- This appliance is designed for vacuuming cold ash from fireplaces, wood stoves, charcoal ovens, and grills. It is also suitable for dry vacuuming and blowing functions.
- Do not vacuum flammable, explosive, or hazardous materials.
- Ensure the filter is correctly installed before operation.
- Always disconnect the power plug from the socket before cleaning or maintenance.
- Keep children and unauthorized persons away from the appliance during operation.
- Do not operate the appliance if the power cord or plug is damaged.
- Use only original accessories and spare parts.


2. PRODUCT OVERVIEW AND COMPONENTS

The Scheppach AVC25 is a versatile 3-in-1 electric ash vacuum cleaner, dry vacuum, and blower. Familiarize yourself with its components before use.


20 L Behältervolumen



Motorleistung 1300 W

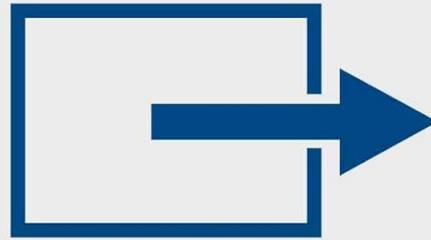

5 m Anschlusskabel

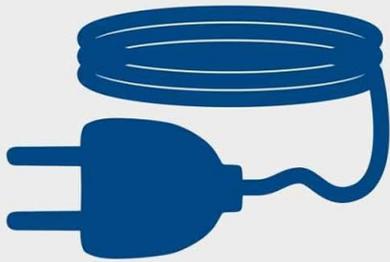

1,5 m feuerfester Schlauch



Image: The Scheppach AVC25 ash vacuum cleaner shown with its hose, nozzles, and filter. This image provides a general view of the product and its main attachments.

Key Features:

- **3-in-1 Functionality:** Ash vacuuming, dry vacuuming, and blowing.
- **Powerful Motor:** 1300 Watts for efficient cleaning.
- **Large Capacity:** 20-liter collection tank.
- **High Suction Power:** 20 kPa for effective debris removal.
- **Fire-resistant Hose:** 1.5 meters for safe ash collection.
- **HEPA Filter:** For fine dust filtration.
- **Blower Function:** For clearing debris from surfaces.



Image: A diagram illustrating the three primary functions of the Scheppach AVC25: Ash Vacuuming, General Vacuuming, and Blowing.

3. SETUP AND ASSEMBLY

Follow these steps to set up your Scheppach AVC25 ash vacuum cleaner for first use.

1. **Unpack Components:** Carefully remove all parts from the packaging. Check for any damage or missing items.
2. **Attach Wheels (if separate):** If the wheels are not pre-assembled, attach them to the base of the vacuum cleaner according to the diagram.
3. **Install Filter:** Ensure the HEPA filter is securely placed inside the collection tank. Refer to the filter cleaning section for proper installation.
4. **Connect Hose:** Attach the fire-resistant hose to the suction inlet on the tank. For blowing function, connect the hose to the blower outlet.
5. **Attach Nozzle:** Select the appropriate nozzle for your task and attach it to the end of the hose.
6. **Power Connection:** Plug the 5-meter connection cable into a suitable 230V power outlet.

kompakte Bauform

Absaugleistung 20 kPa



Image: A close-up view of the top of the Scheppach AVC25, showing the power switch, handle, and quick-release fasteners for securing the motor head to the collection tank.

4. OPERATING INSTRUCTIONS

This section details how to use your Scheppach AVC25 for ash vacuuming, dry vacuuming, and blowing.

4.1 Ash Vacuuming

- **Safety First:** Ensure all ashes are completely cold before attempting to vacuum. Hot ashes can damage the vacuum and pose a fire hazard.
- **Preparation:** Connect the hose to the suction inlet and attach the appropriate nozzle (e.g., crevice tool for tight spaces).
- **Operation:** Switch on the vacuum cleaner. Carefully guide the nozzle over the cold ash, collecting it into the tank.
- **Applications:** Ideal for cleaning fireplaces, wood stoves, and charcoal ovens.

Filterreinigungsfunktion
mit Verschmutzungsanzeige.



Image: A user demonstrating the ash vacuuming function, cleaning cold ash from inside a fireplace using the Scheppach AVC25 and its flexible, fire-resistant hose.

4.2 Dry Vacuuming

- **Preparation:** Ensure the HEPA filter is clean and correctly installed. Connect the hose to the suction inlet.
- **Operation:** Switch on the vacuum cleaner and use it to collect dry debris from hard surfaces.
- **Note:** This appliance is not designed for wet vacuuming.

4.3 Blower Function

- **Preparation:** Disconnect the hose from the suction inlet and connect it to the blower outlet, typically located on the top or side of the motor head.
- **Operation:** Switch on the vacuum cleaner. The air will now exit through the hose, allowing you to blow away leaves, dust, or other light debris.
- **Applications:** Useful for clearing patios, workshops, or starting charcoal fires.

Flexibler, feuerfester Schlauch von 150 cm.



Image: A user operating the Scheppach AVC25 to clean around a barbecue grill, demonstrating its versatility for outdoor cleaning tasks.



Image: A diagram illustrating suitable application examples for the vacuum cleaner, including fireplaces, charcoal ovens, and grills.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your appliance.

1. **Disconnect Power:** Always unplug the vacuum cleaner from the power outlet before any cleaning or maintenance.
2. **Emptying the Tank:**
 - Release the quick-release fasteners on the sides of the tank.
 - Lift off the motor head.
 - Carefully empty the contents of the 20-liter tank into a suitable waste container.
3. **Filter Cleaning:**
 - Remove the HEPA filter from its housing.
 - Gently tap the filter to dislodge accumulated dust and ash.
 - For thorough cleaning, the filter can be rinsed with cold water. Ensure it is completely dry before reinstallation.
 - The appliance features a filter cleaning function with a contamination indicator to alert you when cleaning is needed.
4. **Hose and Nozzles:** Clean the hose and nozzles as needed to prevent blockages.
5. **Exterior Cleaning:** Wipe the exterior of the vacuum cleaner with a damp cloth. Do not use abrasive cleaners or solvents.



Image: A close-up of the Scheppach AVC25's motor head, highlighting the filter cleaning function and its contamination indicator for timely maintenance.

6. TROUBLESHOOTING

If you encounter problems with your Scheppach AVC25, refer to the following table for common issues and solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not switch on.	No power supply. Power switch is off. Damaged power cord/plug.	Check power outlet and plug connection. Ensure power switch is in the "ON" position. Contact qualified service personnel for repair.
Low suction power.	Clogged filter. Blocked hose or nozzle. Full collection tank.	Clean or replace the HEPA filter. Check and clear any blockages in the hose or nozzle. Empty the collection tank.
Dust escapes from the appliance.	Filter not correctly installed. Damaged filter.	Ensure the HEPA filter is securely seated. Replace the damaged filter.
Unusual noise during operation.	Foreign object in the motor. Damaged motor.	Immediately switch off and unplug. Check for obstructions. If noise persists, contact service.

If the problem persists after attempting these solutions, please contact Scheppach customer support.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Scheppach
Model Number	AVC25 (5906406901)
Power	1300 Watts
Voltage	230 Volts
Collection Tank Capacity	20 Liters
Suction Power	20 kPa
Product Dimensions (L x W x H)	34.5 x 33.5 x 44 cm
Item Weight	4.4 Kilograms
Power Source	Electric Cable
Cable Length	5 meters
Hose Length	1.5 meters (fire-resistant)
Filter Type	HEPA Filter

Feature	Specification
Special Features	Bagless, Multi-function (Ash, Dry, Blower)
Surface Recommendation	Hard floor
Included Components	Filters and Nozzles
Country of Origin	China



Image: A technical diagram highlighting key specifications: 20 L container volume, 1300 W motor power, 5 m connection cable, and 1.5 m fire-resistant hose.



Image: A diagram illustrating the compact design of the vacuum cleaner and its suction power of 20 kPa.

8. WARRANTY AND SUPPORT

Scheppach products are manufactured to high-quality standards. In the unlikely event of a defect, please refer to your purchase documentation for warranty details.

- **Warranty Period:** Refer to your sales receipt or product registration for specific warranty terms.
- **Contact Support:** For technical assistance, spare parts, or warranty claims, please contact your retailer or the official Scheppach customer service.
- **Proof of Purchase:** Always retain your proof of purchase for any warranty claims.

Information regarding spare parts availability is currently unavailable. Please contact customer support for further details.