

Quicent KK1203NS

Quicent 10x10 Pop Up Canopy Tent Instruction Manual

Model: KK1203NS

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient setup, operation, and maintenance of your Quicent 10x10 Pop Up Canopy Tent. Please read all instructions carefully before assembly and use to ensure optimal performance and longevity of your product.

2. IMPORTANT SAFETY WARNINGS

Always anchor the tent securely in strong winds. Avoid placing the tent near open flames or heat sources. Ensure proper ventilation to prevent overheating.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly.

- 1x Quicent 10x10 Pop Up Canopy Frame (Alloy Steel)
- 1x Canopy Top (Waterproof, UV Protection)
- 1x Removable Sidewall
- 1x Durable Carry Bag with Wheels
- Ground Stakes
- Wind Ropes
- Sandbags (empty, for filling with sand/weight)



Figure 3.1: The QuicTent 10x10 Pop Up Canopy Tent, folded in its carry bag, next to a fully assembled tent. The carry bag features wheels for easy transport.

4. SETUP INSTRUCTIONS

The QuicTent 10x10 Pop Up Canopy Tent is designed for quick and easy assembly, often achievable by one person. Follow these steps for a hassle-free setup.

4.1. Frame Setup

1. **Unpack the Frame:** Remove the folded canopy frame from its carry bag.
2. **Expand the Frame:** Place the frame in the desired location. With a partner, or by yourself, gently pull the outer legs of the frame outwards to begin expanding it.
3. **Lock the Frame:** Once partially expanded, push up on the central support pole from underneath the frame. The tent will automatically lock into place as the support pole is pushed up.
4. **Extend Legs:** Press the red latch buttons on each leg and extend the legs to your desired height. Ensure all four legs are locked at the same height for stability.

Video 4.1: Detailed instructions for setting up the QuicTent 10x10 Pop Up Canopy Tent frame. This video demonstrates the process of expanding the frame and locking the central support pole.

4.2. Attaching the Canopy Top and Sidewall

1. **Drape Canopy Top:** Carefully drape the canopy top over the expanded frame. Ensure the corners are aligned with the frame's corners.
2. **Secure Canopy Top:** Attach the canopy top to the frame using the integrated Velcro straps at each corner

and along the frame's crossbars.

3. **Attach Sidewall:** If using the sidewall, attach it to the desired side of the canopy frame using the provided Velcro fasteners. The sidewall can be positioned for privacy or additional shade.

Video 4.2: A step-by-step tutorial demonstrating the setup of the canopy top and the single sidewall for the Quictent 10x10 Pop Up Canopy Tent.

5. OPERATING INSTRUCTIONS

Your Quictent canopy is designed for versatile use and comfort.

- **Height Adjustment:** The canopy legs feature multiple height settings. Press the red latch buttons on each leg to adjust the height. Ensure all legs are set to the same level for stability.
- **Sidewall Usage:** The included removable sidewall can be attached to any side of the canopy to provide additional shade, privacy, or protection from wind.
- **Air Circulation:** The vented roof design promotes improved air circulation, helping to keep the area underneath the canopy cool and comfortable.
- **Rainwater Drainage:** The canopy top is equipped with drainage holes on all sides to prevent rainwater from accumulating, ensuring a dry space during wet weather.



Figure 5.1: The canopy features a vented roof design for enhanced air circulation and stability in windy conditions.



Figure 5.2: The canopy top includes drainage holes on all sides to prevent water accumulation during rain.

6. MAINTENANCE

Proper maintenance will extend the life of your canopy tent.

- **Cleaning:** Clean the canopy fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners. Allow to air dry completely before storage.
- **Frame Care:** Inspect the alloy steel frame regularly for any signs of damage or corrosion. Clean any dirt or debris from the frame.
- **Storage:** Always store the canopy tent in its carry bag in a dry, cool place when not in use. Ensure the fabric is completely dry to prevent mold and mildew.

7. TROUBLESHOOTING

Address common issues to ensure safe and effective use.

- **Instability in Wind:** Always use the provided ground stakes, wind ropes, and sandbags to secure the canopy. Ensure all legs are properly anchored.
- **Water Pooling:** The canopy is designed with drainage holes. If water still pools, ensure the canopy top is taut and properly secured to the frame, and that the legs are extended to an appropriate height.

- **Difficulty in Setup/Takedown:** Ensure all locking mechanisms are fully engaged or disengaged. Do not force the frame. Refer to the setup video for visual guidance.

Video 7.1: This video provides useful tips and techniques for reinforcing your canopy tent to prevent collapses, especially in windy conditions.

8. SPECIFICATIONS

Brand	Quicent
Model Number	KK1203NS
Size	10x10 feet (100 Square Feet)
Product Dimensions	120 x 120 x 105 inches
Item Weight	30.6 pounds
Frame Material	Alloy Steel
Water Resistance Level	Waterproof
Ultraviolet Light Protection	UV Protection (UPF 50+)
Assembly Required	No (Instant Setup)



Figure 8.1: Visual representation of the 10x10 foot dimensions and adjustable height settings of the canopy tent.

9. WARRANTY & SUPPORT

For any questions, concerns, or support regarding your Quicent 10x10 Pop Up Canopy Tent, please contact Brandline customer service. Brandline offers 24/7 service to assist you.

You can find more information and contact details on the official [Quicent Brand Store](#).