

## Dell Latitude 7350 Detachable

# Dell Latitude 7350 Detachable 2-in-1 Laptop User Manual

Model: Latitude 7350 Detachable (KM4W1)

## INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Dell Latitude 7350 Detachable 2-in-1 Laptop. Please read this guide thoroughly to ensure proper use and to maximize the performance and longevity of your device.

The Dell Latitude 7350 Detachable is a versatile 2-in-1 laptop designed for business use, featuring a 13-inch 3K touch display, Intel Core Ultra 7 processor, 16GB RAM, and a 512GB SSD, running Windows 11 Pro.

## PACKAGE CONTENTS

Verify that all items are present in the package:

- Dell Latitude 7350 Detachable 2-in-1 Laptop
- Power Adapter (if included with your specific configuration)
- Detachable Keyboard (if included)
- Stylus (if included)
- Quick Start Guide

*Note: Some configurations may not include a power adapter, as indicated by "NO PWR NO AC ADPT" in the product description. Please ensure you have a compatible USB-C power adapter for charging.*

## SETUP

## 1. Initial Charging

Before first use, it is recommended to fully charge your Dell Latitude 7350. Connect a compatible USB-C power adapter to one of the USB-C ports on the device. The charging indicator light will illuminate.

## 2. Powering On

Press the power button located on the side or top edge of the tablet. The Dell logo will appear, followed by the Windows 11 Pro setup screen.

## 3. Initial Windows Setup

Follow the on-screen instructions to complete the Windows 11 Pro setup. This includes selecting your region, language, connecting to a Wi-Fi network, and creating a user account.

## 4. Attaching the Detachable Keyboard (Optional)

Align the magnetic connectors on the detachable keyboard with the corresponding ports on the bottom edge of the tablet. The keyboard will snap into place. Ensure a secure connection for proper functionality.



Image: Dell Latitude 7350 Detachable with its keyboard accessory. The tablet is propped up by the keyboard's kickstand, displaying a video conference and a presentation.

## OPERATING YOUR DEVICE

### Touchscreen Operation

The 13-inch 3K touch display supports multi-touch gestures. Use your fingers or a compatible stylus for navigation, selection, and input.

- **Tap:** Select an item or open an application.

- **Double-tap:** Open an item or perform a secondary action.
- **Pinch-to-zoom:** Zoom in or out on images and web pages.
- **Swipe:** Scroll through content or navigate between screens.



Image: The Dell Latitude 7350 Detachable in tablet mode, showcasing its 3K touch display with a video conference call and a business presentation.

## Using the Detachable Keyboard

When the keyboard is attached, the device functions as a traditional laptop. The keyboard includes a touchpad for cursor control and standard keys for typing. Function keys provide quick access to system settings like volume, brightness, and wireless connectivity.

## Ports and Connectivity

Your device is equipped with USB-C ports for charging, data transfer, and video output (DisplayPort). Wireless connectivity includes Wi-Fi (802.11n compatible). Refer to the specifications for the exact number of ports.

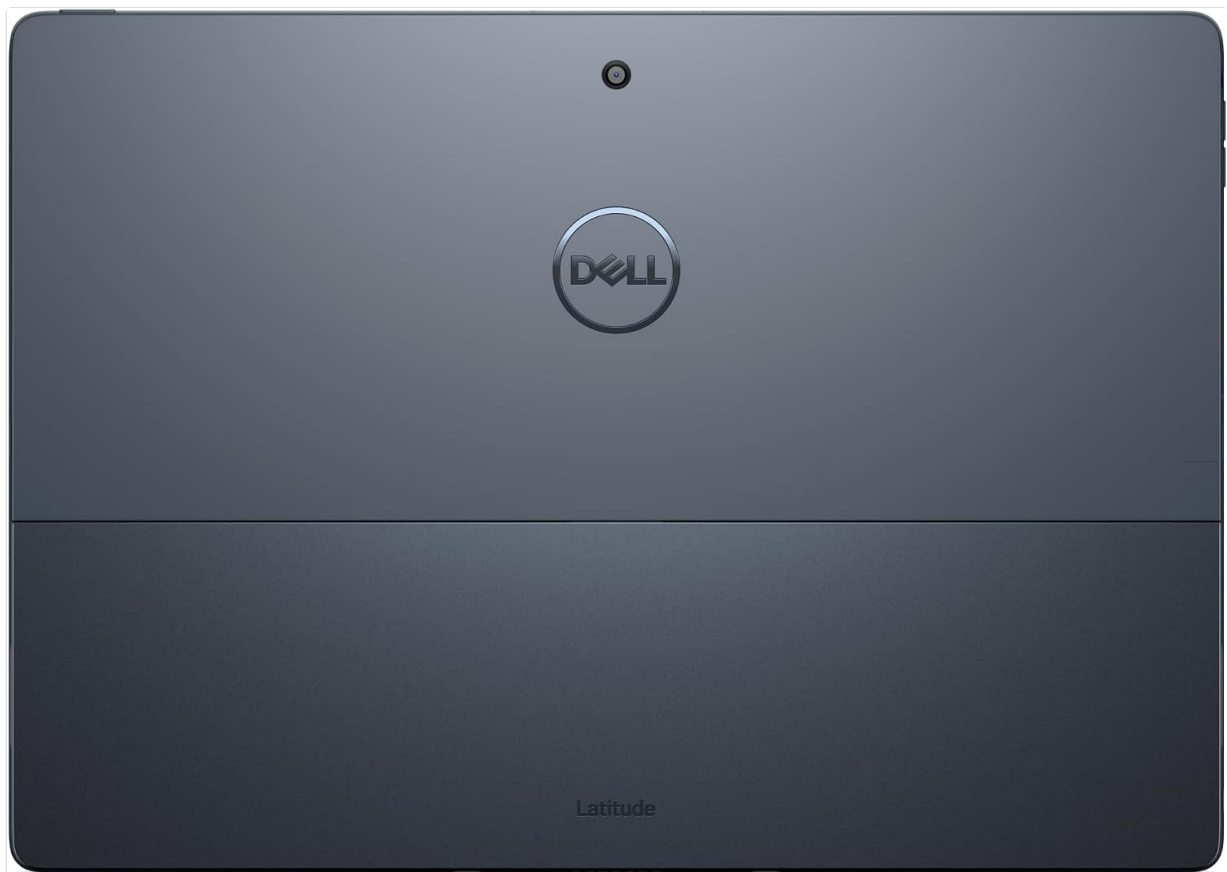


Image: An exploded diagram of the Dell Latitude 7350 Detachable, showing the internal components such as the motherboard, battery, and cooling system, separated from the display unit.

## MAINTENANCE

---

### Cleaning Your Device

- **Screen:** Use a soft, lint-free cloth lightly dampened with water or a screen cleaner. Avoid harsh chemicals.
- **Chassis:** Wipe with a soft, dry cloth. For stubborn marks, use a slightly damp cloth.
- **Keyboard:** Use compressed air to remove dust and debris from between keys. Wipe keycaps with a soft, damp cloth.

### Battery Care

To prolong battery life, avoid extreme temperatures and allow the battery to discharge partially before recharging. For long-term storage, ensure the battery is charged to approximately 50%.

### Software Updates

Regularly check for and install Windows updates and Dell driver updates to ensure optimal performance and security. These can be found through Windows Update settings and the Dell Support website.

## TROUBLESHOOTING

---

This section addresses common issues you might encounter with your Dell Latitude 7350 Detachable.

### Device Does Not Power On

- Ensure the device is charged. Connect the power adapter and wait a few minutes before attempting to

power on again.

- Verify the power adapter is functioning correctly and securely connected.

### Touchscreen Not Responding

- Restart the device.
- Ensure the screen is clean and free of debris.
- Check for any pending Windows updates or driver updates for the touchscreen.

### Keyboard Not Detected

- Ensure the keyboard is securely attached to the tablet's magnetic connectors.
- Detach and reattach the keyboard.
- Restart the device with the keyboard attached.

### Wi-Fi Connectivity Issues

- Verify that Wi-Fi is enabled in Windows settings.
- Restart your Wi-Fi router and the Dell Latitude 7350.
- Check for updated Wi-Fi drivers from the Dell Support website.

### SPECIFICATIONS

| Feature          | Detail                                        |
|------------------|-----------------------------------------------|
| Brand            | Dell                                          |
| Model Name       | Latitude 7350 Detachable                      |
| Model Number     | KM4W1                                         |
| Processor        | Intel Core Ultra 7 164U (up to 4.80GHz)       |
| Operating System | Windows 11 Pro                                |
| RAM              | 16 GB LPDDR5x (6400 MHz)                      |
| Storage          | 512 GB SSD                                    |
| Screen Size      | 13 Inches                                     |
| Resolution       | 3K (2880 x 1920 pixels)                       |
| Display Type     | LED, Touch screen (Capacitive)                |
| Graphics         | Integrated Intel Graphics (DDR5 SDRAM)        |
| Connectivity     | USB, Wi-Fi (802.11n), DisplayPort (via USB-C) |
| Ports            | 2 x USB-C (Total USB Ports)                   |
| Webcam           | Yes (IR Cam & Mic)                            |
| Battery          | 55 Watt Hours Lithium-Ion                     |

| Feature                        | Detail                                                                  |
|--------------------------------|-------------------------------------------------------------------------|
| Dimensions (L x W x Thickness) | 29.3L x 20.8W x 0.9Th cm                                                |
| Weight                         | 790 g (tablet only), 2.29 Kilograms (Item Weight, likely with keyboard) |
| Color                          | Black                                                                   |
| Form Factor                    | Detachable                                                              |

## WARRANTY AND SUPPORT

### Warranty Information

Your Dell Latitude 7350 Detachable comes with a 3-year EU Spare Part Availability Duration, which typically aligns with the product's limited hardware warranty. Please refer to your purchase documentation for specific warranty terms and conditions applicable to your region.

### Technical Support

For technical assistance, driver downloads, or further support, please visit the official Dell Support website: [www.dell.com/support](http://www.dell.com/support)

You will need your device's Service Tag, which can usually be found on a label on the device or accessed through system information in Windows.