



Manuals.plus /

- › JeDEL /
- › JeDEL WD142 Wireless Bluetooth Rechargeable Mouse User Manual

## JeDEL WD142

# JeDEL WD142 Wireless Bluetooth Rechargeable Mouse User Manual

Model: WD142

## 1. INTRODUCTION

The JeDEL WD142 is a versatile wireless mouse designed for various computing tasks. It features dual-mode connectivity, allowing connection via 2.4GHz wireless or Bluetooth, and offers adjustable DPI settings for precise control. This mouse is rechargeable, providing convenience and extended use. This manual provides instructions for setting up, operating, maintaining, and troubleshooting your WD142 mouse.



Figure 1: Top view of the JeDEL WD142 Wireless Bluetooth Rechargeable Mouse.

## 2. SETUP

### 2.1 Charging the Mouse

Before first use, or when the battery is low, charge the mouse using the provided Type-C charging cable. Connect the Type-C end to the mouse's charging port and the USB-A end to a power source (e.g., computer USB port, USB wall adapter). The charging indicator light will illuminate during charging and turn off when fully charged. A full charge typically takes approximately 1.5 hours.

### 2.2 2.4GHz Wireless Connection

1. Locate the USB 2.4GHz receiver, usually stored in a compartment on the underside of the mouse.
2. Insert the USB receiver into an available USB port on your computer.

3. Turn on the mouse using the power switch located on the underside.
4. Switch the mouse to 2.4GHz mode using the mode switch button (if available, typically on the underside). The mouse should connect automatically.

## 2.3 Bluetooth Connection

1. Turn on the mouse using the power switch.
2. Switch the mouse to Bluetooth mode using the mode switch button. The indicator light will typically blink, indicating it is in pairing mode.
3. On your device (computer, smartphone, tablet), go to Bluetooth settings.
4. Search for new devices. The mouse should appear as "JeDEL WD142" or similar.
5. Select the mouse to pair. Once paired, the indicator light on the mouse will stop blinking.

The JeDEL WD142 is compatible with iOS, macOS, Android, and Windows systems.

## 3. OPERATING INSTRUCTIONS

### 3.1 Basic Functions

- **Left Click:** Primary selection and activation.
- **Right Click:** Accesses contextual menus.
- **Scroll Wheel:** Scrolls content up or down. Can also be clicked for middle-click functionality.

### 3.2 DPI Adjustment

The mouse features adjustable DPI (Dots Per Inch) settings, allowing you to change cursor sensitivity. Press the DPI button (usually located behind the scroll wheel) to cycle through available DPI levels: 800, 1200 (default), and 1600. Each press will change the sensitivity, indicated by a brief flash of the indicator light.

### 3.3 Mode Switching

Use the mode switch button on the underside of the mouse to toggle between 2.4GHz wireless mode and Bluetooth mode as needed for different devices.

### 3.4 RGB Lighting

The mouse features dynamic RGB lighting. Specific controls for RGB lighting (e.g., on/off, mode change) may be available via a dedicated button or software, if applicable. Refer to the product packaging or manufacturer's website for detailed RGB control instructions.

## 4. MAINTENANCE

### 4.1 Cleaning

To clean the mouse, gently wipe its surface with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the mouse. Ensure no liquid enters the mouse's internal components.

## 4.2 Battery Care

- Avoid fully discharging the battery frequently to prolong its lifespan.
- Charge the mouse regularly, especially if it will not be used for an extended period.
- Do not expose the mouse to extreme temperatures, as this can affect battery performance.

## 4.3 Storage

When not in use, store the mouse in a cool, dry place away from direct sunlight and extreme temperatures. If storing for a long period, ensure the mouse is partially charged.

## 5. TROUBLESHOOTING

- **Mouse not responding:**
  - Ensure the mouse is powered on.
  - Check battery level and charge if necessary.
  - Verify the correct connection mode (2.4GHz or Bluetooth) is selected.
  - For 2.4GHz, ensure the USB receiver is securely plugged into the computer.
  - For Bluetooth, ensure the mouse is paired correctly and your device's Bluetooth is enabled.
- **Cursor movement is erratic or slow:**
  - Clean the optical sensor on the underside of the mouse.
  - Ensure you are using the mouse on a suitable surface (non-reflective, uniform color).
  - Adjust the DPI setting to a higher value if movement is too slow.
- **Mouse not charging:**
  - Ensure the Type-C charging cable is properly connected to both the mouse and the power source.
  - Try a different USB port or power adapter.
  - Check if the charging cable is damaged.
- **Bluetooth pairing issues:**
  - Ensure the mouse is in Bluetooth pairing mode (indicator light blinking).
  - Remove the mouse from your device's Bluetooth list and attempt to re-pair.
  - Restart your device's Bluetooth function or the device itself.

## 6. SPECIFICATIONS



Figure 2: Side view of the JeDEL WD142 Wireless Bluetooth Rechargeable Mouse.

Feature	Specification
Model Name	WD142
Connectivity Technology	2.4GHz Wireless, Bluetooth
DPI Settings	800 / 1200 (default) / 1600
Number of Buttons	4 (Left, Right, Scroll Wheel, DPI)
Battery Type	Rechargeable Lithium Battery
Battery Capacity	3.7V 300mAh
Charging Port	Type-C
Working Distance	Up to 10 meters (33 feet)
Silent Switch Life	Approximately 3 million clicks
Hand Orientation	Right
Compatible Devices	Personal Computer, Smartphone, Tablet
Hardware Platform	Mac, PC
Weight	69 ± 5g (without battery)
Dimensions (L x W x H)	109 x 60 x 32 mm
Battery Life	Up to 180 hours (standby), 75 hours (working)

## 7. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or contact the retailer/manufacturer directly. Specific warranty terms may vary by region and retailer.