

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Roku](#) /

› [Roku Smart TV 2025 – 32-Inch Select Series, 1080p Full HD TV – Roku TV with Voice Remote – Flat Screen LED Television with Wi-Fi for Streaming Live Local News, Sports, Family Entertainment 32" 1080p](#)

Roku 32R3C5

Roku Smart TV 2025 – 32-Inch Select Series Instruction Manual

MODEL: 32R3C5

Brand: [Roku](#)

1. INTRODUCTION

Welcome to the user manual for your new Roku Smart TV 2025, 32-Inch Select Series. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your television. Designed for a delightful entertainment experience, your Roku TV offers seamless streaming, vibrant Full HD picture quality, and intuitive controls. Please read this manual thoroughly to ensure proper use and to maximize your viewing pleasure.

2. WHAT'S IN THE Box

Upon unboxing your Roku Smart TV, please ensure all the following components are present:

- Roku Smart TV (Model: 32R3C5)
- User Manual (this document)
- Remote Control (with 2 AAA batteries included)
- TV Stand (2 pieces)
- Screws for Stand Assembly
- Quick Start Guide

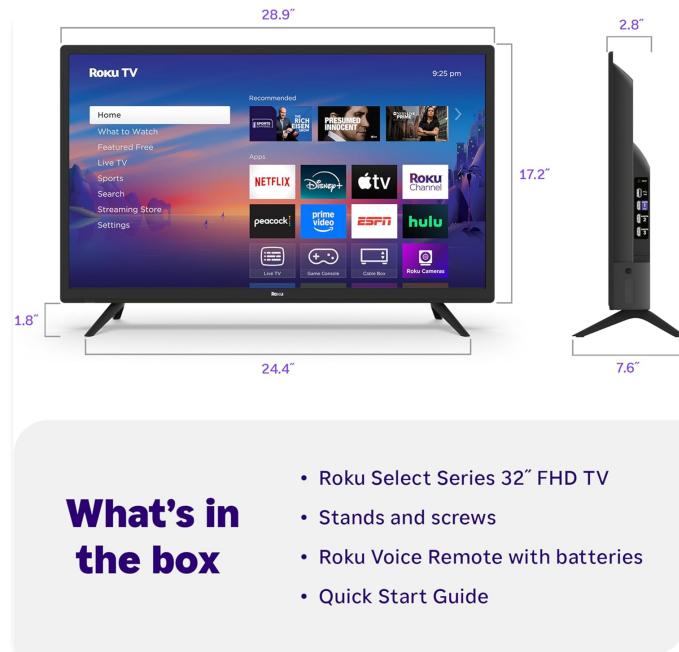


Figure 2.1: Included components and TV dimensions.

3. SETUP

3.1. Unboxing and Placement

Carefully remove the TV from its packaging. Place the TV face down on a soft, clean surface to prevent screen damage. Ensure adequate ventilation around the TV.



Figure 3.1: Roku Smart TV and packaging.

3.2. Attaching the Stand

1. Align the TV stand pieces with the screw holes on the bottom of the TV.
2. Secure the stand using the provided screws. Do not overtighten.
3. Carefully lift the TV and place it on a stable, flat surface.

3.3. Connecting Power and Devices

Connect the power cord to the TV and then to a wall outlet. Connect your external devices (e.g., cable box, gaming console) to the available HDMI ports on the TV. The TV features multiple HDMI inputs for versatile connectivity.

3.4. Initial Setup Wizard

Upon first power-on, the TV will guide you through an initial setup process. This includes connecting to your Wi-Fi network, setting up channels, and linking your Roku account. Follow the on-screen prompts to complete the setup.

4. OPERATING INSTRUCTIONS

4.1. Using the Voice Remote

The included voice remote allows for easy navigation and control. Insert the 2 AAA batteries into the remote. Use the directional pad to navigate the on-screen menus. Press the microphone button to activate voice commands for searching content or controlling playback.

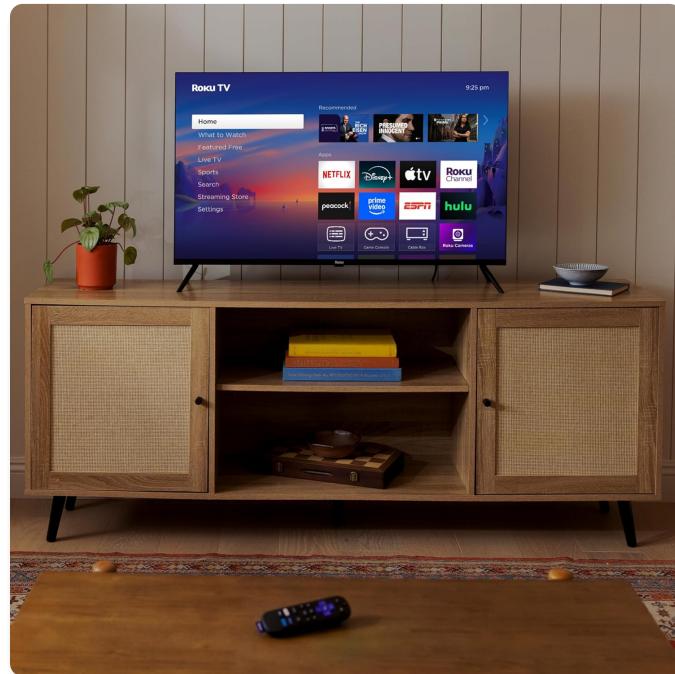


Figure 4.1: Roku TV and Voice Remote.

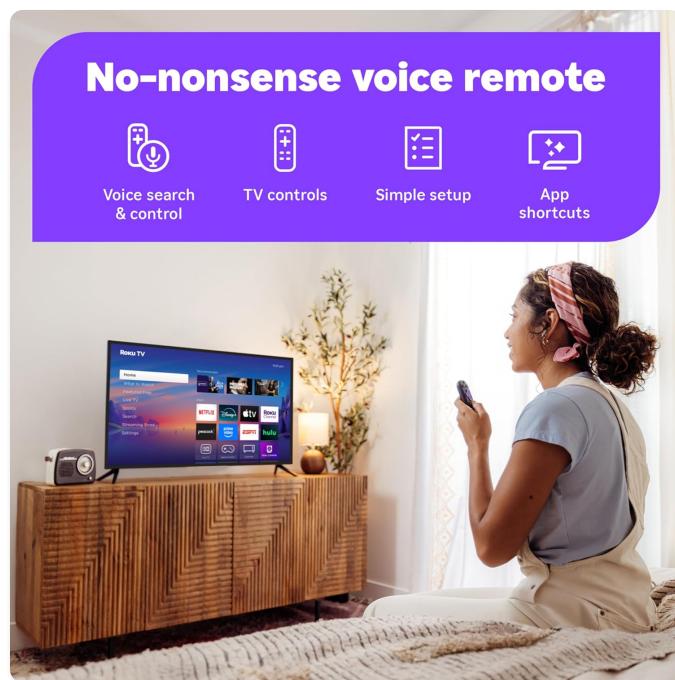


Figure 4.2: Voice Remote in action.

4.2. Navigating the Home Screen

The Roku Home Screen provides quick access to your favorite streaming apps, live TV, and connected inputs. You can customize the order of your apps for personalized access.

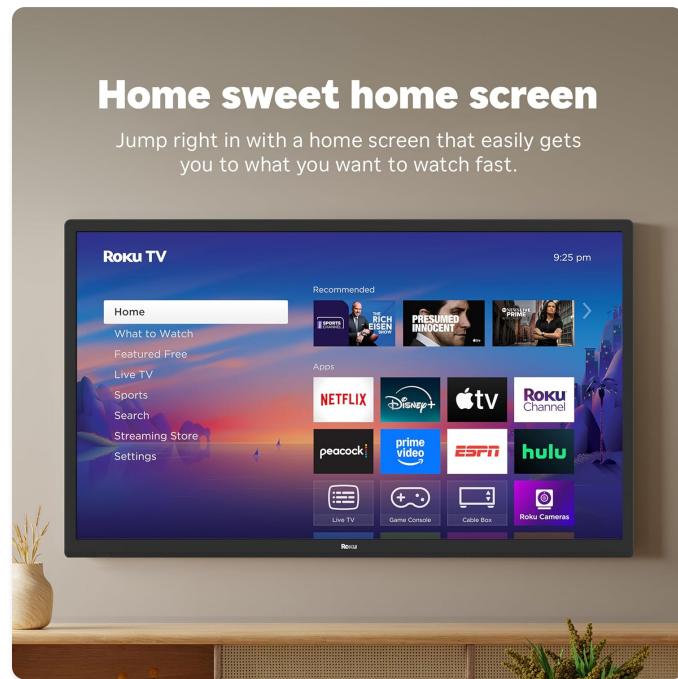


Figure 4.3: Roku TV Home Screen.

4.3. Streaming Content

Select any installed streaming app from the home screen to begin watching. The TV supports fast Wi-Fi for smooth streaming. Explore thousands of free and subscription-based channels.

5. FEATURES

Your Roku Smart TV is equipped with a range of features designed to enhance your entertainment experience:

- **Seamless Streaming:** Fast Wi-Fi and quick-launching apps provide immediate access to entertainment.
- **Vast Content Library:** Explore a world of TV with thousands of apps, including free movies, shows, and live TV.

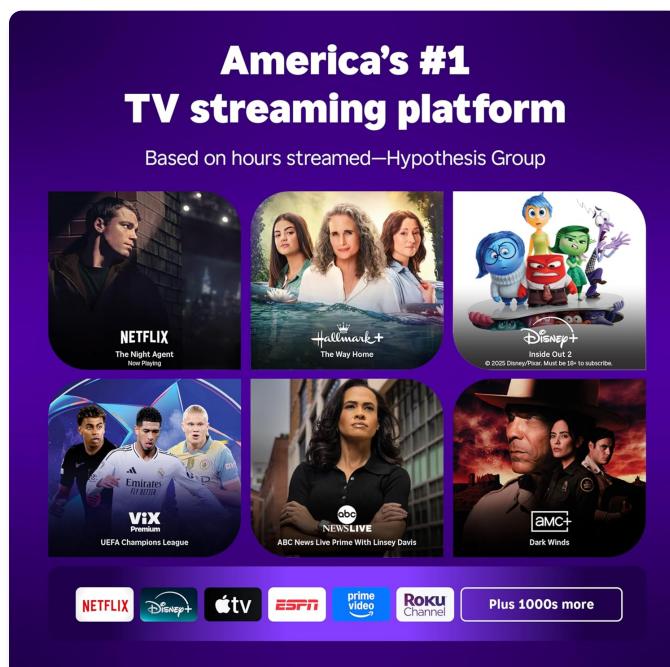


Figure 5.1: Diverse streaming options.

- **Free Live Television:** Access over 500 free TV channels directly from the home screen, including news, sports, and Roku Originals.

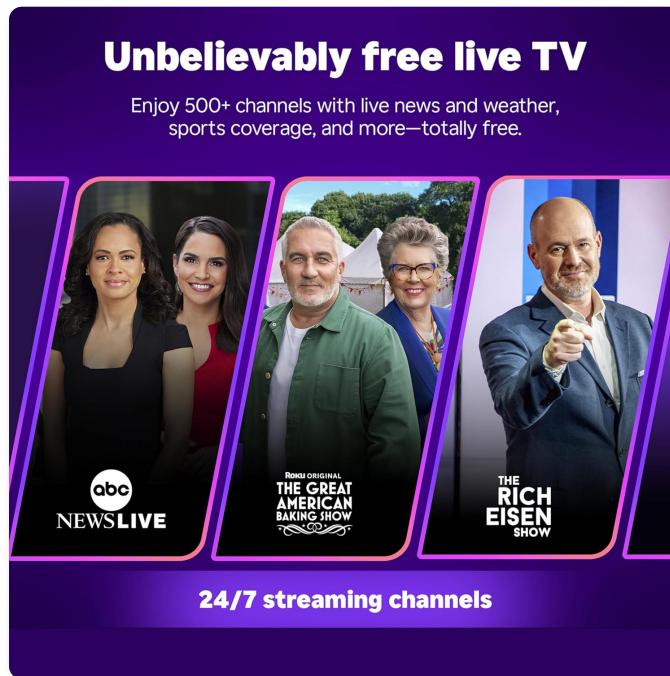


Figure 5.2: Free live TV channels.

- **Customizable Home Screen:** Organize your apps and inputs to quickly find what you want to watch.
- **Automatic Software Updates:** Receive the newest apps and features automatically, ensuring your TV is always up-to-date.
- **Smart Home Integration:** Enjoy voice control with Roku Voice, Siri, Alexa, or Google Assistant. Share content from Apple devices with Apple AirPlay.



Figure 5.3: Smart Home compatibility.

- **Bright, Clear 1080p Full HD Picture:** Experience vibrant and sharp images, optimized by Roku Smart Picture technology.
- **No-Nonsense Voice Remote:** Search across thousands of apps and control your entertainment with simple voice commands.
- **Clear Sound:** Designed with Dolby Audio technology for clear speech and louder sound.
- **Bluetooth Headphone Mode:** Connect your wireless headphones for private listening.

6. SPECIFICATIONS

Attribute	Value
Brand Name	Roku
Model Number	32R3C5
Item Weight	8.2 pounds
Product Dimensions	7.6 x 28.9 x 19 inches
Country of Origin	China
Batteries	2 AAA batteries required (included)
Color Name	Black
Special Features	Auto Volume Leveler, Miracast, Parental Controls, Voice Remote
Standing Screen Display Size	32 Inches
Aspect Ratio	16:9
Voltage	120 Volts (AC)
Wattage	58 watts
Display Technology	LED
Resolution	1080p
Refresh Rate	60 Hz
Connectivity Technology	Bluetooth, Wi-Fi, USB

7. MAINTENANCE

7.1. Cleaning Your TV

To clean the screen, gently wipe it with a soft, lint-free cloth. For stubborn marks, dampen the cloth with water or a screen cleaner specifically designed for electronics. Do not use harsh chemicals or abrasive materials. For the TV casing, use a soft, dry cloth.

7.2. Software Updates

Your Roku TV automatically receives software updates to improve performance and add new features. Ensure your TV is connected to the internet for these updates to download and install. You can check for updates manually via the Settings menu.

8. TROUBLESHOOTING

If you encounter any issues with your Roku Smart TV, refer to the following common troubleshooting steps:

- **No Power:** Ensure the power cord is securely plugged into both the TV and a working electrical outlet. Try a different outlet.
- **No Picture/Sound:** Verify that the correct input source is selected. Check all cable connections (HDMI, AV) are secure. Restart the TV by unplugging it for 30 seconds and plugging it back in.

- **Remote Not Responding:** Replace the batteries in the remote control. Ensure there are no obstructions between the remote and the TV.
- **Network Connection Issues:** Check your Wi-Fi router and ensure it is working correctly. Restart your router and TV. Re-enter your Wi-Fi password in the TV's network settings.
- **App Not Loading:** Ensure your internet connection is stable. Try restarting the app or the TV. If the issue persists, try removing and reinstalling the app.

9. WARRANTY AND SUPPORT

Your Roku Smart TV comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included with your product or visit the official Roku support website. For further assistance, technical support, or to register your product, please visit www.roku.com/support.