

Timex TW2Y01600JI

Timex Men's Dress Chronograph Watch

MODEL: TW2Y01600JI

Introduction

Thank you for choosing a Timex watch. This manual provides essential information for the proper use and care of your Timex Men's Dress Chronograph 43mm Watch, model TW2Y01600JI. This watch features a quartz chronograph movement, a date display, and is designed for everyday wear with its water-resistant construction.

Setup

1. Setting the Time

1. Pull the crown (B) out to the furthest position.
2. Turn the crown (B) in either direction to set the hour and minute hands. Ensure the AM/PM is correctly set if your watch has a 24-hour indicator or if the date changes at midnight.
3. Push the crown (B) back into its normal position to start the watch.

2. Setting the Date

1. Pull the crown (B) out to the middle position.
2. Turn the crown (B) to set the date.
3. Once the correct date is displayed, push the crown (B) back into its normal position.

3. Adjusting the Bracelet

The stainless steel bracelet is designed for a secure fit. For optimal comfort, it may require adjustment to fit your wrist size. It is recommended to have a professional jeweler adjust the bracelet by adding or removing links. Refer to the sizing chart video for guidance on how different case sizes appear on various wrist sizes.



Figure 1: Side view of the watch, illustrating the crown (B) and chronograph pushers (A and C).

Your browser does not support the video tag.

Video 1: Timex Sizing Chart. This video demonstrates how various watch case sizes appear on different wrist sizes, which can be helpful when considering bracelet adjustments.

Operating the Chronograph

Your watch is equipped with a chronograph function to measure elapsed time.

1. **Start:** Press pusher (A) to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press pusher (A) again to stop the chronograph. The elapsed time will be displayed.
3. **Reset:** After stopping the chronograph, press pusher (C) to reset all chronograph hands to their zero positions.

Maintenance

Cleaning

To maintain the appearance of your watch, wipe the case and bracelet with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the finish.

Water Resistance

This watch is water resistant to 50 meters (WR50M). This means it is suitable for short periods of

recreational swimming, but not for diving or snorkeling. Do not operate the crown or pushers while the watch is wet or submerged, as this can compromise the water resistance. Exposure to hot water (e.g., in showers or saunas) should be avoided as it can damage seals.



Figure 2: Watch case back, indicating water resistance (WR50 Meters) and battery type (SR920SW CELL).

Troubleshooting

- **Watch not running:** Check if the crown is fully pushed in. If the watch still does not run, the battery may need replacement. The watch uses a SR920SW CELL battery.
- **Incorrect time/date:** Refer to the 'Setting the Time' and 'Setting the Date' sections to re-adjust.
- **Chronograph hands not resetting to zero:** This may indicate a need for chronograph hand calibration. Consult a professional watch repair service or the Timex support website for instructions specific to your movement.

Specifications

Model Number	TW2Y01600JI
Case Diameter	43 mm
Case Thickness	11.5 mm
Band Width	20 mm
Band Length	8 Inches
Movement Type	Quartz
Display Type	Analog
Water Resistance	50 Meters (WR50M)
Case Material	Stainless Steel
Band Material	Stainless Steel
Crystal Material	Mineral Glass
Battery Type	SR920SW CELL

Warranty and Support

Your Timex watch is covered by a limited warranty. For detailed warranty information, service, or support, please visit the official Timex website or contact their customer service. Keep your purchase receipt as proof of purchase.