

Timex TW2Y01400JI

Timex Men's Dress Chronograph Watch User Manual

Model: TW2Y01400JI

INTRODUCTION

This manual provides essential information for the proper use, care, and maintenance of your Timex Men's Dress Chronograph Watch (Model: TW2Y01400JI). Please read this manual thoroughly before using your watch to ensure optimal performance and longevity.



Figure 1: Front view of the Timex Men's Dress Chronograph Watch. This image displays the watch face with its black dial,

silver-tone hour markers, three sub-dials for the chronograph function, and a date window. The silver-tone stainless steel case and bracelet are also visible.

PRODUCT FEATURES

- **Chronograph Function:** Allows for precise measurement of elapsed time, functioning as a stopwatch.
- **Stainless Steel Construction:** The case and bracelet are crafted from durable stainless steel, offering resistance to corrosion and daily wear.
- **Enhanced Visibility:** Features large Arabic indices and luminant details on the hands for clear time reading, even in low-light conditions.
- **Date Window:** A dedicated display for the current date, located near the 4 o'clock position.
- **Water Resistance:** Designed for everyday use, consult specifications for exact depth rating.

SETUP

Setting the Time

1. Pull the crown (the knob on the side of the watch) out to the second click position. The second hand will stop.
2. Turn the crown to set the hour and minute hands to the desired time. Ensure the AM/PM is correctly set if your watch has a 24-hour indicator or date changes at midnight.
3. Push the crown back in to the normal position. The second hand will resume movement.

Setting the Date

1. Pull the crown out to the first click position.
2. Turn the crown clockwise or counter-clockwise (depending on the model) to set the date.
3. Push the crown back in to the normal position.

Note: Avoid setting the date between 9 PM and 3 AM, as this may interfere with the automatic date change mechanism.

OPERATING THE CHRONOGRAPH

The chronograph function allows you to measure elapsed time with precision.

Chronograph Buttons

- **Button A (Top Pusher):** Starts and stops the chronograph.
- **Button B (Bottom Pusher):** Resets the chronograph to zero.

Using the Chronograph

1. To start timing, press Button A. The chronograph second hand will begin to move.
2. To stop timing, press Button A again. The chronograph hands will stop, indicating the elapsed time.
3. To reset the chronograph, press Button B. All chronograph hands will return to their zero positions.



Figure 2: Side view of the Timex Men's Dress Chronograph Watch. This image highlights the watch's crown and the two chronograph pushers located on the right side of the case, which are used to operate the stopwatch function.

MAINTENANCE AND CARE

- **Cleaning:** Wipe the watch case and bracelet regularly with a soft, dry cloth. For stainless steel, a slightly damp cloth can be used, followed by a dry cloth. Avoid harsh chemicals.
- **Water Resistance:** While your watch is water-resistant, it is not designed for diving. Avoid prolonged exposure to water, hot showers, or saunas, as temperature changes can affect seals. Always ensure the crown is pushed in completely before any water exposure.
- **Temperature Extremes:** Avoid exposing your watch to extreme temperatures, either hot or cold, as this can affect accuracy and battery life.
- **Magnetic Fields:** Keep the watch away from strong magnetic fields (e.g., speakers, refrigerators, mobile phones) as they can affect the watch's movement.

- **Battery Replacement:** When the watch stops or the second hand begins to jump every few seconds (End-of-Life indicator), the battery needs replacement. This should be done by a qualified watch technician to maintain water resistance.



Figure 3: Close-up view of the watch's case back. This image shows the engraved details on the stainless steel case back, including the Timex logo, water resistance rating (WR50 Meters), and battery type (SR920SW CELL), indicating important specifications for maintenance.

Problem	Possible Cause	Solution
Watch stops or runs intermittently.	Low battery.	Replace the battery. Consult a professional watch technician.
Date changes at the wrong time (e.g., noon).	AM/PM setting is incorrect.	Advance the time by 12 hours.
Chronograph hands do not reset to zero.	Requires calibration.	Consult the full instruction manual or a watch technician for chronograph hand calibration procedures.
Condensation inside the watch.	Exposure to extreme temperature changes or compromised water resistance.	Immediately take the watch to a qualified watch repair center. Do not attempt to dry it yourself.

SPECIFICATIONS

Feature	Detail
Model Number	TW2Y01400JI
Case Diameter	43mm
Case Material	Stainless Steel
Band Material	Stainless Steel Bracelet
Dial Color	Black
Movement Type	Chronograph Quartz
Water Resistance	WR50 Meters (5 ATM) - Suitable for short periods of recreational swimming, but not diving or snorkeling.
Battery Type	SR920SW CELL
Package Dimensions	4.06 x 3.03 x 2.8 inches
Item Weight	7.58 ounces

WARRANTY AND SUPPORT

Timex watches are manufactured to high quality standards and are covered by a limited warranty against manufacturing defects. For specific warranty terms and conditions, please refer to the warranty card included

with your purchase or visit the official Timex website.

For customer support, service, or repair inquiries, please contact Timex customer service or visit their authorized service centers. Always provide your watch's model number (TW2Y01400JI) when seeking assistance.

Disclaimer: This manual provides general instructions. Specific features and operations may vary slightly by model. For comprehensive details, refer to the official Timex website or contact customer support.