

[Manuals.plus](#) /

› [Nikon](#) /

› Nikon COOLPIX P1100 Digital Camera User Manual

Nikon COOLPIX P1100

Nikon COOLPIX P1100 Digital Camera User Manual

Model: COOLPIX P1100

INTRODUCTION

This manual provides essential information for the safe and effective use of your Nikon COOLPIX P1100 Superzoom Digital Camera. Please read this manual thoroughly before using the camera and keep it accessible for future reference.



Figure 1: Nikon COOLPIX P1100 Digital Camera and included accessories.

SETUP

1. Unboxing and Contents

Carefully unpack all items from the box. Verify that all components are present:

- Nikon COOLPIX P1100 Digital Camera
- AN-DC3 Strap
- LC-77 Snap-On Front Lens Cap 77mm
- EN-EL20a Rechargeable Li-ion Battery
- HB-CP1 Lens Hood
- UC-E24 USB Cable
- Additional bundle items: 64GB Lexar Memory Card, Large Gadget Bag, EN-EL20A Battery, Remote Switch Shutter

Release Cord, 12-Inch Compact Rubberized Spider Tripod, LCD/Lens Brush, Corel Paint Shop Pro X9 Digital Download Card, Hi-Speed SDHC Memory Card Reader, Tri-fold Memory Card Wallet, Microfiber Cloth.

2. Battery Installation and Charging

Insert the EN-EL20a rechargeable Li-ion battery into the battery compartment located at the bottom of the camera. Ensure it clicks into place. Connect the camera to a power source using the UC-E24 USB cable to charge the battery. The charging indicator will illuminate during charging and turn off when complete.

3. Memory Card Insertion

Open the memory card slot cover. Insert a compatible SDHC memory card (64GB Lexar Memory Card included in bundle) into the slot with the label facing the correct direction until it locks into place. Close the cover securely.

4. Attaching the Lens Hood and Strap

Attach the HB-CP1 Lens Hood to the front of the lens by aligning the marks and twisting until it locks. Attach the AN-DC3 strap to the camera's strap lugs for secure handling.



Figure 2: Front angled view of the camera, showing lens and body.

OPERATING INSTRUCTIONS

1. Camera Overview

Familiarize yourself with the camera's controls:

- **Power Button:** Turns the camera on/off.
- **Shutter Release Button:** Takes photos.
- **Mode Dial:** Selects shooting modes (Auto, Program, Shutter Priority, Aperture Priority, Manual, Scene, Bird-watching, Moon, etc.).
- **Zoom Control:** Adjusts optical and digital zoom.
- **Control Ring:** Customizable for manual focus, exposure compensation, or white balance.

-
- A detailed rear view of a black Canon EOS R camera body. The camera features a large, black LCD screen on the left side, which is currently closed. Above the screen is the viewfinder. To the right of the screen is a cluster of controls, including a multi-selector dial with 'AE-L' and 'AF-L' markings, a red AF-ON button, a playback button, a 'DISP' button, a central 'OK' button surrounded by a ring of function icons, a 'MENU' button, and a delete button. The camera has a textured grip on the right side and a small flash unit mounted on top. The entire camera is set against a plain white background.

Figure 3: Rear view of the camera, highlighting the LCD and control layout.



Figure 4: The camera's articulating LCD screen provides flexible viewing angles.

2. Shooting Modes

The Mode Dial allows selection of various shooting modes:

- **Auto Mode:** Camera automatically optimizes settings for most situations.
- **P (Program Auto):** Camera sets aperture and shutter speed for optimal exposure, while you can adjust other settings.
- **S (Shutter-Priority Auto):** You set the shutter speed, and the camera selects the aperture for correct exposure.
- **A (Aperture-Priority Auto):** You set the aperture, and the camera selects the shutter speed for correct exposure.
- **M (Manual):** You control both aperture and shutter speed.
- **Scene Modes:** Pre-set modes for specific scenes (e.g., Portrait, Landscape, Night).
- **Bird-watching Mode:** Optimizes settings for capturing fast-moving birds at a distance.
- **Moon Mode:** Specifically designed for clear, detailed moon photography.



Figure 5: The mode dial with the Bird-watching mode selected, ideal for capturing wildlife.



Figure 6: The Moon mode on the dial, perfect for capturing celestial bodies.

3. Zoom and Image Stabilization

The COOLPIX P1100 features an impressive 125x optical zoom, equivalent to 24-3000mm, and a 250x Dynamic Fine Zoom (up to 6000mm). Use the zoom control to adjust the focal length. Dual Detect Optical VR (Vibration Reduction) image stabilization helps to minimize camera shake, especially at extreme telephoto lengths, providing up to 4.0 stops of compensation.



Figure 7: Demonstrating the camera's extended zoom capability in use.



Figure 8: Example of a subject captured at 3000mm, showcasing the camera's telephoto reach.

4. Focus and Metering

The camera features autofocus (AF) with various modes including Automatic AF (AF-A). For precise control, manual

focus is also available via the control ring. Metering options include Center-Weighted Average, Matrix, and Spot metering to ensure accurate exposure in different lighting conditions.

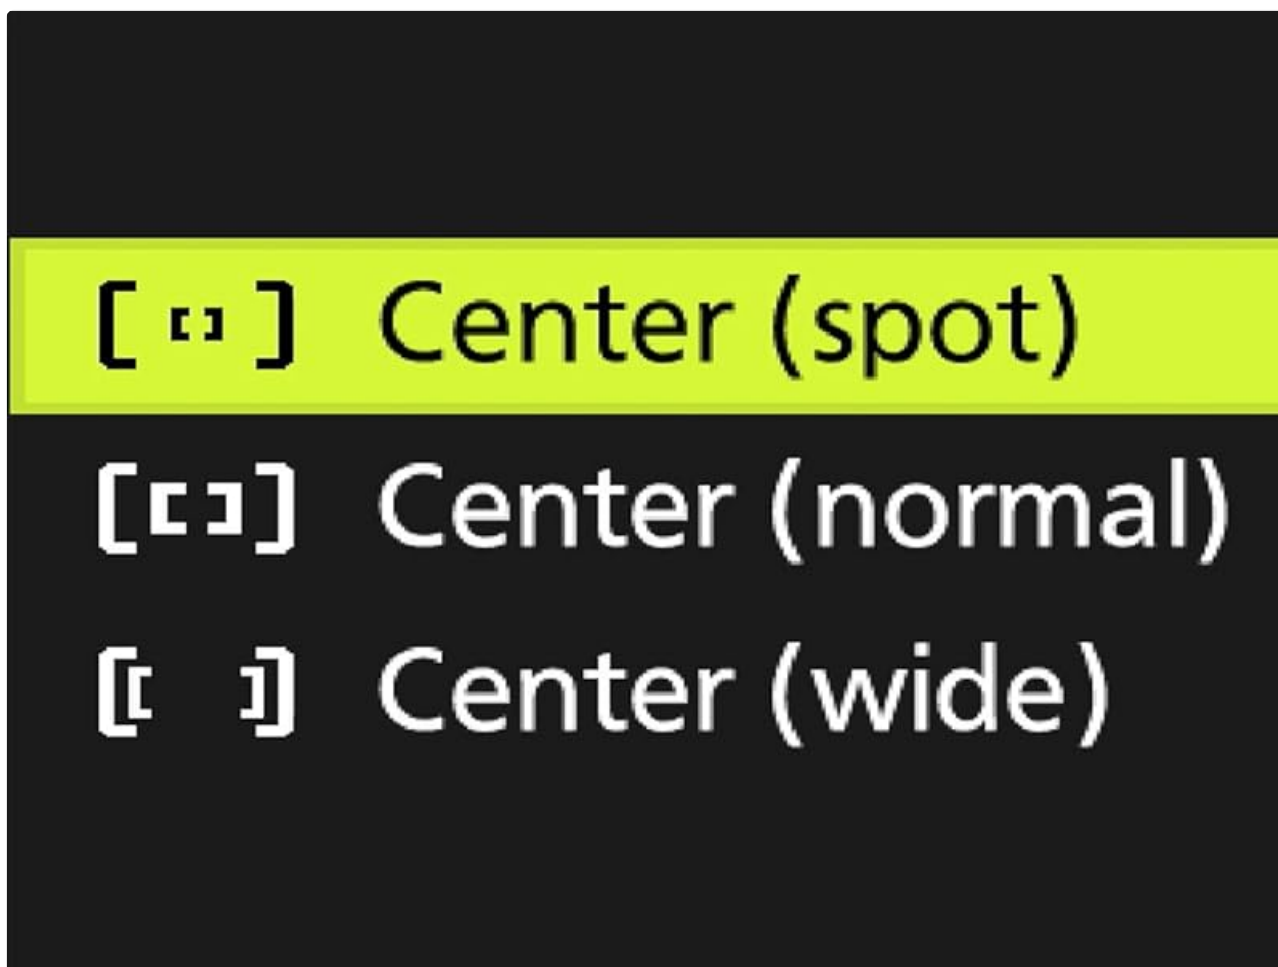


Figure 9: On-screen display of metering options for precise exposure control.

5. Video Recording

Record stunning 4K UHD videos (3840 x 2160) at 30p, or Full HD 1080p videos at various frame rates. The camera also supports smooth slow-motion, time-lapse, and Superlapse movies.

6. Connectivity

The COOLPIX P1100 supports Bluetooth and Wi-Fi connectivity. Use the Nikon SnapBridge app on your smartphone to wirelessly transfer photos, control the camera remotely, and add GPS information to your images.



Figure 10: The camera's wireless connectivity with the SnapBridge app for seamless photo transfer and remote control.

MAINTENANCE

1. Cleaning the Camera

- **Lens:** Use a soft brush or a lens blower to remove dust. For smudges, use a lens cleaning solution and a microfiber cloth (included in bundle).
- **Camera Body:** Wipe with a soft, dry cloth. Do not use organic solvents.
- **LCD Monitor:** Gently wipe with a soft, lint-free cloth.

2. Battery Care

- Store batteries in a cool, dry place when not in use.
- Avoid fully discharging the battery frequently to prolong its lifespan.
- Charge the battery fully before extended storage.

3. Storage

When storing the camera for extended periods, remove the battery and memory card. Store the camera in a dry, well-ventilated area, preferably in a camera bag to protect it from dust and moisture.

TROUBLESHOOTING

This section addresses common issues you might encounter with your Nikon COOLPIX P1100 camera.

Problem	Possible Cause / Solution
Camera does not turn on.	Battery is depleted or incorrectly inserted. Ensure battery is charged and properly seated.
Images are blurry.	Camera shake (use VR or tripod), subject movement, incorrect focus. Check focus mode and lighting conditions.
Memory card error.	Card is full, corrupted, or incompatible. Try formatting the card (will erase data) or use a different card.
Flash does not fire.	Flash mode is set to "Off" or battery is low. Adjust flash settings or charge battery.

For more detailed troubleshooting or issues not listed here, please refer to the official Nikon support website or contact customer service.

SPECIFICATIONS

Feature	Detail
Model Name	COOLPIX P1100
Effective Still Resolution	16 MP
Photo Sensor Technology	CMOS
Optical Zoom	125x
Maximum Focal Length	539 Millimeters (equivalent to 3000mm in 35mm format)
Image Stabilization	Optical (Dual Detect Optical VR)
Video Resolution	2160p (4K UHD), 1080p (Full HD)
Screen Size	3.2 Inches
Display Type	Articulating LCD
Connectivity	Bluetooth, Wi-Fi
Item Weight	3.1 Pounds
Battery Type	Lithium Ion (EN-EL20a)
Supported File Format	JPEG, Raw (.NRW)

WARRANTY AND SUPPORT

The Nikon COOLPIX P1100 Digital Camera comes with a full Nikon USA Warranty. For warranty claims, technical support, or service, please contact Nikon customer service directly or visit their official website. For additional resources and support, you may visit the official Nikon Store:[Nikon Official Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question