

- Manuals.plus /
- › Whirlpool /
- › Whirlpool WFES3330RS 5.3 Cu. Ft. Stainless Freestanding Electric Range User Manual

Whirlpool WFES3330RS

Whirlpool WFES3330RS 5.3 Cu. Ft. Stainless Freestanding Electric Range User Manual

Model: WFES3330RS

1. PRODUCT OVERVIEW

The Whirlpool WFES3330RS is a 5.3 cubic foot freestanding electric range designed for efficient cooking and baking. It features a flexible cooktop with dual radiant elements, a spacious oven, and convenient cleaning options.



Image: Front-side view of the Whirlpool WFES3330RS Electric Range, illustrating its overall dimensions: 47-7/8 inches in height, 27-3/4 inches in depth, and 29-7/8 inches in width.

2. SETUP AND INSTALLATION

Before operating your new electric range, ensure proper installation and electrical connection. It is recommended to consult a qualified installer for setup.

2.1 Unpacking

- Remove all packaging materials, tape, and protective film from the range before use.
- Check for any shipping damage. If damage is found, contact your dealer immediately.

2.2 Placement and Leveling

- Position the range in its intended location, ensuring adequate clearance from adjacent surfaces.
- Level the range using the adjustable leveling legs to ensure even cooking and stability.

2.3 Electrical Requirements

This appliance requires a dedicated, properly grounded electrical circuit. Refer to the detailed electrical specifications in the installation manual for specific voltage and amperage requirements.

For complete installation instructions, please refer to the official [Whirlpool WFES3330RS Installation Manual \(PDF\)](#).

3. OPERATING INSTRUCTIONS


Familiarize yourself with the various cooking functions and controls of your Whirlpool electric range.

3.1 No Preheat Mode

The No Preheat Mode allows you to skip traditional oven preheating for certain items, such as frozen pizzas. Simply place the food in the oven and select the No Preheat option. The range automatically adjusts the cooking time.



Image: Front view of the Whirlpool WFES3330RS Electric Range, highlighting the 'NO PREHEAT MODE' feature with a yellow banner across the oven door.

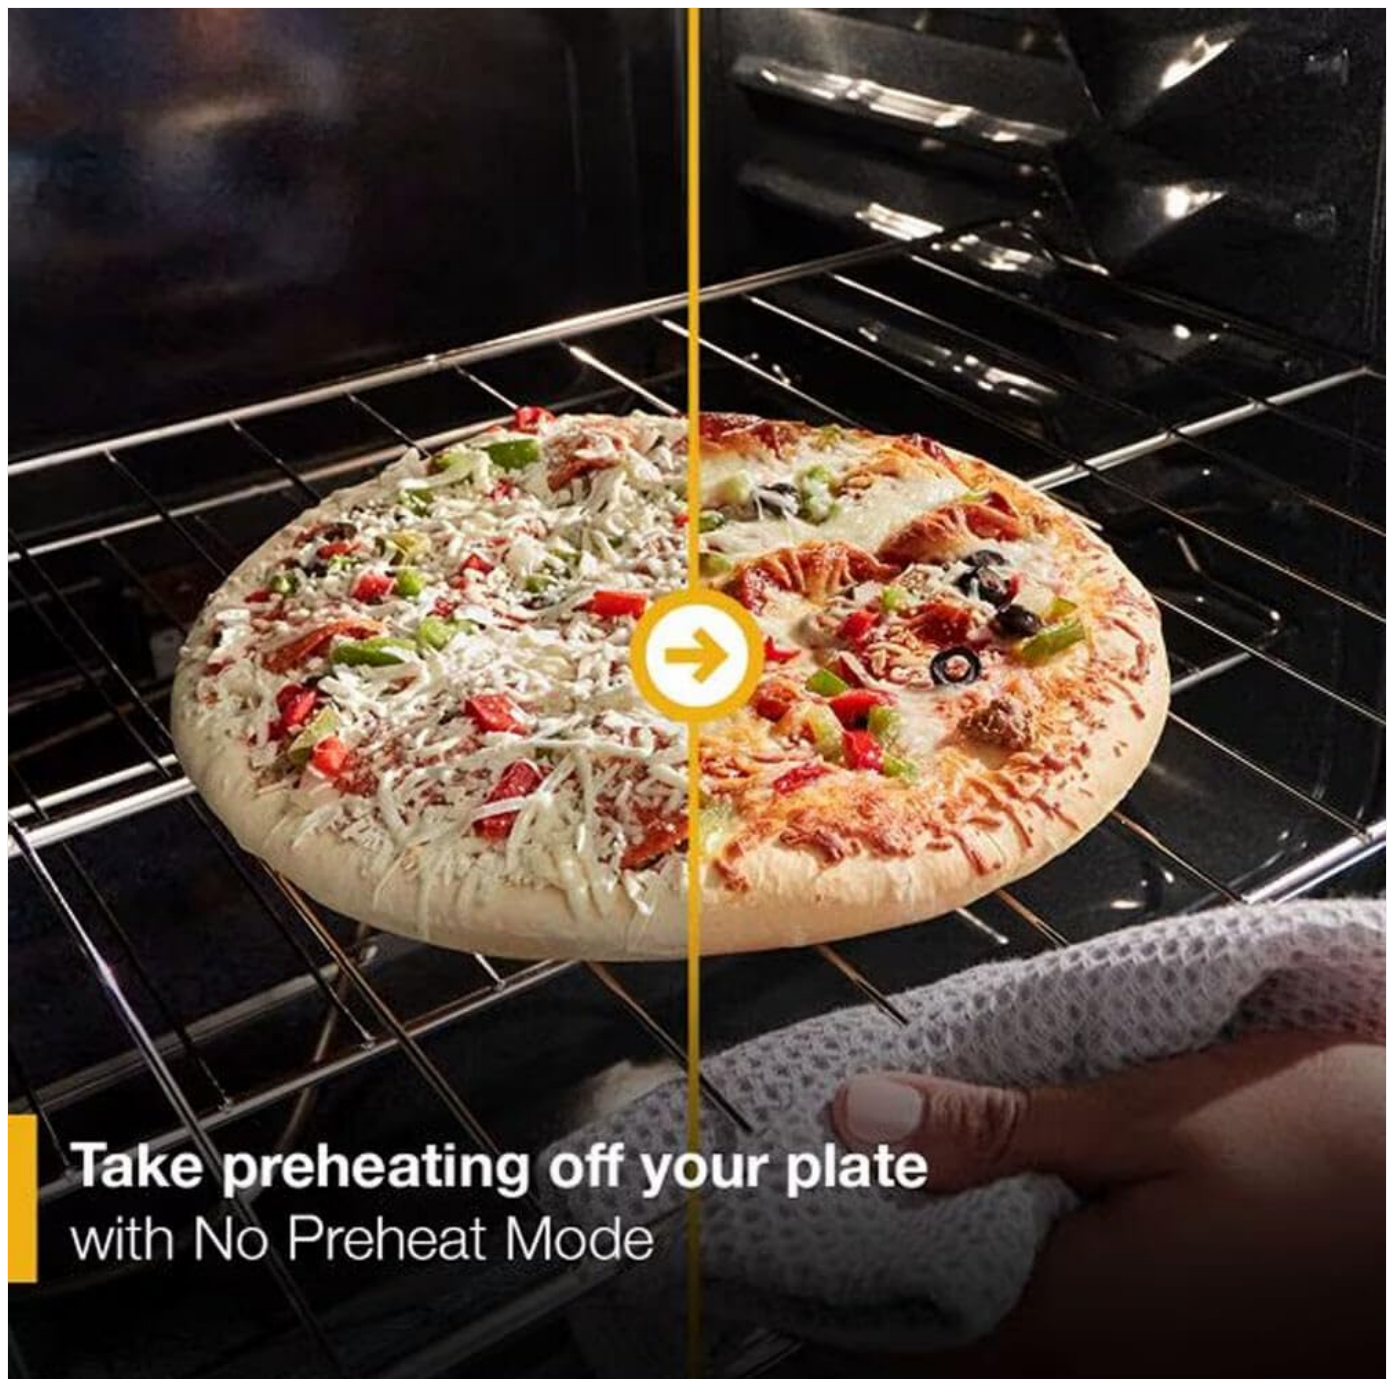

Take preheating off your plate
with No Preheat Mode

Image: A pizza shown half raw and half cooked, with an arrow indicating the transition, demonstrating how the 'No Preheat Mode' simplifies cooking by eliminating the need for preheating.

3.2 Even Baking with Built-in Temperature Sensor

The oven features a built-in temperature sensor that helps maintain consistent heat throughout the oven cavity, promoting more predictable and even baking results.



A built-in temperature sensor
helps bake evenly

Image: A golden-brown cake baking evenly in a round pan inside the oven, with a hand in an oven mitt nearby, demonstrating the effectiveness of the built-in temperature sensor.

3.3 Broil Option

Use the Broil option to add a crispy, browned finish to dishes such as meats, casseroles, and gratins. Position food on the appropriate rack level for best results.



Image: The interior of the oven with the top broil elements glowing red, heating a dish placed on a rack below, illustrating the broil function.

3.4 Flexible Cooktop with FlexHeat Dual Radiant Elements

The cooktop features two FlexHeat Dual Radiant Elements (9-inch outer/6-inch inner) that allow you to customize the surface heating area to match different pot and pan sizes. This design can boil water up to 40% faster compared to a standard 6-inch element.



Image: A detailed view of the electric range's cooktop, showing the radiant heating elements and the adjacent control panel with knobs and digital display.

3.5 Keep Warm Setting and Warm Zone

The oven includes a Keep Warm setting to maintain food at serving temperature without overcooking. Additionally, the cooktop features a dedicated Warm Zone to keep dishes warm until ready to serve.

4. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your electric range.

4.1 Steam Clean Option

For light spills and splatters, utilize the Steam Clean option. Add water to the oven cavity and run the cycle. The steam will help loosen debris, making it easier to wipe away without harsh chemicals or extensive scrubbing.

4.2 General Cleaning

- Clean the cooktop with a ceramic cooktop cleaner after each use to prevent buildup.
- Wipe down exterior surfaces with a soft cloth and mild detergent.
- Remove oven racks before cleaning the oven interior.

5. TROUBLESHOOTING

If you encounter issues with your range, refer to the following common troubleshooting tips. For more complex problems, consult the full user manual or contact customer support.

- **Range Not Turning On:** Check if the range is properly plugged into a working electrical outlet and if the circuit breaker has tripped.
- **Uneven Cooking:** Ensure the range is level. For oven issues, verify that the correct temperature and cooking mode are selected.
- **Surface Element Not Heating:** Confirm the element is correctly seated and the control knob is set to the desired

heat level.

For a comprehensive list of troubleshooting steps and solutions, please refer to the official [Whirlpool WFES3330RS User Manual \(PDF\)](#).

6. SPECIFICATIONS

Key specifications for the Whirlpool WFES3330RS Electric Range:

Feature	Specification
Model Name	WFES3330RS
Brand	Whirlpool
Capacity	5.3 cubic feet
Form Factor	Freestanding
Finish Type	Stainless Steel
Heating Element	Radiant Heating Element
Drawer Type	Storage
Item Dimensions (D x W x H)	27.75"D x 29.88"W x 47.88"H
Item Weight	140 pounds
UPC	883049683638

7. WARRANTY INFORMATION

This Whirlpool WFES3330RS Electric Range comes with a **1-Year Limited Warranty**. This warranty covers defects in materials or workmanship under normal household use. For full terms and conditions, including exclusions and how to obtain service, please refer to the warranty documentation included with your appliance or the official user manual.

8. CUSTOMER SUPPORT

For further assistance, service, or to order replacement parts, please contact Whirlpool Customer Support. Have your model number (WFES3330RS) and serial number ready when contacting support.

- Visit the official [Whirlpool Website](#) for product registration, FAQs, and support resources.
- Refer to the comprehensive [Whirlpool WFES3330RS User Manual \(PDF\)](#) for detailed instructions and information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DWJZLLW4>

More documents and user manuals: **<https://manuals.plus/>**