



Manuals.plus /

› LG /

› LG LF26C8210S 26 Cu. Ft. Stainless 4-Door French Door Refrigerator User Manual

LG LF26C8210S

LG LF26C8210S 26 Cu. Ft. Stainless 4-Door French Door Refrigerator User Manual

Your guide to safe and efficient use of your LG refrigerator.

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using the appliance to reduce the risk of fire, electric shock, or injury to persons.

- **Electrical Safety:** Always plug into a grounded 3-prong outlet. Do not remove the grounding prong. Do not use an adapter.
- **Installation Safety:** Ensure proper ventilation. Do not install near heat sources. Follow all local codes and ordinances.
- **Child Safety:** Keep children away from the appliance during installation and operation. Old refrigerators can be dangerous if children play inside.
- **Flammable Materials:** Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

PRODUCT OVERVIEW

Familiarize yourself with the main components and design of your LG French Door Refrigerator.



Front view of the LG LF26C8210S 4-Door French Door Refrigerator, showcasing its stainless steel finish and sleek design.



Angled view of the LG LF26C8210S refrigerator, highlighting its depth and side profile.

Key Components:

- **French Doors:** Upper refrigerator compartment access.
- **Full-Convert Drawer:** Middle drawer with adjustable temperature settings for various food types.
- **Freezer Drawer:** Lower pull-out drawer for frozen items.
- **Internal Water Dispenser:** Located inside the fresh food compartment.
- **Control Panel:** Digital display for temperature and feature settings.



Interior view of the LG LF26C8210S refrigerator with both French doors open, showing spacious shelving and crisper drawers.

SETUP

Installation:

1. **Choose Location:** Select a level, stable location away from direct sunlight and heat sources. Ensure adequate clearance for door opening and ventilation.
2. **Leveling:** Adjust the leveling legs to ensure the refrigerator is stable and the doors close properly.
3. **Door Alignment:** If necessary, adjust the height of the refrigerator doors to ensure they are perfectly aligned.

Water Connection:

Connect the refrigerator to a cold water supply for the internal water dispenser and ice maker.

1. **Turn Off Water Supply:** Locate the main water shut-off valve and turn it off.
2. **Connect Water Line:** Attach the water supply line to the refrigerator's water inlet valve. Use a copper or braided stainless steel line.
3. **Install Water Filter:** Insert the water filter into its housing. Refer to the diagram below.



Close-up view of the LG refrigerator's internal water filter, showing its position within the fresh food compartment.

Initial Power On:

1. **Plug In:** Plug the power cord into a grounded electrical outlet.
2. **Initial Cooling:** Allow the refrigerator to cool for at least 2-3 hours before storing food. The ice maker will begin producing ice within 24 hours.

OPERATING THE REFRIGERATOR

Control Panel:

The digital control panel allows you to adjust temperatures and activate various features.



Close-up view of the LG refrigerator's internal control panel, displaying temperature settings and feature options like 'Ice Plus' and 'Water Filter'.

- **Temperature Control:** Press the 'Refrigerator' or 'Freezer' button to cycle through desired temperature settings.
- **Ice Plus:** Activates rapid ice production for 24 hours.
- **Water Filter:** Indicates when the water filter needs replacement. Press and hold to reset after replacement.
- **Lock:** Locks the control panel to prevent accidental changes.

Temperature Settings:

- **Recommended Refrigerator Temperature:** 37°F (3°C)
- **Recommended Freezer Temperature:** 0°F (-18°C)

Internal Water Dispenser:

To dispense filtered water, open the left French door and press a glass against the dispenser lever.



Close-up view of the LG refrigerator's internal water dispenser, located on the left door, providing filtered water.

Storage Features:

- **Adjustable Shelves:** Customize shelf height to accommodate various items.
- **Crisper Drawers:** Maintain optimal humidity for fruits and vegetables.
- **Full-Convert Drawer:** This versatile middle drawer can be set to different temperatures for Chilled Wine, Deli/Snacks, Cold Drinks, Meat/Seafood, or Freezer.



View of the LG refrigerator's lower Full-Convert Drawer pulled open, showing its spacious interior and dividers.

MAINTENANCE

Cleaning:

- **Interior:** Clean with a mild soap and water solution. Rinse and dry thoroughly. Remove shelves and drawers for easier cleaning.
- **Exterior:** Wipe stainless steel surfaces with a soft cloth and a stainless steel cleaner. Avoid abrasive cleaners.
- **Condenser Coils:** Clean coils behind the refrigerator annually to maintain efficiency. Unplug the refrigerator before cleaning.

Water Filter Replacement:

Replace the water filter approximately every 6 months, or when the 'Water Filter' indicator light illuminates.

1. **Purchase New Filter:** Use only genuine LG replacement filters.
2. **Remove Old Filter:** Twist the old filter counter-clockwise to remove it.

3. **Install New Filter:** Insert the new filter and twist clockwise until it locks into place.
4. **Flush System:** Dispense about 2.5 gallons of water to flush out air and carbon fines.
5. **Reset Filter Indicator:** Press and hold the 'Water Filter' button on the control panel for 3 seconds.

Light Bulb Replacement:

If an interior LED light fails, contact LG customer service for assistance. LED lights are not user-replaceable.

TROUBLESHOOTING

Refer to this table for common issues and their solutions before contacting service.

Problem	Possible Cause	Solution
Refrigerator not cooling	Power cord unplugged; Temperature set too high; Doors not closing properly; Obstructed vents.	Check power connection; Adjust temperature settings; Ensure doors are fully closed; Clear any obstructions from vents.
Noisy operation	Normal operating sounds (fan, compressor); Refrigerator not level; Items rattling inside.	Identify normal sounds; Level the refrigerator; Rearrange items to prevent rattling.
Water leaking	Clogged drain tube; Loose water line connection; Cracked water filter housing.	Clear drain tube; Tighten water line connections; Inspect water filter housing for damage.
Ice maker not producing ice	Water supply turned off; Ice maker switch off; Low water pressure; Freezer temperature too high.	Check water supply; Ensure ice maker switch is ON; Verify water pressure; Lower freezer temperature.

SPECIFICATIONS

Key technical specifications for the LG LF26C8210S refrigerator.

Feature	Specification
Brand	LG
Model Number	LF26C8210S
Capacity	26 Cubic Feet
Installation Type	Freestanding
Number of Doors	4
Defrost System	Automatic
Special Feature	Energy Efficient
Cooling Method	Compressor
Adjustable Temperature Control	Yes

WARRANTY AND SUPPORT

Your LG refrigerator comes with a manufacturer's warranty. For specific warranty details, please refer to the warranty card included with your appliance or visit the official LG website.

For technical support, service requests, or to purchase genuine LG parts and accessories, please contact LG Customer Service or visit their official support page. Have your model number (LF26C8210S) and serial number ready when contacting support.

You can find more information and support resources on the [LG Store on Amazon](#).