

EUHOMY DM001-26BL

EUHOMY DM001-26BL Slushie Machine User Manual

Professional Frozen Drink Maker

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the EUHOMY DM001-26BL Slushie Machine. Keep this manual for future reference.

Initial Setup Precautions:

- Before plugging in the unit for the first time, ensure it stands upright for at least 2 hours. This allows the refrigerant to settle properly.

Ingredient Guidelines:

To ensure proper freezing and optimal results, adhere to the following ingredient guidelines:

- **Sugar Content:** The percentage of sugar content in your mixture must be greater than 6%. Too little sugar will prevent proper freezing.
- **Alcohol Content:** For alcoholic beverages, the alcohol content must be between 2% and 16%. High-alcohol drinks (above 16%) will not slush properly.
- **Dairy Products:** If using dairy products for milkshakes or frappes, ensure there is sufficient fat content. Dairy products with too little fat may result in frothy or foamy textures and won't freeze properly.
- **Mixing:** Always stir your mixture thoroughly before pouring it into the feeding barrel.
- **Do Not Add:** Never add ice, solid ingredients, or hot ingredients directly into the feeding barrel.



Thickness Adjustable



Image: Guidelines for optimal sugar and alcohol content to achieve the best frozen drink consistency.

Tips of Sugar & Alcohol Content

>6%
Sugar content

2%-16%
Alcohol content

Serving Size	Minimum Total Sugar Amount
8 oz (240ml)	14g
12 oz (355ml)	21g
20 oz (591ml)	35g

SUGAR PERCENTAGE



NOTE

- Using unsuitable ingredients may cause damage
- Sugar-free substitutes or artificial sweeteners will not aid in meeting total minimum or maximum sugar requirements.

Image: Detailed chart illustrating minimum sugar percentage requirements for various drink types.

2. PRODUCT OVERVIEW

The EUHOMY DM001-26BL Slushie Machine is designed for convenient preparation of various frozen beverages. Familiarize yourself with its components for proper use and maintenance.

Upgrade Pour Spout Plan B (Only20)

Removable, easy to clean

Pour Spout Plan A



Pour Spout Plan B

UPGRANED



EUHOMY

Image: The EUHOMY DM001-26BL Slushie Machine, showcasing its compact design and transparent feeding barrel.

Key Components:

- **Feeding Barrel Top Lid:** Covers the feeding barrel.
- **Discharge Handle:** Used to dispense the frozen drink.
- **Feeding Barrel:** Transparent container where ingredients are frozen and mixed.
- **Evaporator:** The internal cooling component.

- **Main Housing:** The primary body of the machine.
- **Water Tank:** Collects condensation.
- **Control Panel:** Features an LED display with preset programs and thickness adjustment.
- **Drip Tray Cover & Drip Tray:** Collects any drips during dispensing.
- **Mixing Fan Blade:** Rotates to mix and freeze the ingredients.
- **Feeding Barrel Switch:** Secures the feeding barrel in place.

Self-serve Handle with Pour Spout

Convenient, ergonomically designed comfort handle with a no-drip, no-mess pour spout.



Image: Close-up of the self-serve handle and pour spout, designed for convenient and mess-free dispensing.

Capacity:

The feeding barrel has a maximum capacity of 64 oz (88 oz total volume). A minimum of 16 oz of liquid is required for operation.

Rapidchill Technology

EÜHOMY



**Efficient
Compressor**



Fast Cooling

15 ~ 60 min



**360°
Uniform cooling**



**12-hour
Smart cooling**



Image: Visual representation of the machine's large capacity, indicating minimum and maximum fill lines.

3. SETUP AND INITIAL CLEANING

Before first use, it is essential to clean all removable parts of the slushie machine.

Disassembly for Cleaning:

1. Pull the discharge handle forward to release and remove the feeding barrel from the main housing.
2. Remove the mixing fan blade from inside the feeding barrel.
3. Detach the drip tray cover and drip tray from the base of the machine.

Cleaning Instructions:

- All removable parts (feeding barrel, mixing fan blade, drip tray, drip tray cover) are dishwasher safe or can be washed by hand with warm, soapy water.
- The evaporator, which is not removable, should be wiped clean with a damp cloth.
- Ensure all parts are completely dry before reassembly.



Image: An exploded view of the slushie machine, showing its components separated for thorough cleaning.

Reassembly:

1. Place the mixing fan blade back into the evaporator.
2. Align the feeding barrel with the main housing and push the discharge handle back to secure it.
3. Reattach the drip tray and its cover to the base.

4. OPERATION

The EUHOMY Slushie Machine features a user-friendly LED display and five preset programs for various frozen drinks.



Image: A visual guide illustrating the simple three-step process: Add liquid, select program, and enjoy.

Making a Frozen Drink:

1. **Prepare Ingredients:** Ensure your liquid mixture meets the sugar and alcohol content guidelines (refer to Section 1).
2. **Add Liquid:** Open the feeding barrel top lid and pour 16-64 oz of your prepared liquid into the feeding barrel. Do not exceed the 'MAX' line or go below the 'MIN' line.
3. **Power On:** Plug in the machine and press the 'On/Off' button on the control panel.
4. **Select Program:** Choose one of the 5 preset programs: **Slushie, Frappe, Milkshake, Cocktail, or Wine**. The LED display will show real-time temperature readings.
5. **Adjust Thickness (Optional):** Use the 'Thickness -' or 'Thickness +' buttons to achieve your desired consistency.
6. **Start Freezing:** Press the 'Start/Stop' button to begin the freezing process. The powerful compressor will make your drink in approximately 15-60 minutes, depending on the program and desired thickness.
7. **Dispense:** Once ready, pull the discharge handle forward to dispense your frozen drink. Keep the unit spinning while dispensing for best results.



Image: The user-friendly LED control panel displaying the five preset drink programs and thickness adjustment options.

Smart Cooling Feature:

The machine can keep beverages frozen for up to 12 hours, allowing for extended enjoyment and easy access.

Only **3-step** to Get Drinks



Add drinks



Select Program



Enjoy ice drink



Image: The slushie machine operating, highlighting its ability to keep drinks frozen for up to 12 hours.

5. **CLEANING AND MAINTENANCE**

Regular cleaning ensures the longevity and hygiene of your EUHOMY Slushie Machine.

Self-Cleaning Mode:

- The machine features a convenient self-cleaning mode for easy daily maintenance.
- To activate, ensure the feeding barrel is empty or contains only water, then select the 'Clean' program on the control panel.



Image: The automatic self-cleaning function in action, showing water circulating within the feeding barrel.

Deep Cleaning:

- For thorough cleaning, disassemble the feeding barrel, mixing fan blade, drip tray, and drip tray cover as described in Section 3.
- Wash these parts in the dishwasher or by hand with warm, soapy water.
- Wipe the non-removable evaporator and main housing with a damp cloth.
- Ensure all components are dry before reassembling the machine.



Image: A person loading parts of the slushie machine into a dishwasher, demonstrating the dishwasher-safe feature.

6. TROUBLESHOOTING

If you encounter issues with your slushie machine, refer to the following common problems and solutions:

Common Issues and Solutions:

- **Drink Not Slushing Properly:**

- *Cause:* Too much sugar or alcohol content, or too little fat in dairy products.
- *Solution:* Adjust your recipe to meet the recommended sugar (greater than 6%) and alcohol (2-16%) percentages. For dairy-based drinks, ensure adequate fat content. Refer to Section 1 for detailed ingredient guidelines.

- **Results are Too Frothy/Foamy (Milkshakes & Frappes):**

- *Cause:* Dairy products with too little fat.
- *Solution:* Add 1 tablespoon of heavy cream per 8 oz of prepared drink for best results.

- **Slush is Too Frozen:**

- *Cause:* Preset temperature is too low.
- *Solution:* Add ½ cup of liquid while the machine is processing and lower the temperature level by 2 settings.

- **Diet/Low-Sugar Drinks Won't Turn into Slush:**

- *Cause:* Too little sugar to allow proper freezing.
- *Solution:* Diet drinks won't slush if they are the only ingredient. For best results, add 2½ teaspoons of liquid allulose + 1½ teaspoons of lemon juice per 8 oz of diet cola.

7. SPECIFICATIONS

Feature	Specification
Brand	EUHOMY
Model Name	DM001-26BL
Product Dimensions (D x W x H)	16.9D x 7W x 17.7H Centimetres
Capacity	2.6 Liters (approx. 88 oz total, 64 oz max fill)
Wattage	220 watts
Voltage	110 Volts
Refrigerant	R290a
Material	Acrylonitrile Butadiene Styrene, Stainless Steel
Item Weight	23.15 Pounds
Included Components	Slushie machine

8. WARRANTY AND CUSTOMER SUPPORT

Warranty Information:

The EUHOMY DM001-26BL Slushie Machine comes with a 1-year manufacturer's warranty.

Technical Service and Support:

Should you have any questions about using your slushie machine, technical service support is available. Our customer support team is ready to assist you.

- **Phone:** 1-833-632-0897
- **Email:** support@homyd.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question