

[Manuals.plus](#) /

› [Hikiddo](#) /

› Hikiddo 24V 9Ah Ride-On Tractor User Manual

Hikiddo 24V 9Ah Ride-On Tractor

Hikiddo 24V 9Ah Ride-On Tractor User Manual

Model: 24V 9Ah Ride-On Tractor (ASIN: B0DWK9JCF4)

INTRODUCTION

Thank you for choosing the Hikiddo 24V 9Ah Ride-On Tractor. This manual provides essential information for the safe assembly, operation, and maintenance of your new electric vehicle. Please read this manual thoroughly before use and retain it for future reference.



Image: Front view of the Hikiddo 24V 9Ah Ride-On Tractor in dark green, showcasing its robust design and large wheels.

IMPORTANT SAFETY INFORMATION

To ensure safe operation, please adhere to the following guidelines:

- **Adult Supervision Required:** This product is intended for children aged 3-8 years and must always be operated under direct adult supervision.
- **Weight Limit:** Do not exceed the maximum load capacity of 88 lbs (40 kg).
- **Safety Belt:** Always ensure the child is securely fastened with the provided safety belt before operation.
- **Operating Environment:** Use the tractor on flat, dry surfaces away from traffic, swimming pools, or steep inclines. Avoid operating in wet conditions.
- **Protective Gear:** Encourage children to wear appropriate safety gear, such as helmets, during operation.
- **Charging:** Only use the charger provided with the product. Do not overcharge the battery.
- **Modifications:** Do not modify the electrical system or any components of the tractor. Unauthorized modifications can lead to hazards and void the warranty.

This product is certified by ASTM F963 and CPSIA standards for toy safety.

PACKAGE CONTENTS

Please verify that all components are present before beginning assembly:

- Ride-On Tractor Body
- Detachable Trailer
- Steering Wheel
- Wheels (4 for tractor, 2 for trailer)
- 2.4G Remote Control
- Charger
- Assembly Hardware (screws, washers, etc.)
- User Manual

SETUP AND ASSEMBLY

Follow these steps to assemble your Hikiddo Ride-On Tractor. It is recommended that two adults perform the assembly.

1. **Wheel Installation:** Attach the wheels to the tractor axles. Ensure all washers and locking pins are securely in place. Repeat for the trailer wheels.
2. **Steering Wheel Attachment:** Connect the steering column to the tractor body and secure the steering wheel. Ensure all wiring connections are firm.
3. **Battery Connection:** Locate the battery compartment (usually under the seat). Connect the battery terminals according to the polarity markings (+ to +, - to -).
4. **Trailer Attachment:** The trailer can be easily attached and detached. Align the trailer hitch with the connection point at the rear of the tractor and secure it.

2 In 1 Ride On Tractor

Detachable Trailer



Image: Illustration showing how the detachable trailer connects to the main tractor unit, highlighting the hitch mechanism.

5. **Initial Charge:** Before first use, charge the battery for a minimum of 8-12 hours. Do not exceed 18 hours.

OPERATING INSTRUCTIONS

Charging the Battery

- Ensure the tractor is turned off.
- Locate the charging port (refer to the diagram in the manual).
- Plug the charger into the charging port, then into a standard wall outlet.
- The charging indicator light on the charger will typically show red during charging and turn green when fully charged.
- Average charging time is 8-12 hours. Do not charge for more than 18 hours.

Manual Operation (Child Control)

- Turn on the tractor using the main power switch.
- The child can press the foot pedal to accelerate. Releasing the pedal will engage the brake.
- The steering wheel controls the direction of travel.

- Use the gear shift lever to select forward or reverse.

Parental Remote Control Operation



Image: An adult operating the Hikiddo Ride-On Tractor using the remote control while a child is seated in the tractor.

- The 2.4G remote control allows parents to override child control for safety.
- **Pairing the Remote:** Refer to the remote control's specific instructions for pairing with the tractor.
- **Controls:** The remote typically includes buttons for forward/reverse, left/right steering, speed selection, and an emergency stop button.
- Always maintain a clear line of sight to the child and the tractor when using the remote control.

Multimedia Functions



Image: Close-up of the tractor's control panel, showing buttons for MP3, music, USB input, volume adjustment, and speed adjustment.

- The control panel features MP3 and USB input for playing music.
- Adjust the volume using the dedicated controls.
- Select between high and low speed settings as appropriate for the child's skill level and environment.

MAINTENANCE

Battery Care

- Charge the battery after each use.
- If storing the tractor for an extended period, charge the battery once a month to prolong its lifespan.
- Do not allow the battery to fully discharge.
- Store the battery in a cool, dry place.

Cleaning and Storage

- Clean the tractor with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Avoid spraying water directly onto electrical components.
- Store the tractor indoors in a dry area when not in use to protect it from weather elements.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tractor does not move	Battery low or disconnected; Power switch off; Loose wiring; Overload protection activated.	Charge battery; Check battery connections; Turn on power switch; Inspect all wiring; Reduce load.
Tractor runs slowly	Low battery charge; Overloaded; Operating on rough terrain.	Recharge battery; Reduce load; Operate on smoother surfaces.
Remote control not working	Remote not paired; Remote batteries low; Interference.	Re-pair remote control; Replace remote batteries; Move to an area with less interference.
No sound from multimedia	Volume too low; MP3/USB device not connected properly.	Increase volume; Ensure device is correctly inserted and playing.

SPECIFICATIONS

Perfect Gift for Your Kiddies



Image: Visual representation of key specifications including battery, motor power, load capacity, and seat size.

- **Battery:** 24V 9Ah
- **Motors:** Dual 200W
- **Speed:** 1.8 - 5.0 mph (adjustable)
- **Playtime:** Up to 1.5 hours (continuous)
- **Load Capacity:** 88 lbs (40 kg)
- **Recommended Age:** 3 - 8 years
- **Product Dimensions:** 71 x 28 x 28 inches (L x W x H)
- **Seat Size:** 14 inches wide
- **Safety Certifications:** ASTM F963, CPSIA



Image: Diagram illustrating the overall dimensions of the Hikiddo Ride-On Tractor, including length, width, and height.

WARRANTY AND CUSTOMER SUPPORT

Hikiddo stands by the quality of its products. If you encounter any issues or have questions regarding your 24V Ride-On Tractor, please contact our customer support team.

- **Contact:** Refer to the contact information provided on the product packaging or the official Hikiddo website.
- Our customer support team aims to respond within 24 hours.

© 2023 Hikiddo. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question