



[Manuals.plus](#) /

> [TIMEX](#) /

> TIMEX Analog Watch TWEG19609 User Manual

TIMEX TWEG19609

TIMEX Analog Watch Model TWEG19609 User Manual

This manual provides instructions for the setup, operation, and maintenance of your TIMEX Analog Watch, Model TWEG19609.

PRODUCT OVERVIEW

The TIMEX Analog Watch Model TWEG19609 is a classic timepiece designed for men, featuring a round dial, stainless steel case, and water resistance up to 30 meters. It operates on a precise Quartz movement, offering reliable timekeeping for daily wear.



Figure 1: Front view of the TIMEX Analog Watch TWEG19609, showcasing the white dial and stainless steel band.

SETUP

1. Initial Time Setting

1. **Pull the Crown:** Gently pull the crown (the small knob on the side of the watch case) out to its outermost position.
2. **Set the Time:** Rotate the crown clockwise or counter-clockwise to move the hour and minute hands to the correct time.
3. **Push the Crown In:** Once the time is set, push the crown back into its original position against the watch case. The watch will begin to run.



Figure 2: Side view illustrating the crown for time adjustment.

2. Adjusting the Band

The watch features a stainless steel band. For optimal comfort and fit, the band may require adjustment. This typically involves removing or adding links. It is recommended to have this adjustment performed by a qualified jeweler or watch technician to prevent damage to the band or clasp mechanism.

OPERATING INSTRUCTIONS

Timekeeping

Your TIMEX Analog Watch TWEG19609 is designed for accurate time display. The hour, minute, and second hands continuously track time. The sub-dials on the watch face indicate additional functions such as a 24-hour display and a day/night indicator.

Water Resistance

This watch is water resistant up to 30 meters (3 ATM). This rating means the watch is suitable for everyday use and can withstand splashes or brief immersion in water. It is **not** suitable for swimming, showering, or diving. Avoid operating the crown or pushers when the watch is wet to prevent water intrusion.

MAINTENANCE

1. Cleaning

- To clean your watch, use a soft, dry cloth.
- For the stainless steel band, a slightly damp cloth can be used, followed by a dry cloth.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish or internal components.

2. Battery Replacement

The watch is powered by a Quartz movement requiring 1 AA battery (included). When the watch stops running or begins to lose time consistently, the battery may need replacement. It is highly recommended to have the battery replaced by a professional watch technician to ensure proper sealing and maintain water resistance.

3. Storage

When not wearing your watch, store it in a cool, dry place away from direct sunlight, extreme temperatures, and strong magnetic fields. Keeping it in its original packaging or a watch box can help protect it from dust and scratches.

TROUBLESHOOTING

- **Watch Not Running:**
Ensure the crown is fully pushed in. If the watch still does not run, the battery may need replacement.
- **Inaccurate Time:**
If the watch is consistently fast or slow, try resetting the time as described in the Setup section. If the issue persists, the battery may be low, or the movement may require inspection by a professional.
- **Water Exposure:**
If water appears inside the watch crystal, immediately take the watch to a qualified service center for inspection to prevent further damage to the movement.

SPECIFICATIONS

Brand	TIMEX
Model Number	TWEG19609
Display Type	Analog
Movement Type	Quartz
Case Material	Stainless Steel
Case Diameter	45 Millimetres
Band Material	Stainless Steel
Band Width	24 Millimetres

Water Resistance Depth	30 Metres (3 ATM)
Power Source	Battery Powered (1 AA battery)
Item Weight	170.4 Grams
Product Dimensions	7 x 10 x 10 cm
Crystal Material	Mineral



Figure 3: Rear view of the watch, displaying model information and water resistance rating.

WARRANTY AND SUPPORT

Warranty Information

This TIMEX watch comes with a **1-year warranty** against manufacturer defects. This warranty covers defects in materials

and workmanship under normal use. It does not cover damage resulting from improper handling, accidents, unauthorized repairs, or normal wear and tear.

Customer Support

For warranty claims, service, or any questions regarding your TIMEX watch, please contact TIMEX customer service. Refer to the official TIMEX website or your purchase documentation for specific contact details and service center locations.