

[Manuals.plus](#) /

› [SOBERNA](#) /

› [SOBERNA M10 Portable Bluetooth Speaker User Manual](#)

SOBERNA M10

SOBERNA M10 Portable Bluetooth Speaker User Manual

INTRODUCTION

Thank you for choosing the SOBERNA M10 Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it carefully before use to ensure optimal performance and longevity of your device.

PACKAGE CONTENTS

- SOBERNA M10 Portable Bluetooth Speaker
- USB-C Charging Cable
- User Manual

PRODUCT OVERVIEW

Control Panel

A Better Experience



Bluetooth 5.4



IPX7 Waterproof



Built-in Microphone

Image: The top surface of the SOBERNA M10 speaker showing its intuitive control panel with clearly labeled buttons.

Familiarize yourself with the speaker's control buttons:

- **Power Button (G):** Press and hold to power on/off. Short press to play/pause.
- **Volume Down / Previous Track (<):** Short press for previous track. Press and hold to decrease volume.
- **Volume Up / Next Track (>):** Short press for next track. Press and hold to increase volume.
- **EQ Button (EQ):** Short press to cycle through different equalizer modes.
- **LED Light Mode Button (@):** Short press to change LED light modes. Press and hold to turn LED lights on/off.
- **Bluetooth Button (B):** Press and hold to disconnect current Bluetooth device and enter pairing mode.

Ports

24_H 24 HOURS LONG OPERATING TIME

Note: This value requires the volume to be at 30% and the lighting effects to be turned off



Image: The side panel of the SOBERNA M10 speaker, highlighting the USB-C charging port and AUX-in port.

- **USB-C Charging Port:** For charging the speaker's internal battery.
- **AUX-in Port:** For wired audio connection using a 3.5mm audio cable (not included).

SETUP

Initial Charging

Before first use, fully charge your SOBERNA M10 speaker. Connect the provided USB-C charging cable to the speaker's charging port and the other end to a USB power adapter (5V/2A recommended, not included). The LED indicator will show charging status and turn off when fully charged.

Powering On/Off

- **To Power On:** Press and hold the Power button (G) for 2-3 seconds until you hear an audible prompt and the LED lights activate.
- **To Power Off:** Press and hold the Power button (G) for 2-3 seconds until you hear an audible prompt and the LED lights turn off.

Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode (the LED indicator will flash). If it was previously connected, it will try to reconnect automatically. To force pairing mode, press and hold the Bluetooth button (**B**).
2. Enable Bluetooth on your device (smartphone, tablet, laptop).
3. Search for "SOBERNA M10" in your device's Bluetooth list.
4. Select "SOBERNA M10" to connect. Once connected, you will hear a confirmation sound, and the LED indicator will stop flashing.

Wireless Stereo Pairing (TWS)

You can pair two SOBERNA M10 speakers together for a true wireless stereo experience.

1. Ensure both SOBERNA M10 speakers are powered on and not connected to any Bluetooth device.
2. On one of the speakers (this will be the primary speaker), press and hold the Bluetooth button (**B**) for 3 seconds. You will hear a prompt indicating TWS pairing mode.
3. The two speakers will automatically connect to each other. Once connected, you will hear a confirmation sound.
4. Now, connect your device to the primary speaker via Bluetooth as described in the "Bluetooth Pairing" section. The audio will play through both speakers in stereo.

3 Dynamic RGB Lights

5 Change Modes * 30 Light Changes



Image: Two SOBERNA M10 speakers showcasing their dynamic RGB lights, demonstrating the wireless stereo pairing feature.

Controlling LED Lights

The SOBERNA M10 features dynamic RGB lights.

- **Change Mode:** Short press the LED Light Mode button (@) to cycle through different light effects.
- **Turn On/Off:** Press and hold the LED Light Mode button (@) for 2 seconds to turn the LED lights on or off.

EQ Modes

Short press the EQ button (EQ) to switch between available equalizer modes (e.g., Bass Boost, Vocal, Standard) to optimize your listening experience.

Answering Calls

With its built-in microphone, the SOBERNA M10 can be used for hands-free calls when connected to your smartphone.

- **Answer/End Call:** Short press the Power button (G) to answer an incoming call or end an ongoing

call.

- **Reject Call:** Press and hold the Power button (G) for 2 seconds to reject an incoming call.

Charging the Speaker

When the battery is low, the speaker will give an audible warning. Connect the USB-C charging cable to the speaker's charging port and a suitable USB power source. The LED indicator will show charging status. A full charge provides up to 24 hours of playtime (at 30% volume with LED lights off).



Image: People at an outdoor gathering holding SOBERNA M10 speakers, emphasizing the speaker's long 24-hour battery life.

MAINTENANCE

Cleaning

Wipe the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure all ports are dry before charging.

Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use

for extended periods.

Water Resistance (IPX7)

The SOBERNA M10 speaker is IPX7 waterproof, meaning it can be submerged in up to 1 meter of water for 30 minutes. Ensure the charging port cover is securely closed before exposing the speaker to water. This rating protects against accidental submersion, but it is not designed for continuous underwater use.



Image: The SOBERNA M10 speaker shown partially submerged in water, illustrating its IPX7 waterproof capability.

TROUBLESHOOTING

Problem	Solution
Speaker does not power on.	Ensure the speaker is fully charged. Press and hold the Power button (G) for 2-3 seconds.

Problem	Solution
Cannot pair via Bluetooth.	Ensure the speaker is in pairing mode (flashing LED). Turn off and on Bluetooth on your device. Forget "SOBERNA M10" from your device's Bluetooth list and try pairing again. Ensure no other devices are connected to the speaker.
No sound or low volume.	Increase volume on both the speaker and your connected device. Ensure the speaker is not muted. Check if the speaker is properly connected via Bluetooth or AUX.
TWS pairing fails.	Ensure both speakers are powered on and not connected to any other Bluetooth device. Try resetting both speakers and repeat the TWS pairing steps.
LED lights are not working.	Short press the LED Light Mode button (@) to cycle modes. Press and hold the LED Light Mode button (@) to turn them on.

SPECIFICATIONS

30W Dual Dynamic Audio



Image: An exploded view of the SOBERNA M10 speaker, illustrating its internal components and 30W dual dynamic audio drivers.

Feature	Detail
Model Number	M10
Brand	SOBERNA
Connectivity Technology	Bluetooth 5.4
Speaker Maximum Output Power	30W (180 Watts Peak)
Audio Output Mode	Stereo
Frequency Response	30 Hz - 20 kHz (typical)
Waterproof Rating	IPX7
Battery Average Life	Up to 24 hours (at 30% volume, LED off)

Feature	Detail
Control Method	Touch Buttons
Item Dimensions (D x W x H)	3"D x 3"W x 5"H (approximate)
Material	Plastic
Special Features	LED Lights, Wireless Stereo Pairing (TWS), Built-in Microphone, EQ Modes

WARRANTY AND SUPPORT

Warranty Information

The SOBERNA M10 Portable Bluetooth Speaker comes with a 2-Year Manufacturer's Limited Warranty. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, warranty claims, or any questions regarding your SOBERNA M10 speaker, please contact our customer support team. Refer to the contact information provided on the product packaging or our official website.