

TCL 65QM6K, Q75H

TCL QM6K Series 65-Inch QLED 4K Google TV and Q75H 5.1.2 Channel Soundbar User Manual

Model: 65QM6K (TV), Q75H (Soundbar)

INTRODUCTION

Thank you for choosing the TCL QM6K Series 65-Inch QLED 4K Google TV and the TCL Q75H 5.1.2 Channel Soundbar. This manual provides essential information for the safe and efficient setup, operation, and maintenance of your new home entertainment system. Please read these instructions thoroughly before use and retain them for future reference.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electronic devices to reduce the risk of fire, electric shock, and injury. Keep this manual accessible for reference.

- Do not expose the TV or Soundbar to rain or moisture.
- Do not block ventilation openings. Ensure adequate space around the devices for proper airflow.
- Use only attachments/accessories specified by the manufacturer.
- Unplug the devices during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

PACKAGE CONTENTS

Verify that all components are present in your package:

- TCL QM6K Series 65-Inch QLED 4K Google TV
- TCL Q75H 5.1.2 Channel Soundbar
- Wireless Subwoofer for Q75H Soundbar
- Remote Control (for TV)
- Power Cords (for TV and Soundbar/Subwoofer)
- TV Stand Components (if applicable)

- HDMI Cable
- User Manuals and Quick Start Guides



This image displays the TCL QM6K Series 65-inch QLED 4K Smart TV and the accompanying Q75H 5.1.2 Channel Soundbar with its wireless subwoofer. The TV screen shows a vibrant image of an American football player, highlighting the display's color capabilities. The soundbar is positioned horizontally in front, with the subwoofer standing vertically to its right.

SETUP

1. TV Installation

Choose a stable, flat surface for the TV or a suitable wall mount. Ensure proper ventilation around the TV.

1. **Stand Installation:** Attach the TV stands to the bottom of the TV using the provided screws, following the instructions in the separate quick start guide.
2. **Wall Mounting:** If wall-mounting, refer to the wall mount kit's instructions. Ensure the wall can support the TV's weight.

2. Soundbar Placement

Place the soundbar centrally below your TV. Position the wireless subwoofer in a location that provides optimal bass response, typically in the front of the room.

3. Connecting Your Devices

Connect your TV and Soundbar to power and other external devices.

1. **Power Connection:** Connect the power cords to the TV, soundbar, and subwoofer, then plug them into a wall outlet.
2. **Soundbar to TV:** Connect the soundbar to the TV using the provided HDMI cable. Use the HDMI eARC/ARC port on your TV for optimal audio quality and control.
3. **External Devices:** Connect other devices (e.g., gaming consoles, Blu-ray players) to the TV's available HDMI ports.

4. Initial Power On and Google TV Setup

After connecting all cables, power on the TV and follow the on-screen instructions for initial setup.

1. Press the power button on the remote control.
2. Follow the on-screen prompts to select your language, connect to a Wi-Fi network, and sign in with your Google account to activate Google TV features.
3. The soundbar and subwoofer should automatically pair. If not, refer to the soundbar's specific pairing instructions.

OPERATING INSTRUCTIONS

1. TV Remote Control

The remote control allows you to navigate the TV's interface and control various functions. Familiarize yourself with its buttons:

- **Power Button:** Turns the TV on or off.
- **Input Button:** Selects input sources (HDMI 1, HDMI 2, etc.).
- **Volume Up/Down:** Adjusts the volume level.
- **Channel Up/Down:** Changes TV channels.
- **Navigation Pad (Up/Down/Left/Right/OK):** Navigates menus and confirms selections.
- **Back Button:** Returns to the previous screen.
- **Home Button:** Accesses the Google TV home screen.
- **Google Assistant Button:** Activates voice commands.

2. Google TV Interface Navigation

The Google TV interface provides access to streaming apps, live TV, and personalized content recommendations.

- From the Home screen, use the navigation pad to browse content, apps, and settings.
- Select an app or content item by pressing the **OK** button.
- Use the **Google Assistant** button for voice search and control.

3. Soundbar Operation

The Q75H Soundbar enhances your audio experience. When connected via HDMI eARC/ARC, its volume is typically controlled by the TV remote.

- **Automatic Pairing:** The soundbar and subwoofer are designed to pair automatically upon power-up.
- **Sound Modes:** The soundbar may offer various sound modes (e.g., Movie, Music, Voice). Refer to the soundbar's specific manual for details on how to switch modes.
- **Dolby Atmos/DTS:X:** Ensure your content source supports Dolby Atmos or DTS:X for immersive spatial audio.

MAINTENANCE

1. Cleaning

Regular cleaning helps maintain the appearance and performance of your TV and Soundbar.

- **Screen:** Gently wipe the screen with a soft, dry, lint-free cloth. For stubborn marks, use a screen cleaner specifically designed for TVs, applied to the cloth, not directly to the screen.
- **Cabinet:** Wipe the TV and soundbar cabinets with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- **Dust:** Use a soft brush or vacuum cleaner with a brush attachment to remove dust from ventilation openings.

2. Software Updates

Your Google TV may receive automatic software updates to improve performance and add new features. Ensure your TV is connected to the internet for these updates.

- You can check for updates manually in the TV's settings menu: *Settings > System > About > System update*.

TROUBLESHOOTING

If you encounter issues, refer to the following common troubleshooting steps:

Problem	Possible Solution
No Power	Ensure power cords are securely plugged into the TV/Soundbar/Subwoofer and a working electrical outlet. Try a different outlet.
No Picture	Check input source selection. Ensure all video cables (HDMI) are securely connected. Try restarting the TV.
No Sound from Soundbar	Verify HDMI eARC/ARC connection. Check TV audio output settings (should be set to external speakers or HDMI ARC). Ensure soundbar volume is not muted or too low. Confirm subwoofer is paired.
Remote Control Not Working	Replace batteries. Ensure no obstructions between the remote and the TV's IR sensor. Re-pair the remote if it's a Bluetooth remote.
Wi-Fi Connection Issues	Restart your router and modem. Check Wi-Fi password. Ensure the TV is within range of your Wi-Fi network.

SPECIFICATIONS

TCL QM6K Series 65-Inch QLED 4K Google TV

- **Display Technology:** QD-Mini LED
- **Resolution:** 4K Ultra HD
- **Refresh Rate:** 144Hz Native Panel Refresh Rate
- **Dimming:** Up to LD500 Precise Dimming Series (up to 500 local dimming zones)
- **Picture Processing:** TCL Halo Control System
- **Operating System:** Google TV

TCL Q75H 5.1.2 Channel Soundbar

- **Channels:** 5.1.2 Channel Configuration
- **Audio Technologies:** Dolby Atmos, DTS:X
- **Total Power Output:** Up to 620 Watts
- **Connectivity:** HDMI eARC/ARC, Wireless Subwoofer

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official TCL support website. For technical assistance, product registration, or to download the full product manual, please visit www.tcl.com/us/en/support or contact TCL customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question