

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ZdalaMit](#) /

› [ZdalaMit Universal Replacement Remote Control User Manual](#)

ZdalaMit Universal Replacement Remote Control

ZdalaMit Universal Replacement Remote Control User Manual

Model: Universal Replacement Remote Control

1. INTRODUCTION

This manual provides instructions for the ZdalaMit Universal Replacement Remote Control. This remote is designed to be compatible with a wide range of Android TV Boxes, offering a convenient replacement for your original remote.

Compatible Android TV Box Models:

- Android TV Box 9.0, 10.0, 11.0, 12.0, 13.0
- X88 PRO 10, X88 PRO 13, X88 PRO 20
- A95X F3
- S905X3
- RK3318
- RK3528

Please ensure your Android TV Box model is listed above for compatibility.

2. PACKAGE CONTENTS

Upon opening the package, please verify that all items are present and in good condition.

- 1 x ZdalaMit Replacement Remote Control

Note: AAA batteries are not included and must be purchased separately.

3. SETUP: BATTERY INSTALLATION

The remote control requires two (2) AAA alkaline batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Front view of the ZdalaMit Replacement Remote Control. This image shows the layout of the buttons, including power, navigation, volume, and dedicated app buttons like YouTube and Netflix.

Important: Always use new batteries and dispose of old batteries responsibly. Do not mix old and new batteries, or different types of batteries.

4. OPERATING INSTRUCTIONS

This remote control is pre-programmed for the compatible Android TV Box models listed in the Introduction. No additional programming is typically required. Simply point the remote control directly at your Android TV Box to operate it.



Image: Angled view of the ZdalaMit Replacement Remote Control, highlighting its ergonomic design and button placement for easy access to functions.

Key Functions:

- **Power Button (⏻):** Turns the Android TV Box on or off.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and select items.
- **Volume Up/Down (+/-):** Adjusts the volume.
- **Mute (🔇):** Mutes or unmutes the audio.
- **Home (🏠):** Returns to the main home screen of the Android TV Box.
- **Back (↶):** Goes back to the previous screen or menu.
- **Menu (☰):** Accesses context-sensitive menus.
- **Dedicated App Buttons (e.g., YouTube, Netflix):** Provides quick access to specific applications.
- **Number Pad (0-9):** For direct channel input or other numerical entries.

For specific functions related to your Android TV Box's operating system or applications, refer to your TV Box's user manual.

5. TROUBLESHOOTING

If you experience issues with your remote control, please try the following steps:

- **Remote not responding:**

- Ensure the batteries are installed correctly with the correct polarity.
- Replace the batteries with new AAA alkaline batteries.
- Make sure there are no obstructions between the remote control and the Android TV Box.
- Ensure you are within the effective operating range (typically up to 20 feet or 6 meters) and pointing the remote directly at the TV Box's IR receiver.

- **Intermittent response:**

- Check battery levels; low batteries can cause inconsistent performance.
- Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the IR signal.

If problems persist after trying these steps, please contact the seller for further assistance.

6. SPECIFICATIONS





Image: ZdalaMit Replacement Remote Control shown with its approximate dimensions: 6.1 inches in length and 1.77 inches in width.

Feature	Detail
Product Dimensions	6.15 x 1.8 x 0.6 inches (15.6 x 4.6 x 1.5 cm)
Item Weight	2 ounces (56.7 grams)
Power Source	2 x AAA Alkaline Batteries (not included)
Color	Black
Special Feature	Pre-Programmed
Compatible Devices	Android TV Boxes (specific models listed in Introduction)

7. MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote control. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these may damage the remote.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** If the remote will not be used for an extended period, remove the

batteries to prevent leakage and potential damage.

- **Avoid Drops:** Protect the remote from physical impact by avoiding drops or rough handling.

8. WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available details. For any warranty claims, technical support, or further inquiries, please contact the seller directly through your purchase platform.

Please retain your proof of purchase for any support requests.