



[Manuals.plus](#) /

> [UNIQUTE](#) /

> UNIQUTE 9-Drawer Dresser with LED Light and Power Outlet Instruction Manual

UNIQUTE I870100422A1

UNIQUTE 9-Drawer Dresser with LED Light and Power Outlet Instruction Manual

MODEL: I870100422A1

Brand: UNIQUTE

1. Introduction

The UNIQUTE 9-Drawer Dresser is designed to provide abundant storage capacity and modern aesthetics for your bedroom, living room, entryway, or hallway. It features nine spacious drawers, an open-top shelf, integrated LED lighting, and a built-in power outlet for convenient device charging. This manual will guide you through the assembly process, explain how to operate its features, and provide essential maintenance and troubleshooting tips.



Image: The UNIQUTE 9-Drawer Dresser, showcasing its sleek white finish, gold handles, and illuminated top shelf.

2. Safety Information

Please read and understand all instructions before beginning assembly and use. Keep these instructions for future reference.

- **Anti-Tipping Device:** This dresser is equipped with an anti-tipping device for enhanced safety. It is crucial to install this device securely to a wall to prevent accidental tipping, especially in households with children or pets.
- **Weight Limits:** Do not overload drawers or the top surface. Refer to the specifications section for maximum weight capacities.
- **Assembly:** Assembly should ideally be performed by two adults. Ensure all hardware is securely tightened before use.
- **Electrical Safety:** When using the built-in power outlet, ensure that connected devices do not exceed the specified electrical ratings (2 AC outlets, 2 USB ports). Avoid exposing the power outlet or LED components to moisture.
- **Placement:** Place the dresser on a flat, stable surface. Avoid placing it in direct sunlight or near heat sources to

prevent material degradation.



Image: Close-up view highlighting the stable base, durable metal handles, smooth metal sliding rails, and the essential anti-tipping device for secure installation.

3. Package Contents

Before beginning assembly, verify that all parts and hardware are present and undamaged. If any components are missing or damaged, please contact customer service for assistance.

The package includes:

- Various wooden panels for the dresser frame and drawers.
- Drawer slides (N, M, L, K) and associated screws (J).
- Cam locks (A), wooden dowels (B), cam bolts (D), and connecting screws (E).
- Gold-colored metal handles (F).
- LED light strip with controller (P).
- Built-in power outlet with 2 AC outlets and 2 USB ports (Q).

- Anti-tipping device (K).
- Small plastic caps (H) and nails (I).
- Assembly tools (e.g., screwdriver, hammer).

4. Setup and Assembly

Follow the steps below carefully. It is recommended to assemble the dresser on a soft, clean surface to prevent scratches. An assembly video is provided to assist you.

Your browser does not support the video tag.

Video: Official UNIQUTE 9-Drawer Dresser Assembly Guide. This video provides a visual step-by-step walkthrough of the entire assembly process, from unboxing to final setup.

1. **Prepare Drawer Slides:** Attach the drawer slides (N, L) to the designated side panels (1, 3, 4, 5) using screws (J). Ensure they are aligned correctly for smooth drawer operation.
2. **Assemble Side Panels:** Insert cam bolts (D) into the pre-drilled holes on the side panels (1, 3, 4, 5).
3. **Connect Base and Middle Supports:** Attach the base panels (6, 7) and middle support panels (8, 9) to the side panels using connecting screws (E) and cam locks (A). Ensure all connections are secure.
4. **Attach Back Panel:** Slide the back panel (11) into the grooves of the assembled frame. Secure it with small nails (I) and plastic caps (H) along the edges.
5. **Assemble Top Frame:** Connect the top frame panels (17, 18, 19) using cam bolts (D) and connecting screws (E).
6. **Install Top Shelf:** Secure the assembled top frame onto the main dresser body using connecting screws (E).
7. **Install LED Light Strip:** Carefully place the LED light strip (P) into the designated channel on the underside of the top shelf. Secure it with small screws (I) as indicated.
8. **Install Power Outlet:** Insert the power outlet unit (Q) into the cutout on the top surface of the dresser. Secure it with screws (J). Route the power cord neatly.
9. **Assemble Drawers:** For each drawer, attach the side panels (12, 13) to the front (14) and back (15) panels using cam locks (A) and cam bolts (D). Slide the bottom panel (16) into the grooves. Attach the remaining drawer slides (M, K) to the drawer sides.
10. **Attach Handles:** Secure the gold-colored metal handles (F) to the front of each drawer using screws (J).
11. **Insert Drawers:** Carefully slide each assembled drawer into its respective slot on the dresser frame.
12. **Install Anti-Tipping Device:** Attach the anti-tipping device (K) to the back of the dresser and securely fasten it to a wall stud using appropriate wall anchors and screws (provided). This step is critical for safety.

5. Operating Instructions

5.1. LED Lighting System

The integrated LED lighting system offers customizable ambiance for your space.

- **Control:** The LED lights can be controlled via a physical button on the power cord or through a dedicated smartphone application.
- **Functions:** Adjust RGB colors, select various light modes (e.g., static, dynamic), activate music sync mode, or set a timing mode for automatic on/off.
- **Brightness:** Brightness levels can be adjusted to suit your preference.



Adjustable RGB Light Strips



Key Control



RGB Colors



Light Mode



Mic Mode



Music Mode



Timing Mode



App Control

Sync your lights with your favourite music

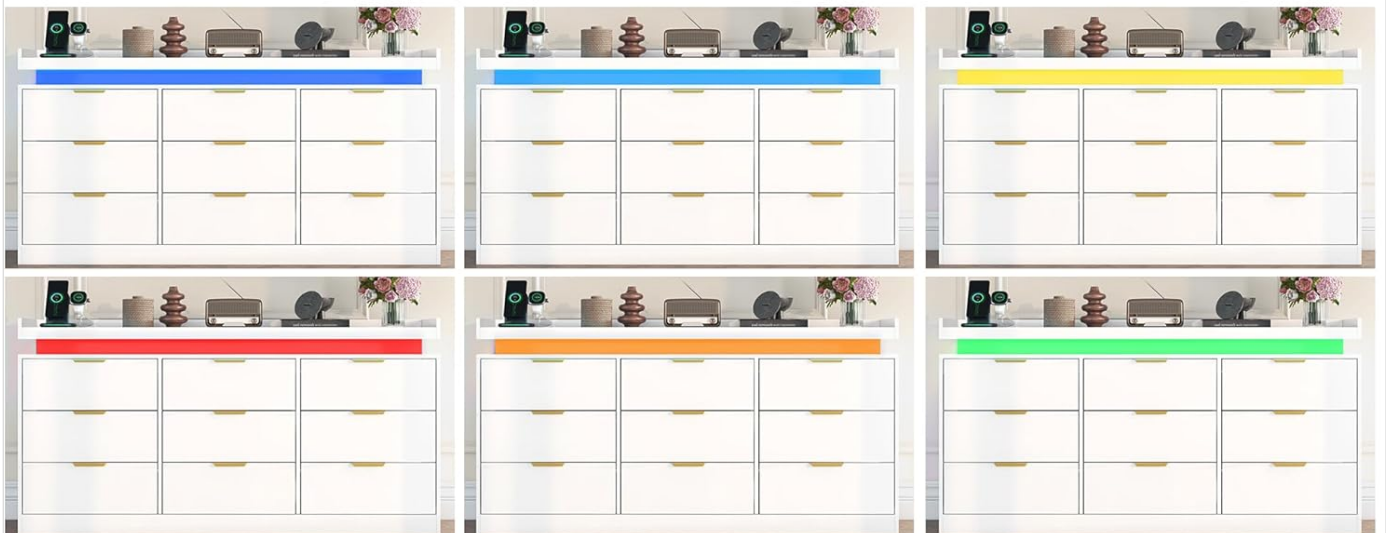


Image: Illustration of the adjustable RGB light strips, showing control options via a key controller and a smartphone app for color, mode, music sync, and timing settings.

5.2. Built-in Power Outlet

The dresser includes a convenient power outlet for charging your electronic devices.

- **AC Outlets:** Features 2 standard AC outlets (125V/12A) for laptops, lamps, or other small appliances.
- **USB Ports:** Includes 2 USB ports (5V/2A) for charging mobile phones, tablets, and other USB-powered devices.
- **Power Cord:** The unit comes with a 3-foot power cord for connection to a wall outlet.

Built-In Charging Station



3 
AC Outlets
125V/12A

2 
2 USB Ports
5V/2A


Power Cord
3 Feet

Image: A close-up of the built-in charging station, showing its 3 AC outlets and 2 USB ports, designed for convenient device charging on the dresser's top surface.

6. Maintenance

Proper care will help maintain the appearance and longevity of your dresser.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the finish.
- **Spills:** Immediately wipe up any spills to prevent staining or damage to the wood.
- **Drawer Care:** Periodically check drawer slides for smooth operation. If drawers become stiff, a small amount of silicone lubricant can be applied to the slides.
- **Hardware:** Regularly check and tighten all screws and fasteners to ensure stability.
- **LED & Electrical:** Keep the LED strip and power outlet free from dust and debris. Do not attempt to repair electrical components yourself.

7. Troubleshooting

If you encounter any issues with your dresser, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Dresser is wobbly.	Loose fasteners; uneven floor.	Tighten all assembly screws. Ensure the dresser is on a level surface; use shims if necessary.
Drawers do not slide smoothly.	Misaligned drawer slides; debris in slides; overloaded drawer.	Check alignment of drawer slides and re-adjust if needed. Clean slides of any debris. Reduce weight in the drawer.
LED light is not working.	Power connection issue; faulty LED strip/controller.	Ensure the power cord is securely plugged into the wall and the LED strip is properly connected. Check the controller for damage. If issues persist, contact customer service.
Power outlet is not providing power.	Not plugged in; circuit breaker tripped; faulty outlet.	Verify the dresser's power cord is fully plugged into a working wall outlet. Check your home's circuit breaker. Avoid overloading the outlet.

If troubleshooting steps do not resolve the issue, please contact UNIQUTE customer service for further assistance.

8. Specifications

- **Brand:** UNIQUTE
- **Model Name:** I870100422A1
- **Product Dimensions:** 15.75"D x 62.99"W x 32.28"H
- **Color:** White
- **Mounting Type:** Floor Mount
- **Room Type:** Bedroom, Living Room, Entryway, Hallway
- **Special Feature:** Space Saving, LED Light, Power Outlet
- **Assembly Required:** Yes
- **Item Weight:** 116 pounds
- **Power Outlet:** 2 AC Outlets (125V/12A), 2 USB Ports (5V/2A)



Image: Detailed product dimensions, showing depth, width, and height of the dresser, along with individual drawer dimensions and weight capacity.

9. Warranty and Support

UNIQUTE stands behind the quality of its products. For specific warranty details, please refer to the warranty information included with your purchase or visit the official UNIQUTE website.

If you have any questions, concerns, or require assistance with assembly, operation, or troubleshooting, please do not hesitate to contact our professional customer service team. We are committed to providing a satisfactory solution within 24 hours.

Contact Information: Please refer to the contact details provided on your purchase receipt or the UNIQUTE official website.

