

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Donner](#) /

> [Donner Adjustable Piano Bench EC7163 Instruction Manual](#)

Donner EC7163

Donner Adjustable Piano Bench EC7163 Instruction Manual

Model: EC7163

INTRODUCTION

Thank you for choosing the Donner Adjustable Piano Bench, Model EC7163. This manual provides essential information for the proper assembly, operation, maintenance, and care of your piano bench. Please read these instructions thoroughly before use to ensure safe and optimal performance.

SAFETY INFORMATION

- Always assemble the bench according to the provided instructions.
- Do not exceed the maximum weight limit of 400 pounds (181 kg).
- To maintain the finish, avoid exposure to direct sunlight.
- Always keep the bench on a stable, level surface to prevent tipping.
- Be aware of the blue lubricant on the lifting mechanism during initial adjustments. It may transfer to surfaces if not wiped clean.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Piano Bench Seat with integrated lifting mechanism
- 4 x Bench Legs
- Mounting Hardware (bolts, washers, nuts)
- Wrench for assembly

ASSEMBLY INSTRUCTIONS

Assembly of the Donner Adjustable Piano Bench is straightforward and requires minimal tools. Follow these steps:

1. Turn the piano bench seat upside down, ensuring the bottom is facing upwards.
2. Align each leg with the corner brackets on the underside of the bench.

3. Insert the bolts through the leg and bracket, then thread the washers onto the bolts.
4. Thread the nuts onto the bolts.
5. Using the provided wrench, tighten all nuts securely. Ensure all legs are firmly attached and stable.

Easy to Assemble

It can be easily assembled in just a few simple steps.

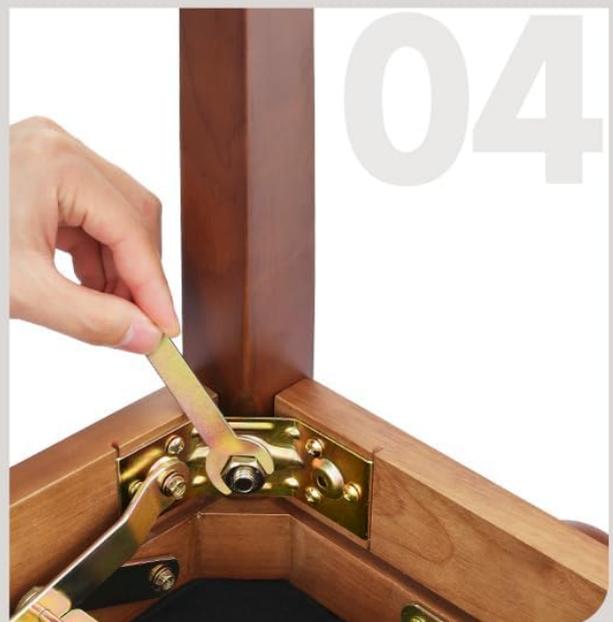
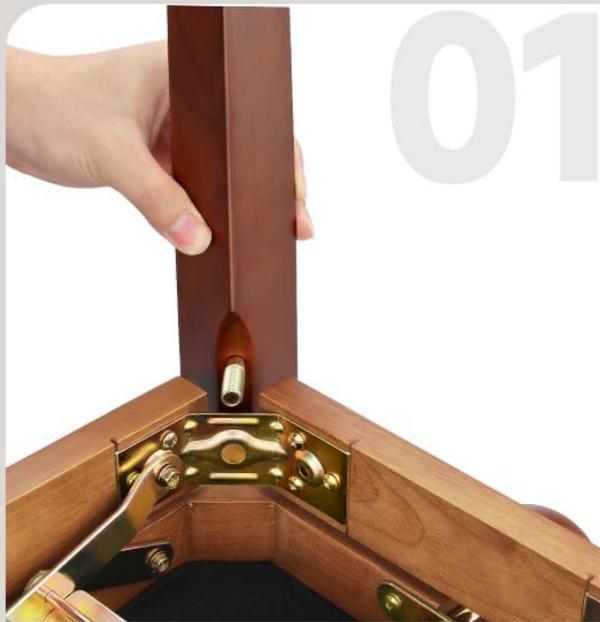


Figure 1: Visual guide for attaching the bench legs.

COMFORTABLE SEATING

With thick, durable foam padding, this piano bench provides excellent comfort.



Figure 2: Step-by-step illustration of the leg assembly process.

OPERATING INSTRUCTIONS

Adjusting Bench Height

The Donner Adjustable Piano Bench features a metal lifting mechanism that allows for height adjustment. The seat height can be adjusted within a range of 18.9 inches (48 cm) to 22.8 inches (58 cm).

1. Locate the adjustment knobs on both sides of the bench seat.
2. Turn the knobs to raise or lower the seat to your desired height. Ensure both knobs are turned evenly to maintain a level seat.
3. Once the desired height is achieved, ensure the knobs are tightened sufficiently to secure the seat in place.

Stable and Comfortable

Metal Support



Solid Wood



Sponge Cushion



Non-slip Mat



Figure 3: Height adjustment mechanism and range.

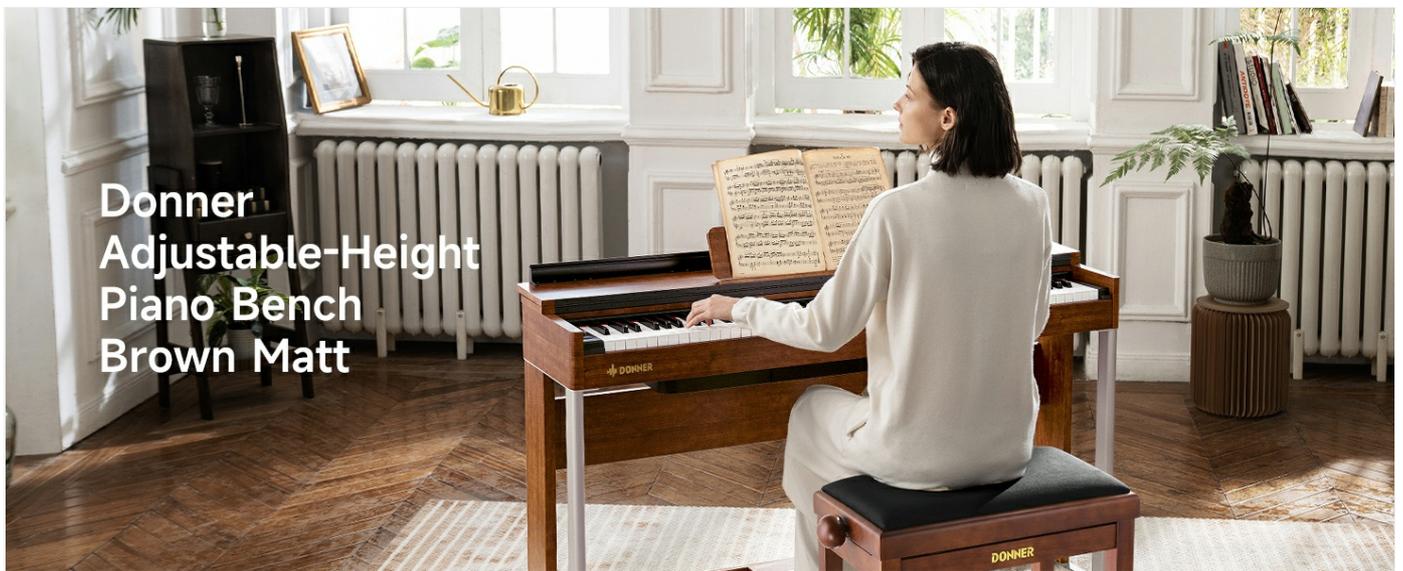


Figure 4: Detailed view of the height adjustment knob.

MAINTENANCE

Cleaning

- For the wooden frame, use a soft, dry cloth to wipe away dust and dirt. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- For the high-density sponge cushion, use a slightly damp cloth with mild soap if necessary, then wipe dry immediately. Do not saturate the cushion.
- Regularly check the metal lifting mechanism for any dust or debris that might impede smooth operation.

General Care

- Periodically inspect all bolts and connections to ensure they remain tight. Retighten if necessary.
- Keep the bench away from extreme temperature changes and high humidity to prevent warping or damage to the wood.
- The non-slip rubber pads on the legs help protect your floor and provide stability. Ensure they are clean and intact.

Wooden Piano Bench

The hard solid wood material ensures continuous use without distortion.



Figure 5: Components contributing to stability and comfort, including non-slip feet.

ADJUSTABLE HEIGHT

Adjust the seat height by turning the knobs on the side of the piano bench, with an adjustment range of 3.9 inches/10 cm.

3.9inch/10cm



Figure 6: Non-slip design of the bench feet.

TROUBLESHOOTING

Bench Feels Unstable

- Ensure all leg bolts are securely tightened.
- Verify that the bench is placed on a flat, level surface. Uneven floors can cause instability.
- Check the non-slip pads on the bottom of the legs for wear or damage. Replace if necessary.

Difficulty Adjusting Height

- Ensure both adjustment knobs are loosened sufficiently before attempting to change the height.
- Check for any obstructions in the lifting mechanism.
- Apply a small amount of silicone-based lubricant to the metal parts of the lifting mechanism if it feels stiff. Wipe away any excess lubricant, especially the blue lubricant that may be present from manufacturing, to prevent staining.

SPECIFICATIONS

Feature	Detail
Model Number	EC7163
Product Dimensions	13.4"D x 25.2"W x 18.9"-22.8"H (Adjustable)
Color	Brown
Material	Solid Wood, High-Density Sponge Cushion
Maximum Weight Capacity	400 lbs (181 kg)
Item Weight	19.8 pounds (9 kg)
Seating Capacity	1

Adjustable Height

The seat height can be adjusted by turning the side knobs.



Figure 7: Bench highlighting its 400lb weight capacity and solid wood construction.

NON-SLIP DESIGN

The non-slip foot pads increase friction with the floor, providing a more secure grip, a more stable seat, and protecting the floor.



HARD SOLID WOOD

The hard solid wood material makes continuous use without deformation.



Figure 8: Illustration of the bench's strong bearing capacity.

WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your Donner Adjustable Piano Bench, please visit the official Donner website or contact their customer service department. Keep your purchase receipt for warranty claims.

[Visit the Donner Store on Amazon](#)

