

[Manuals.plus](#) /

› [SANODESK](#) /

› SANODESK 180x80cm Electric Height Adjustable Gaming Desk User Manual

SANODESK B0DWN2M53C (180x80cm)

SANODESK 180x80cm Electric Height Adjustable Gaming Desk

Model: B0DWN2M53C

Brand: SANODESK

IMPORTANT SAFETY WARNINGS


Caution: This desk is height adjustable and has a maximum load capacity of **60 kg**. Please use the height adjustment function with care and do not exceed the specified load capacity to ensure safe operation.

Always ensure there are no obstructions in the desk's path during height adjustment. Keep hands and fingers clear of moving parts.

1. SETUP AND ASSEMBLY

Before beginning assembly, ensure all components are present and undamaged. Refer to the included assembly guide for detailed step-by-step instructions. Assemble the desk on a soft, clean surface to prevent scratches.

The desk features a robust metal frame with wide T-shaped feet for enhanced stability. Ensure all screws are tightened securely for a stable workstation.

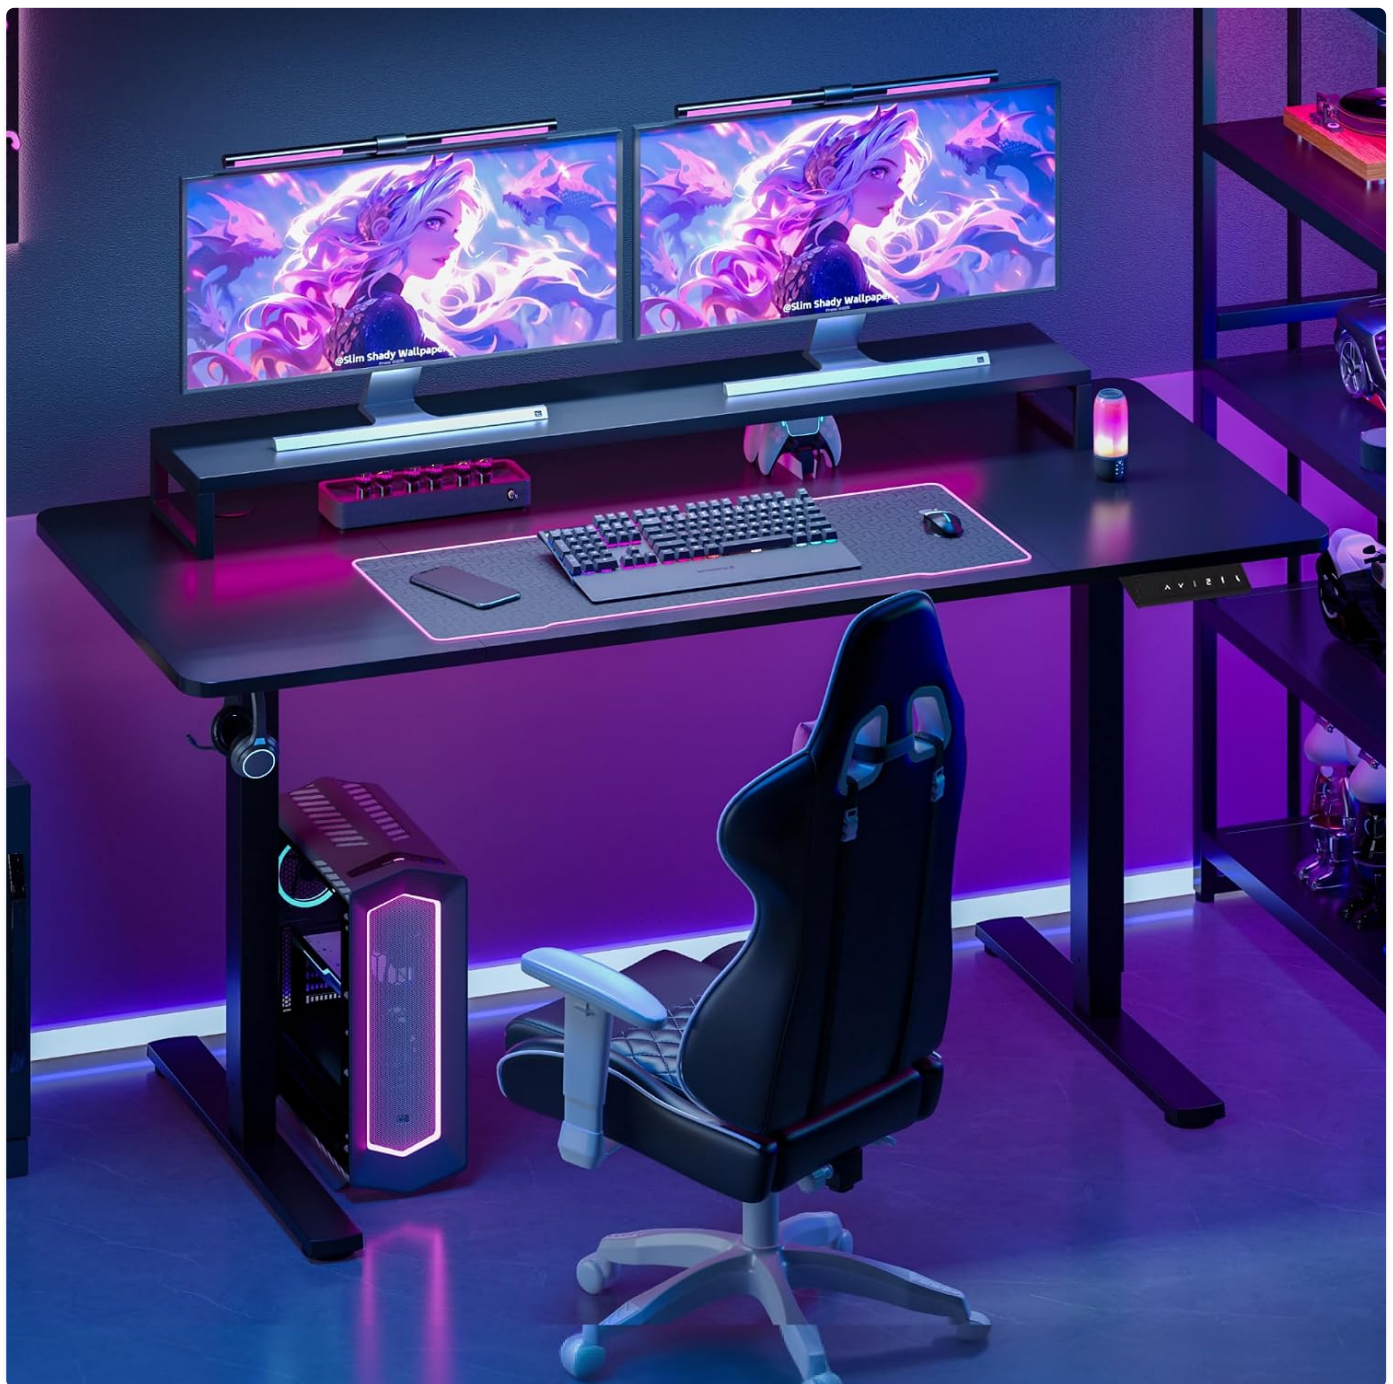

This image displays the SANODESK gaming desk fully assembled in a gaming environment, featuring dual monitors, a keyboard, mouse, and a gaming chair. It highlights the desk's spacious surface and ergonomic design.

2. OPERATING INSTRUCTIONS

2.1 Height Adjustment

The desk's height can be adjusted electrically between **72 cm and 116 cm**. Use the up (^) and down (v) buttons on the control panel to move the desk to your desired height. The lifting and lowering process is designed to be smooth and fast, with minimal oscillation.

Different Heights for Everyone

72-117cm



This image illustrates the height adjustment range of the SANODESK electric desk, showing one desk at its lowest setting (72cm) and another at its highest setting (117cm), demonstrating its versatility for various user preferences.

2.2 Memory Functions

The intelligent LED control panel includes **4 memory presets**. You can program and store up to four frequently used heights, such as sitting and standing positions. To save a height:

1. Adjust the desk to your desired height using the up/down buttons.
2. Press the 'M' button (if available, or a similar 'Set' button) followed by one of the numbered memory buttons (1, 2, 3, or 4). The height is now saved.
3. To recall a saved height, simply press the corresponding numbered memory button. The desk will automatically move to that position.



A close-up of the intelligent LED control panel, showing buttons for upward and downward height adjustment, along with four programmable memory preset buttons for storing preferred desk heights.

2.3 Smooth and Quiet Operation

The high-quality motor ensures very smooth lifting with a low noise level, not exceeding **55 decibels**. This allows for a comfortable and undisturbed working environment.

Smooth and Quiet Operation

Low noise level during operation, perfect for your time and concentration

 <50db



A detailed view of the desk leg, emphasizing the smooth and quiet operation of the electric lifting mechanism, with a noise level indicated as less than 50 decibels.

3. MAINTENANCE

To ensure the longevity and optimal performance of your SANODESK electric height adjustable desk, follow these maintenance guidelines:

- **Cleaning:** Wipe the desk surface and frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Regular Checks:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Cable Management:** Ensure power cables and other connected wires are not pinched or tangled, especially during height adjustments.
- **Load Capacity:** Do not exceed the maximum load capacity of 60 kg to prevent strain on the motor and frame.

4. TROUBLESHOOTING


If you encounter any issues with your SANODESK electric height adjustable desk, please refer to the following common troubleshooting steps:

- **Desk Not Moving:**
 - Check if the power cable is securely plugged into both the desk and the wall outlet.
 - Ensure there are no obstructions preventing the desk from moving up or down.
 - If the control panel display is off, check the power connection.
- **Uneven Movement:**
 - Perform a reset (refer to the specific reset procedure in your detailed assembly manual, if provided). Typically, this involves holding the 'down' button until the desk reaches its lowest point and slightly rises again.
 - Ensure the desk is not overloaded and weight is evenly distributed.
- **Memory Function Not Working:**
 - Re-program the memory presets following the instructions in section 2.2.
- **Unusual Noises:**
 - Check for any loose components or foreign objects under the desk.
 - If the noise persists and is significant, contact customer support.

If these steps do not resolve the issue, please contact SANODESK customer support for further assistance.

5. SPECIFICATIONS

Feature	Detail
Brand	SANODESK
Model	B0DWN2M53C
Color	Black
Product Dimensions (L x W x H)	180 x 80 x 116 cm
Height Adjustment Range	72 cm to 116 cm
Load Capacity	60 kg
Noise Level	< 55 dB
Base Material	Metal
Top Material Type	Metal
Special Features	Height adjustable, Memory functions, Rounded corners

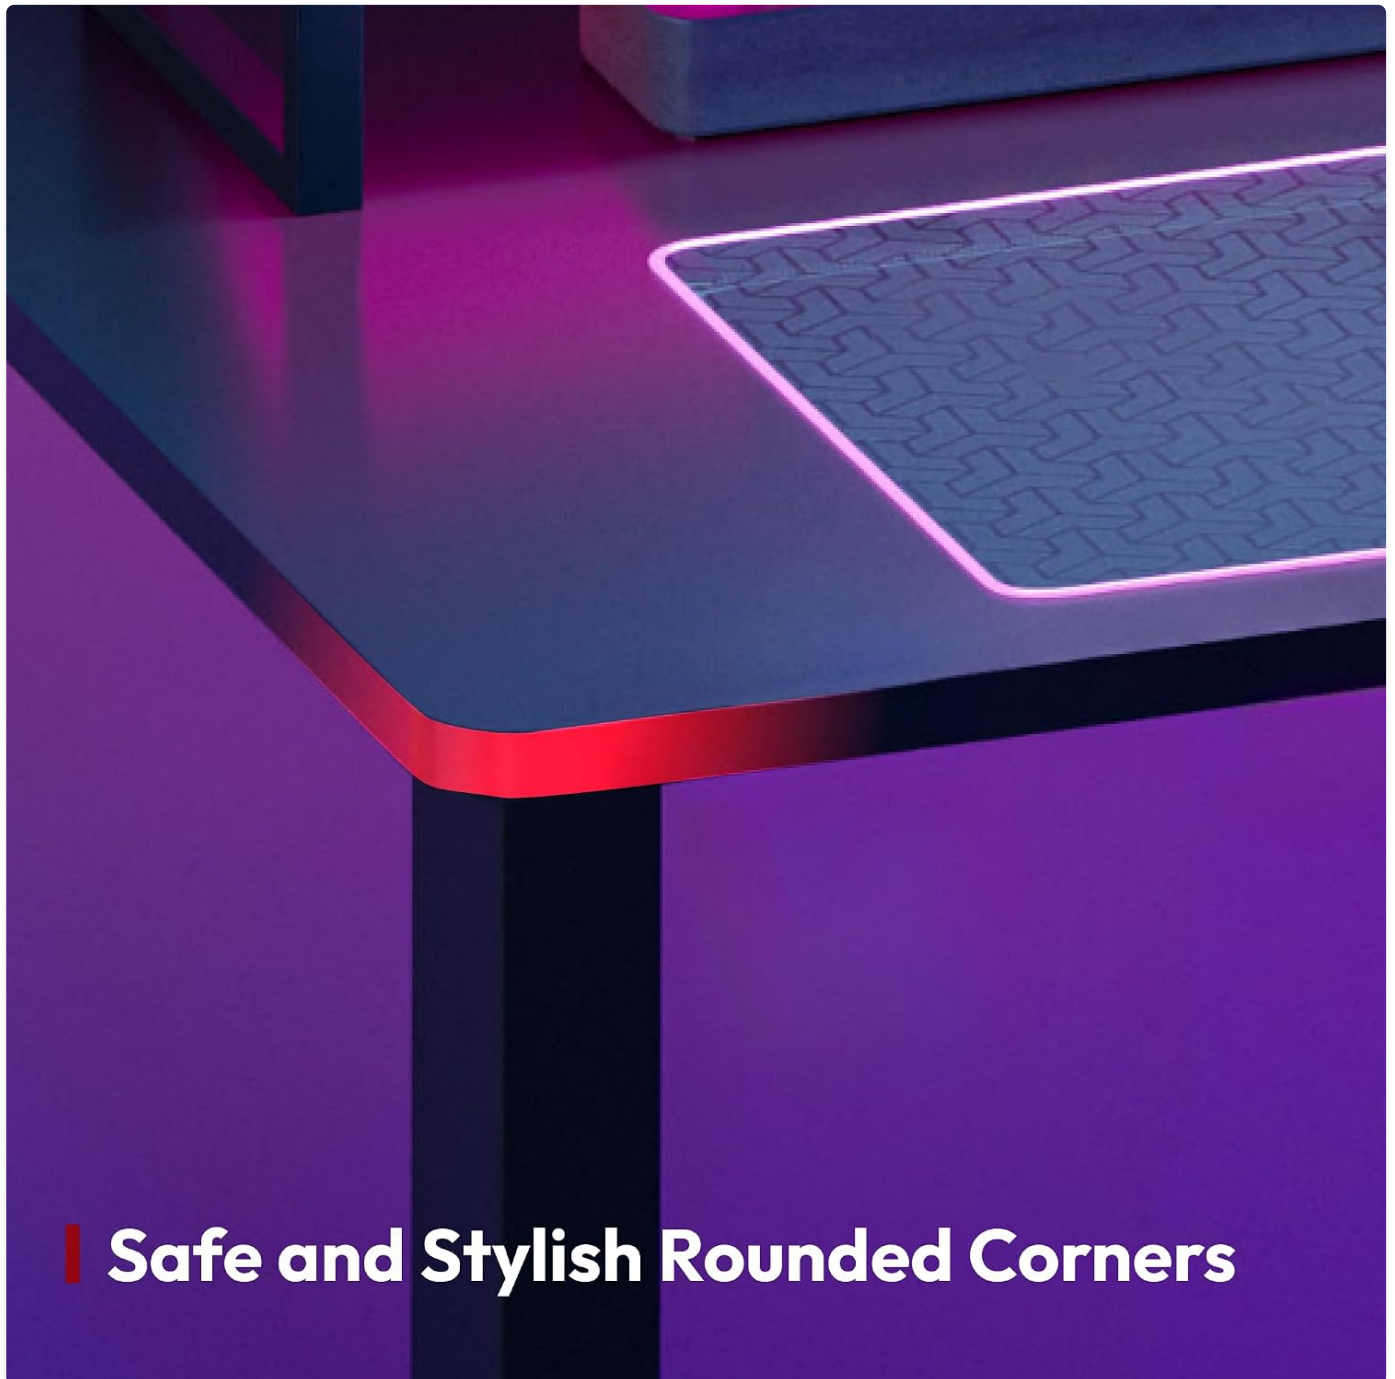

| Safe and Stylish Rounded Corners

This image focuses on the rounded corners of the desk, highlighting a design feature that enhances safety by reducing sharp edges and contributes to the desk's elegant appearance.

6. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official SANODESK website. You may also contact the seller directly through the platform where the purchase was made.

Please have your model number (B0DWN2M53C) and purchase date ready when contacting support.

© 2026 SANODESK. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question