

[Manuals.plus](#) /

› [SANODESK](#) /

› SANODESK Height Adjustable Desk 160x60 cm User Manual

SANODESK 160x60 cm

SANODESK Height Adjustable Desk 160x60 cm

Model: 160x60 cm

SAFETY INFORMATION

Warning: Ensure the desk is well stabilized before use. Do not adjust the desk height if objects or persons are on the desk surface. Keep hands and other body parts clear of moving parts during operation.

PRODUCT OVERVIEW

The SANODESK Electric Height Adjustable Desk offers a versatile and ergonomic workspace solution. Designed for comfort and productivity, this desk allows seamless transitions between sitting and standing positions, promoting a healthier work environment. It features a robust construction, quiet operation, and intelligent controls for personalized use.



Image: The SANODESK Height Adjustable Desk in a typical setup, featuring multiple monitors, a keyboard, mouse, and various accessories, highlighting its spacious and organized design with integrated hooks.

Key Features

- **Adjustable Height:** Electrically adjusts from 73 cm to 122 cm to suit various working preferences.
- **Intelligent Control Panel:** Features a user-friendly interface with memory functions for saving preferred height settings.
- **Stable Construction:** Built with a robust metal frame and wide T-shaped legs for exceptional stability.
- **Quiet Operation:** High-quality motor ensures smooth and quiet height adjustments, operating at less than 50dB.
- **Ergonomic Design:** Rounded corners enhance safety and provide a sleek aesthetic.
- **Versatile Application:** Suitable for gaming, office work, or as a versatile home desk.
- **Integrated Hooks:** Includes convenient hooks for organizing headphones or other accessories.

SPECIFICATIONS

Feature	Detail
Brand	SANODESK
Model	160x60 cm
Color	Black

Feature	Detail
Product Dimensions (L x W x Max H)	160 x 60 x 116 cm
Height Adjustment Range	73 cm to 122 cm
Material	Wood and Metal
Special Features	Height adjustable, intelligent manual switch with memory function
Noise Level	< 50 dB
Weight Capacity	Up to 60 kg
Style	Modern



Image: The SANODESK desk demonstrating its robust construction with an illuminated '60KG' sign, indicating its weight capacity.

SETUP INSTRUCTIONS

This section provides general guidance for assembling your SANODESK Height Adjustable Desk. For detailed, step-by-step instructions, please refer to the separate assembly guide included in your product packaging. Ensure you have all components and tools before beginning assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify all components against the parts list provided in your assembly guide.
2. **Assemble Frame:** Attach the desk legs to the crossbar and feet according to the diagrams in your assembly guide. Ensure all screws are securely tightened.
3. **Attach Desktop:** Carefully place the desktop onto the assembled frame and secure it using the provided fasteners.
4. **Install Control Panel:** Mount the control panel to the underside of the desk in the designated location. Connect the motor cables and power cable as instructed.
5. **Cable Management:** Organize and secure all cables using the provided cable ties or management solutions to prevent interference with the height adjustment mechanism.
6. **Initial Power-Up and Calibration:** Connect the power cable to a suitable electrical outlet. Perform an initial calibration if required by your specific model. Refer to your assembly guide for detailed calibration steps.



Image: A fully assembled SANODESK desk integrated into a gaming environment, showcasing its readiness for use with a computer, monitors, and accessories.

OPERATING INSTRUCTIONS

Control Panel Functions

| Memory Controller

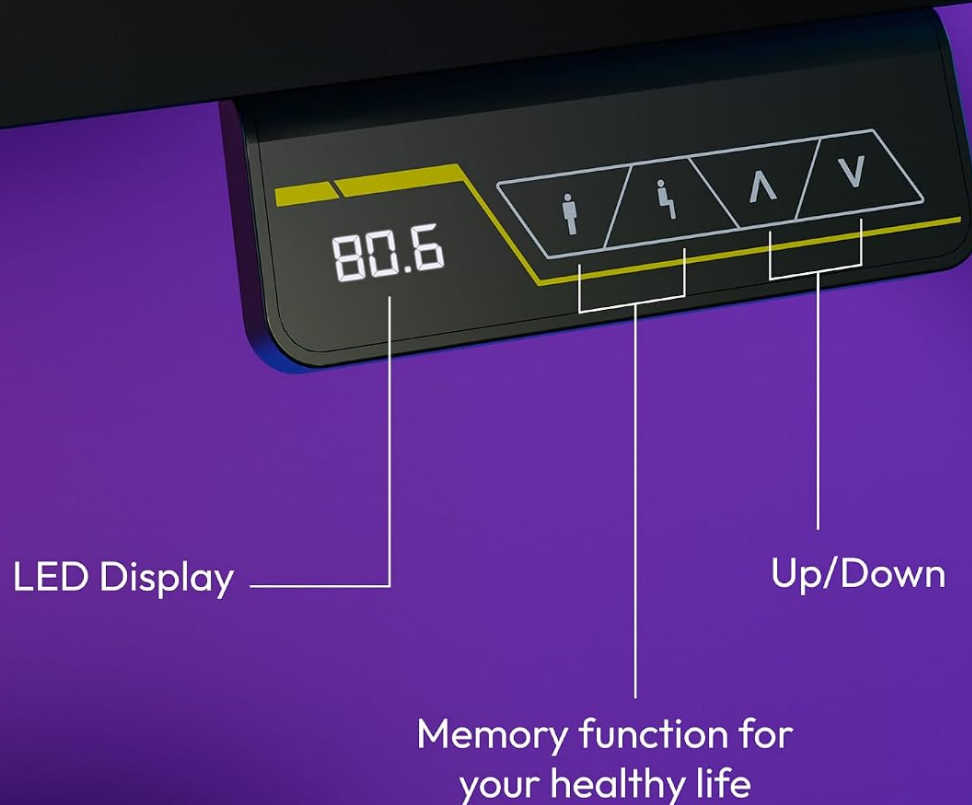


Image: A detailed view of the desk's control panel, featuring an LED display for current height and buttons for adjustment and memory functions.

- **LED Display:** Shows the current height of the desk in centimeters.
- **Up/Down Buttons (▲ / ▼):** Press and hold the Up button (▲) to raise the desk or the Down button (▼) to lower it. Release the button to stop at your desired height.
- **Memory Presets (e.g., '1', '2', or person icons):** Your control panel features buttons to save and recall preferred height settings.
 - **To Save a Preset:** Adjust the desk to your desired height. Press the 'M' or 'SET' button (if available), then press one of the memory preset buttons (e.g., '1', '2', or a person icon) until you hear a beep or see the display confirm the save.
 - **To Use a Preset:** Simply press the desired memory preset button. The desk will automatically move to the saved height.

Height Adjustment

The desk offers a wide range of height adjustments, allowing you to switch between sitting and standing positions effortlessly. The smooth and quiet motor ensures minimal disruption during adjustments, operating at less than 50dB.



Image: Two SANODESK units shown at their minimum (73cm) and maximum (122cm) adjustable heights, demonstrating the desk's flexibility for various user preferences.

Smooth and Quiet Operation

Low noise level during operation, perfect for your time and concentration

 <50db



Image: A close-up of the desk leg during operation, highlighting the smooth and quiet movement, indicated to be below 50 decibels.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your SANODESK. Follow these guidelines for care:

- **Cleaning:** Wipe the desk surface and frame with a soft, slightly damp cloth. Avoid using abrasive cleaners, harsh chemicals, or solvents that could damage the finish.
- **Cable Management:** Periodically check that all cables are securely routed and not pinched, tangled, or interfering with the desk's movement.
- **Fastener Check:** Every few months, inspect all screws and bolts on the frame and legs to ensure they remain tight. Retighten if necessary to maintain stability.
- **Weight Distribution:** Avoid placing excessive or uneven weight on the desktop. Distribute items evenly to prevent unnecessary strain on the lifting mechanism.
- **Obstruction Check:** Before adjusting the height, always ensure there are no obstructions above or below the desk.

that could impede its movement or cause damage.

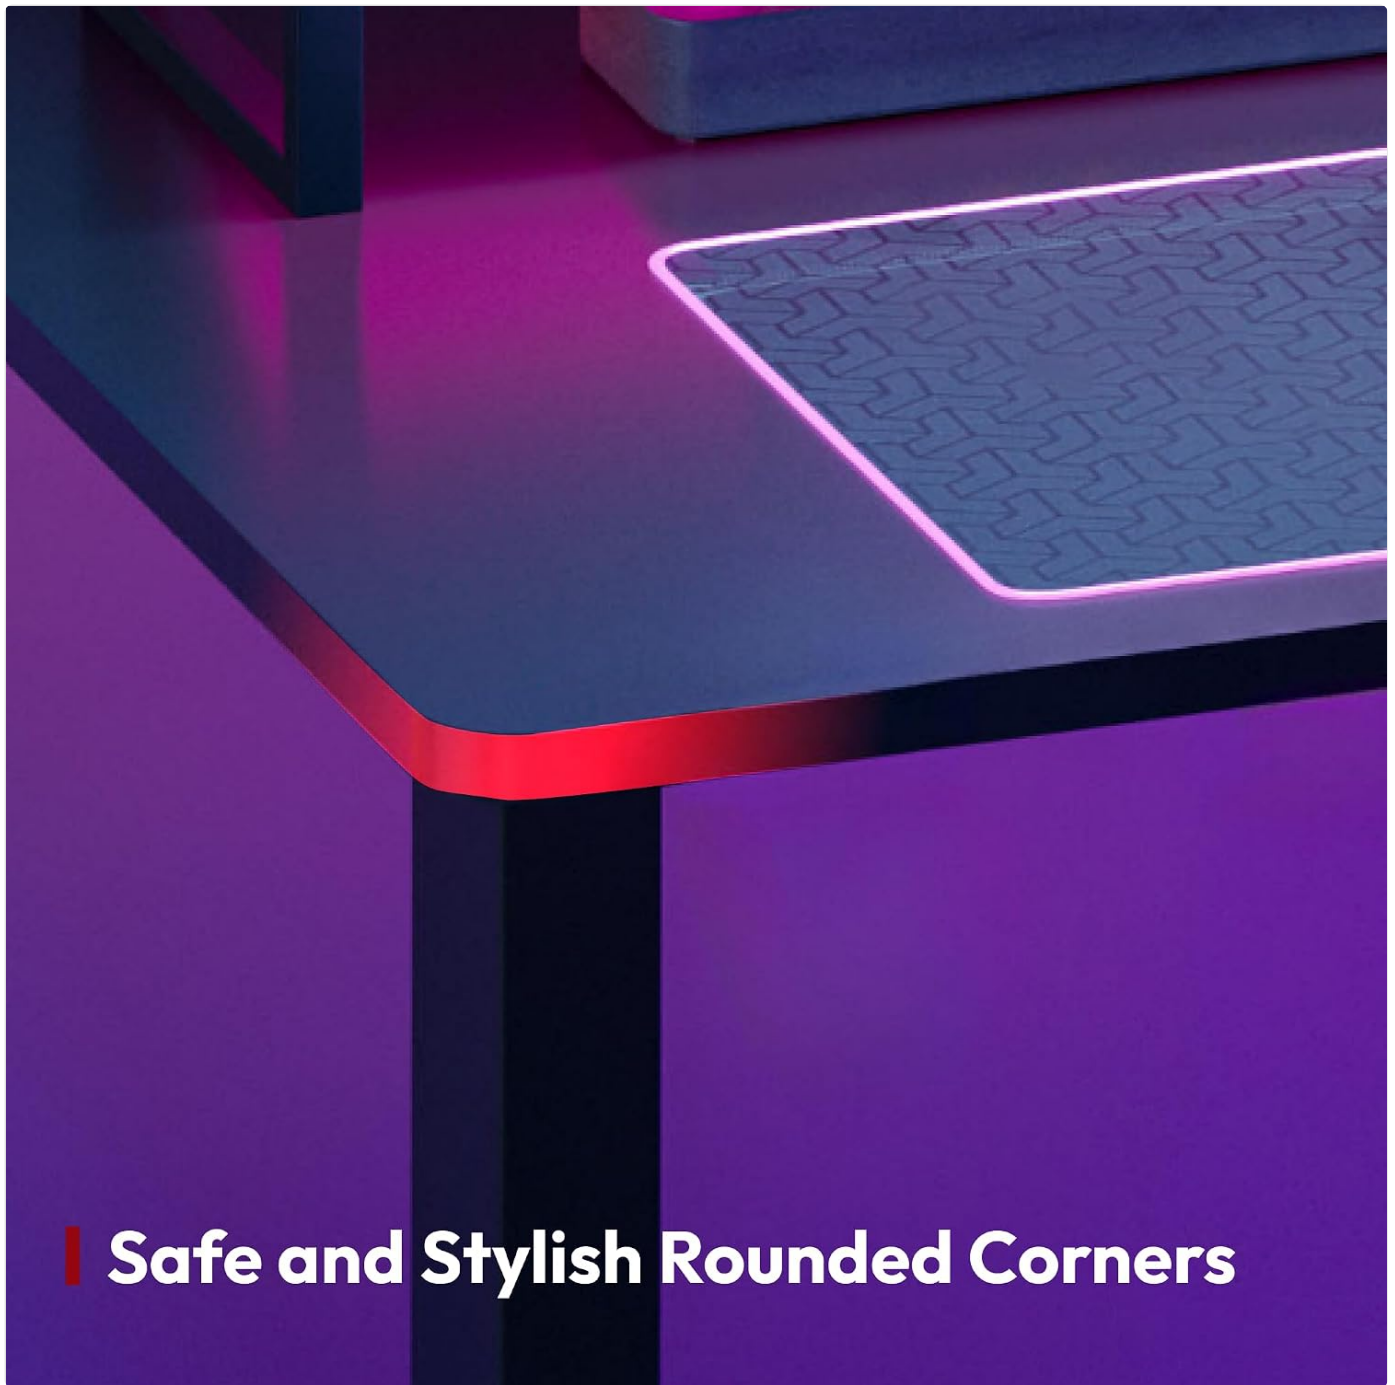


Image: A close-up view of the desk's rounded corner, illustrating its design for safety and aesthetics.

TROUBLESHOOTING

If you encounter issues with your SANODESK, please refer to the following common troubleshooting steps. For more complex problems, contact customer support.

- **Desk Not Moving:**
 - Check if the power cable is securely plugged into both the desk and a functional wall outlet.
 - Ensure no objects are obstructing the desk's movement path.
 - Try resetting the desk. This often involves unplugging the desk for 10-15 seconds, then plugging it back in. Some models may require holding down a specific button (refer to your assembly guide).
- **Uneven Movement:**

- Verify that the desk is placed on a level surface.
- Check for any loose fasteners on the frame or legs and tighten them if necessary.
- Ensure weight is evenly distributed on the desktop.

- **Error Codes on Display:**

- If an error code appears on the LED display, consult your detailed assembly manual for specific meanings and recommended solutions.
- Often, a simple power cycle (unplugging and replugging) or a reset procedure can resolve temporary errors.

- **Unusual Noise During Operation:**

- A slight motor hum is normal. If the noise is excessive, grinding, or unusual, check for loose components or obstructions.
- Ensure all cables are properly managed and not rubbing against moving parts.

WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or replacement parts, please refer to the warranty card included with your product or visit the official SANODESK website. Keep your purchase receipt as proof of purchase. You can visit the SANODESK store on Amazon for more products and information:[SANODESK Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question